

Hammers Kill Quick Release

If you have ever installed the M139 mine dispenser on your UH-60A or UH-60L helicopter, then you know that its launcher rack mounts don't always line up with the support panel mounts.

But don't touch that hammer! Hammered-in pins won't let you quickly release the mine dispenser in an emergency. You will even have trouble getting the pins out manually. Save yourself the trouble by correctly installing the pins. Here's how:

- * Apply DC-4 lubricant, NSN 6850-00-880-7616, or any other similar lubricant, to the inside of the pin holes.

- * Shift and lift the support panel until its mount holes match those on the launcher rack.

- * Insert each quick release pin all the way into the mount holes, then release it.



Never hammer pins

Keep this procedure handy until TM 9-1095-208-23-2&P is updated.

