

# DRAIN AWAY DAMAGE



If water is collecting on the floor of your Avenger turret, something is wrong. The Avenger is supposed to be water-tight.

The problem is probably a defective access panel gasket or canopy seal. Tell your repairman. He can check it out and replace the gasket or seal if necessary.

In the meantime, you should get rid of the water before it causes electrical problems or damage to the floor. Just remove the drain plug from the floor panel at the front left of the turret and let the water drain out. Be sure to put the plug back in when you're finished.

If the plug is missing or damaged, your repairman can replace it with NSN 5340-01-026-3251.

One other place to check for water is the fuel catch pan for the heater ventilator. If water collects there, it can get into the fuel tank and contaminate fuel. So drain the pan weekly or after it rains.

