



KEEP GUIDE ROLLERS LUBED

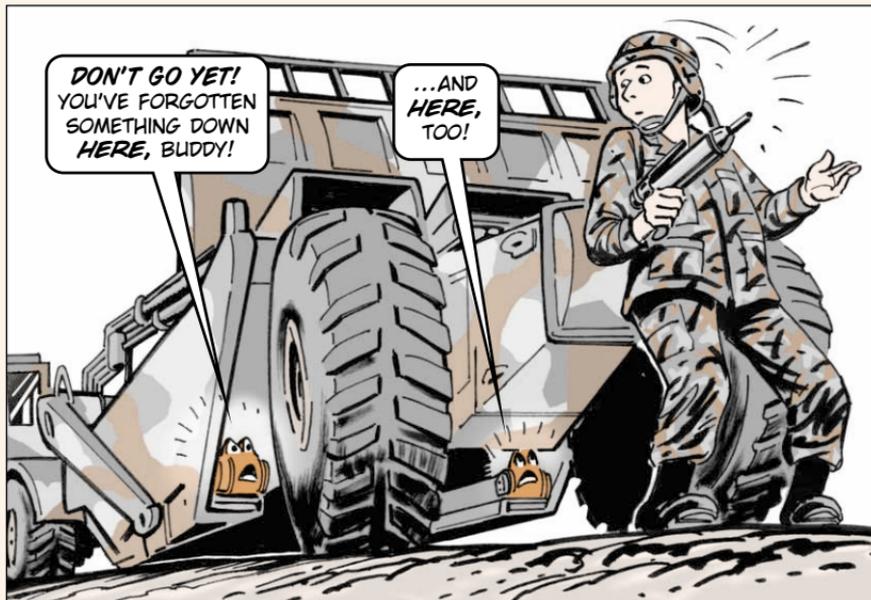

Two grease fittings that lube the left and right guide rollers on the scraper's bowl are often forgotten because they're under the bowl in the back of the vehicle.

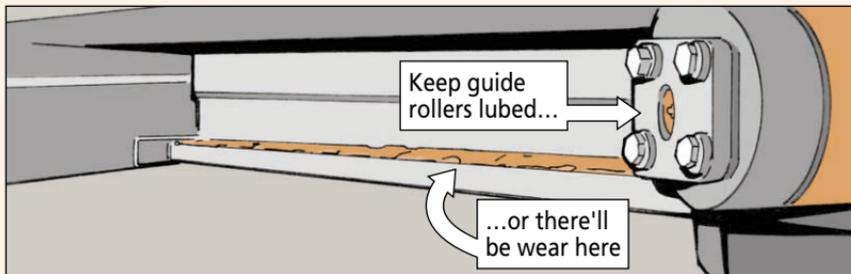

Each roller moves back and forth when the bowl is emptied. Without lube, the rollers lock up and drag along the roller ramp. If you see a groove or slide mark on the ramp, it means the roller isn't turning freely.

A roller that won't turn causes the other side of the bowl to drag. The end result is a lot of wear and tear—and possible damage—to the bowl and its ejector.

So don't let that happen to your scraper. During scheduled services, be sure to lube each roller's fitting.