


SEE...

Don't Lose Your Spare Tire

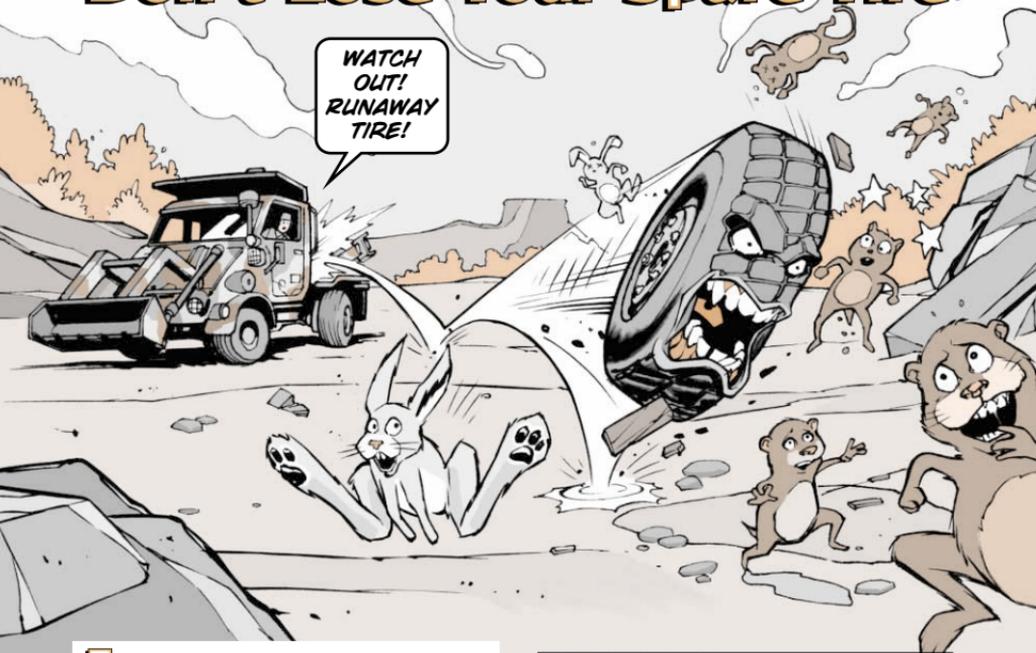

The small emplacement excavator's spare tire weighs 170 pounds. If it's not locked into its mount carrier, it becomes an unguided missile when the SEE takes a turn.

That bouncing 170 pounds can damage another vehicle, cause an accident, or kill someone.

So before operation, make sure the spare tire is held in place with the carrier mount's holder. You'll see the holder inside the spare tire's wheel, right behind the driver's side of the cab.

If the tire holder is missing, have your mechanic replace it with NSN 2590-01-242-6712. The tire lock is Item 5 in Fig 186 of TM 5-2420-224-24P.

