


# RELIEVE THE PRESSURE

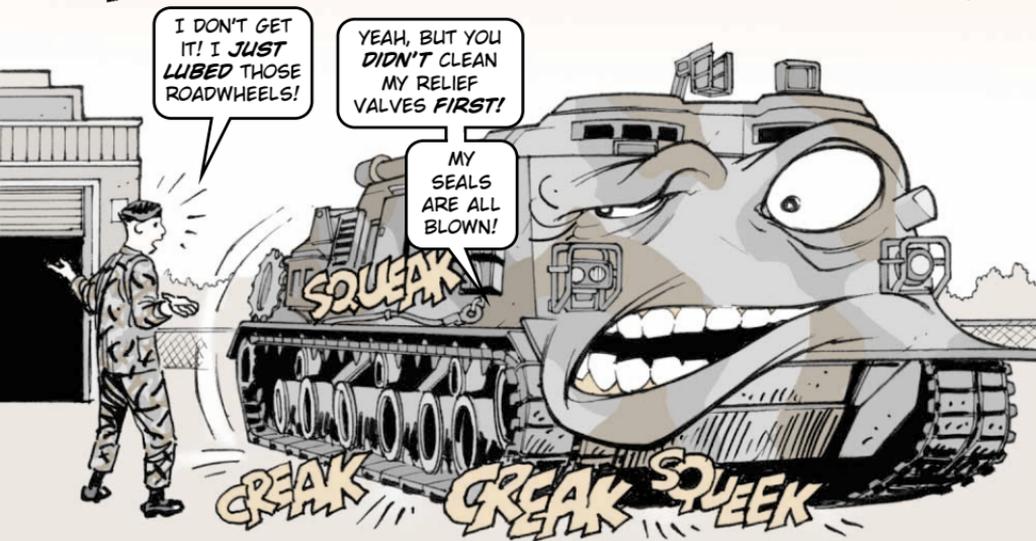

**M**ost people don't work well under a lot of pressure. The same holds true for the roadwheels on your M88A1 recovery vehicle, crewmen.

A roadwheel relief valve that's clogged with crud won't relieve pressure when you pump in new grease. The pressure grows until something gives—usually the hub seal.

When the seal goes, so does the lube. The result is burned-out bearings.

So before adding new grease, use a cloth to wipe away any dirt and mud from the relief valve. Then pull out on the valve stem.

If it slides out smoothly and pops back in when you release it, the valve's OK. If it doesn't, replace it with relief valve, NSN 4820-01-070-7670.

