



M1-Series Tanks...

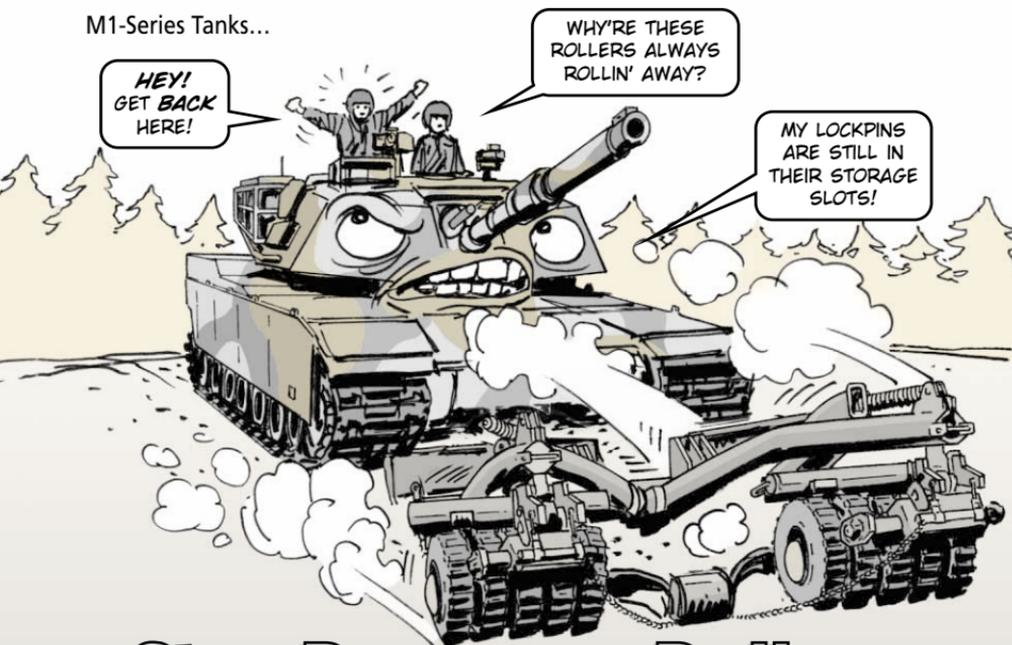

Stop Runaway Rollers

There are a whole lot of steps to follow when installing the mine clearing roller on your M1-series tank. One of the most important is securing the angle brackets with two lockpins, NSN 5315-00-628-4001.

The lockpins are stored in holes on top of the outboard mounting brackets. But if they stay there, the mine rollers can slip loose when the tank is moving.

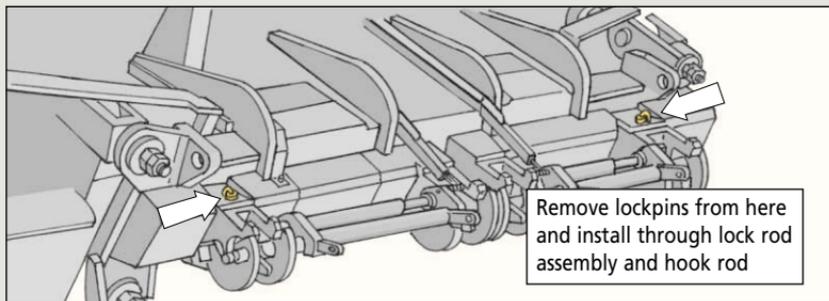

So remember to remove the lockpins and slide them through the lock rod assembly and hook rod. That'll keep the rollers in place.

The only time the lockpins should be in their storage slots is when the roller is being used for a breaching or mine clearing operation.