


# GOT A LEG TO STAND ON?

WITHOUT  
A LITTLE  
LATCH  
LUBE...


...I HAVEN'T  
GOT A LEG TO  
STAND ON!

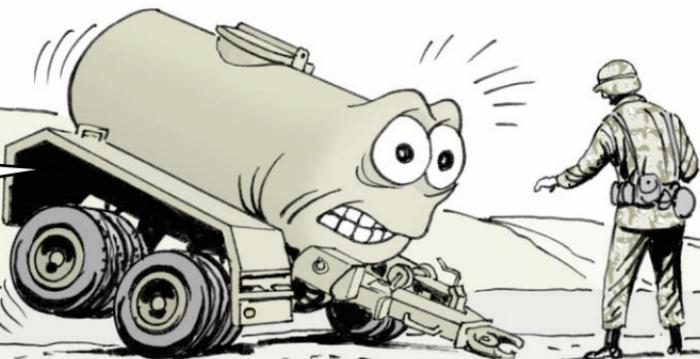

You can't unhook your M1112 water trailer from the towing truck if the landing leg won't deploy. And the landing leg won't deploy if you don't take good care of the release latch.

The release latch has no lube points, so it's usually ignored when it's time to lube the trailer. But then the latch rusts in place and won't move.

Give your trailer a leg to stand on by putting a few drops of OE/HDO oil on the latch's release pins. Then, raise and lower the latch a few times to work in the oil.

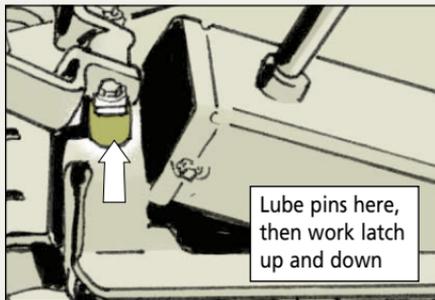

LUBE THE LATCH  
AT LEAST EVERY 6  
MONTHS AND THEN  
AGAIN FOLLOWING  
A HEAVY RAIN OR  
AFTER WASHING  
THE TRAILER.

AHHH...  
THAT'S  
BETTER!

