

Getting Good Connections

THE AN/URM-213 WATT-METER IS NOW WHAT IS KNOWN AS A "NON-SUPPORTED" ITEM.

THAT MEANS IF YOU'RE USING THE METER AND YOU HAVE A BROKEN CABLE, YOU MUST ORDER THE PIECES AND MAKE THE CABLE YOURSELF.



HERE'S A CHART OF THE EIGHT CONNECTORS YOU CAN USE ON THE SPECIALTY CABLES. THE CABLE RUNS FROM THE N-PLUG, NSN 5935-00-660-4296, TO ONE OF THESE CONNECTORS...

| Component | NSN |
|-----------|------------------|
| BNC plug | 5935-01-043-0629 |
| BNC plug | 5935-00-552-7920 |
| TNC plug | 5935-00-136-6912 |
| TNC jack | 5935-00-430-4108 |
| SMA plug | 5935-01-214-9569 |
| SMA jack | 5935-01-419-4545 |
| TPS plug | 5935-00-995-1665 |
| TPS jack | 5935-01-098-0661 |

FOR BNC CABLES, HERE'S WHAT YOU NEED...

| Component | NSN |
|--------------------------|------------------|
| BNC-male to N-female | 5935-00-739-2242 |
| BNC-male to TNC-female | 5935-01-274-9106 |
| BNC-male to TPS-female | 5935-01-051-0673 |
| HN-female to N-male | 5935-00-702-4846 |
| N-female to BNC-male | 5935-01-095-6418 |
| TNC-female to TNC-female | 5935-01-282-7196 |
| BNC-female to N-male | 5935-00-259-0205 |
| BNC-female to TPS-male | 5935-00-491-6302 |
| BNC-female to HN-male | 5935-00-149-3535 |
| BNC-male to BNC-male | 5935-00-894-2451 |
| BNC-female to BNC-female | 5935-01-370-3940 |
| N-male to N-male | 5935-01-057-7227 |
| N-female to N-female | 5935-00-643-9875 |