


MOVE TABLE TO STOP HARNESS DAMAGE

THE M1068 COMMAND POST CARRIER'S WORKSTATION TABLE DAMAGES THE WIRING HARNESS ON THE TENT INTERFACE PANEL WHEN THE TABLE'S IN THE DOWN POSITION.


SO YOU NEED TO MOVE THAT TABLE. HERE'S HOW...



1. With the table in the down position, remove the tension spring.

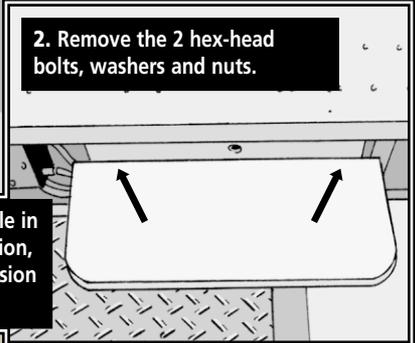


3. Remove the table from the workstation.

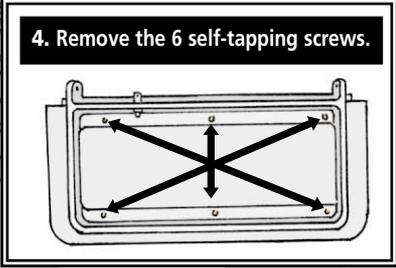


5. Move the table top 1 inch to the right on the mounting bracket.


The table should be flush with the mounting bracket.

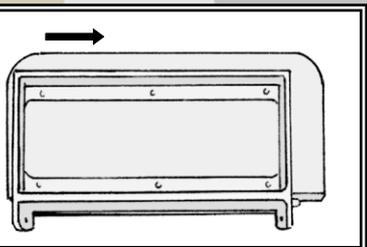


6. Mark and tap the new location for the 6 self-tapping screws.

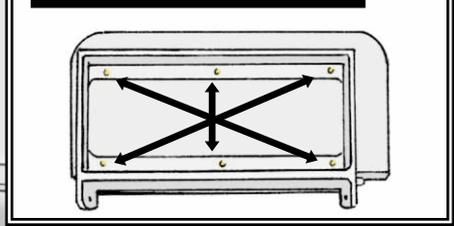

7. Secure the table to the mounting bracket.

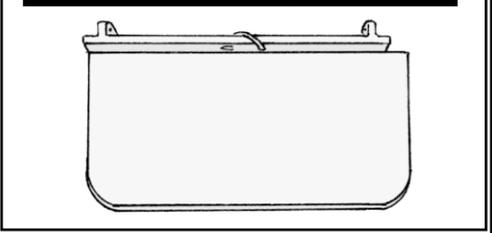

8. Re-mount the table to the workstation.

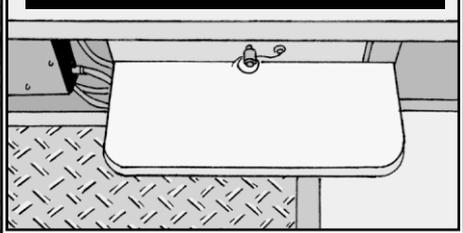

9. Install the 2 hex-head bolts, washers, nuts and tension spring.