


Engine Oil Pressure

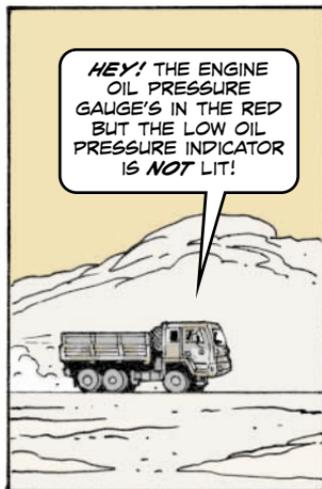

Drivers, the FMTV's normal engine oil pressure is between 15-80 PSI. In addition to an oil pressure gauge, your truck also has an oil pressure warning light.

Do the following if the gauge or the light should indicate problems:

- If the engine low oil pressure indicator is lit and the gauge reads above 15 PSI, continue the mission. When the mission's over, tell your mechanic.
- If the engine oil pressure gauge reads in the red zone and the low oil pressure indicator is lit, shut off the engine and call in your mechanic.
- If the engine oil pressure gauge reads in the red zone and the engine low oil pressure indicator is not lit, shut off the engine and do the following:

1) Restart the engine. The light should come on briefly, but then go out. Continue the mission.

2) If the light does not come on, or comes on and stays on, turn off the engine and call in your mechanic.

