



M16A4 Rifle...

# HOW THE M16A4 IS DIFFERENT

THERE ARE DIFFERENCES WITH YOUR M16A4 AND IT'S IMPORTANT TO KNOW WHAT THEY ARE.



The 300-meter mark on the rear sight is 6/3, not 8/3 like it is for the M16A2. And after you reach the mechanical zero when you zero the sights, you move the elevation knob clockwise up two clicks past the 300-meter setting, not one like you did with the M16A2. That's Step 4 on Page 0011 00-7 in TM 9-1005-319-10.

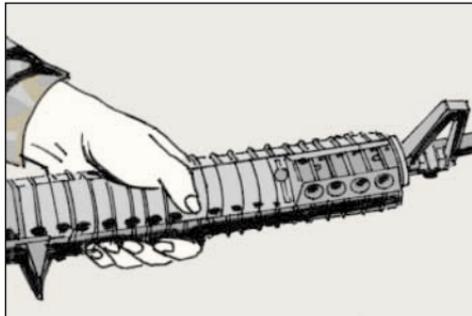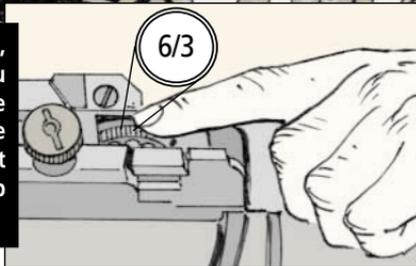

When you mount the M5 adapter rail onto your M16A4 to replace the standard handguards, use the provided rail covers to protect the bare rails from rough treatment and your hands from the hot barrel. The rail covers can be arranged in any manner to cover exposed metal areas that your optics or other accessories don't cover.

Leave the screw at the top rear part of the adapter rail alone. It's a self-locking screw that keeps the mounting rail in place. Once it's removed, it's no longer self-locking and it must be replaced.

