


**GIVE  
BRAKES  
A  
BREAK**



**O**perators, high daytime temps and cool nights in the Iraqi desert cause condensation to form in your ACE's air brake system.

To keep the earthmover's brakes braking, drain the air tank daily. Hold the valve open until air stops escaping. That keeps moisture from stopping your ACE in its tracks.

Press valve to drain air tank

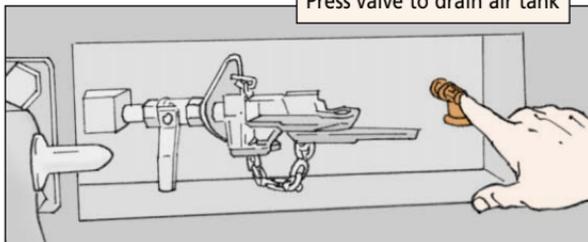

# Step Away from Relay

**A** step in the wrong spot can mean disaster for your armored combat earthmover.

What gives? Some well-meaning mechanic pulls the vehicle's rear access panels for maintenance and uses the master relay's protective box as a step. All that weight breaks the box's mounting bracket, shorting the master relay. The end result is your earthmover is dead in its tracks!



**KEEP YOUR BOOT OFF THE RELAY'S PROTECTIVE BOX!**

