


SEE...

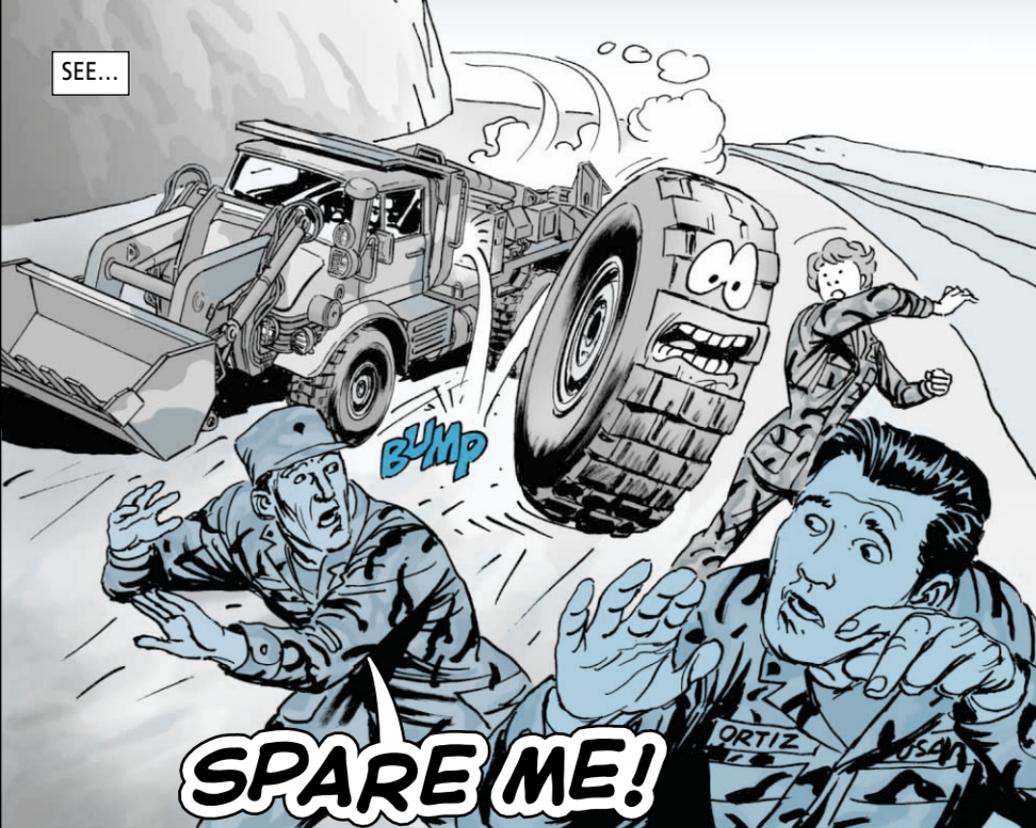

Before you hop in the cab of your small emplacement excavator, take a look at the spare tire mount carrier. Make sure the tire (wheel assembly) is secured in place.

A loose tire will roll out of the carrier when the vehicle is moving and takes a turn.

Weighing in at 170 pounds, the tire could damage another vehicle, cause an accident, or worse yet . . . kill someone.

So before operations, make sure the vehicle's spare tire is held in place with the carrier mount's tire holder. You'll see the holder inside the spare tire's wheel assembly, right behind the driver's side of the cab.

Replace a missing holder with NSN 2590-01-242-6712. It's shown as Item 5 in Fig 186 of TM 5-2420-224-24P-1.

