

M978 HEMTT Tanker...

**SMELL  
FUEL?**

Operators, just remember that *“What goes on, must go off.”*

It’s OK to use the free flow (gravity feed) valve for bulk fuel transfer from your fuel tanker. But for your sake, remember to turn the valve off when you’re finished.

Close gravity feed valve  
after fuel transfer

Leave the valve on and you’ll end up spilling gallons of fuel on the road when you head up an incline. When that happens, you’ll soon make the acquaintance of your environmental folks. And that’s one meeting you want to avoid!

## M1101/M1102 Mounting Bracket

Use NSN 5340-01-516-8875 to get the mounting bracket for the landing leg on these 2-wheel cargo trailers for the HMMWVs. Make a note until this NSN is added to Fig 33 of TM 9-2330-392-14&P.

## FMTV - Buyer Beware

Vendors sell products directly to Army posts, camps and stations. No news there, right? Problem is, buying products that way, off line, bypasses the vehicle’s program manager. That means you operators and mechanics could be left with an unsafe and unapproved product, not to mention lack of logistical support. So play it safe and order items only from the vehicle’s technical manuals.