


TIRE CAGES AGE!

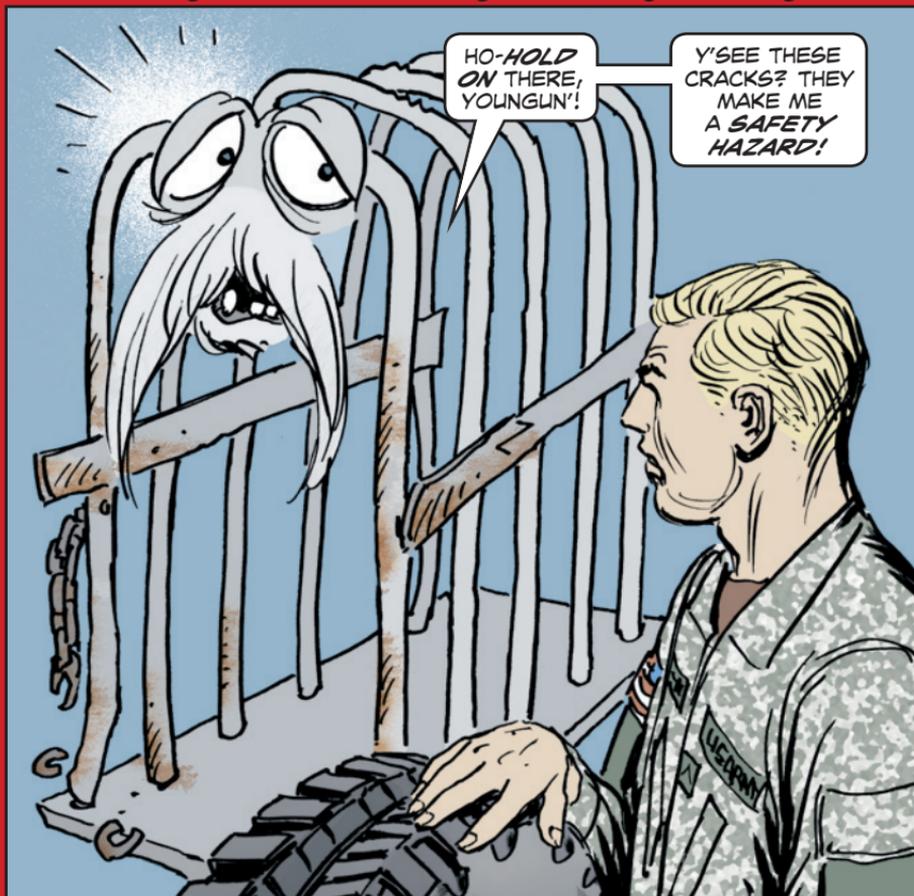

Replace tire cages when you find:

- cracked or bent components
- pitting from corrosion
- cracked welds

For more tire and cage info: TM 9-2610-200-14