


Watch Your Step!

I'VE GOTTA GET ALL THIS GEAR STOWED ON TOP OF YOUR CAB.

YEAH, WELL, YOU'D BETTER KEEP THOSE BIG FEET OFF MY FUEL/WATER SEPARATOR!

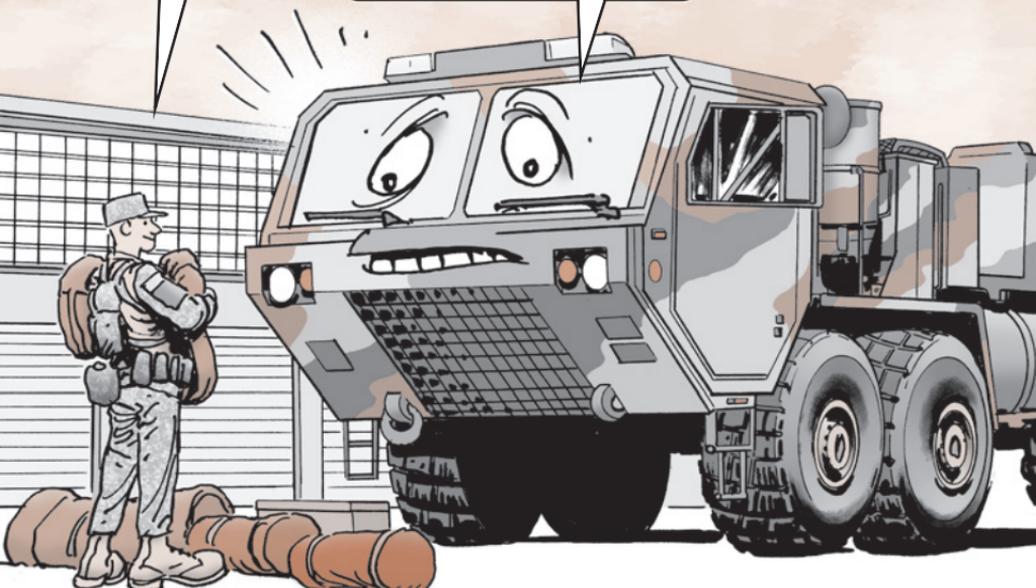

Operators, your HEMTT would appreciate a little less fancy footwork when you climb up on the cab.

It seems quite a few of you are using the fuel/water separator as a step to get up top. Unfortunately, that often leads to a cracked or warped lid on the fuel/water separator.

That lets air into the fuel/water separator. Since the separator is under suction, fuel could eventually stop flowing to the engine.

So, from now on, consider the fuel/water separator to be a “no step zone.”

