


# LOOSEN THE NUT TO FILL YOUR CUP



WHEN YOU'RE THIRSTY, WATER THAT COMES OUT OF THE TAP IN DRIPS JUST ISN'T FAST ENOUGH.



A STEADY STREAM IS WHAT YOU NEED, ESPECIALLY AFTER YOU'VE BEEN OUT IN THE HOT SUN.

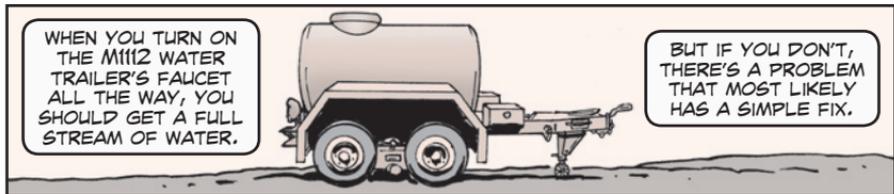


WHEN YOU TURN ON THE M1112 WATER TRAILER'S FAUCET ALL THE WAY, YOU SHOULD GET A FULL STREAM OF WATER.

BUT IF YOU DON'T, THERE'S A PROBLEM THAT MOST LIKELY HAS A SIMPLE FIX.



FIRST, MAKE SURE THE WATER TRAILER IS FILLED WITH WATER. IF IT ISN'T, THEN RE-FILL THE TANK.

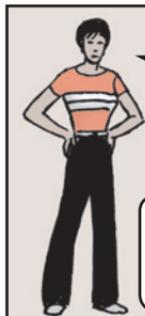

IF THE WATER TRAILER IS FULL, LOOSEN THE SMALL NUT ON THE MANHOLE COVER. A TIGHTENED NUT WON'T LET AIR INTO THE TANK SO A VACUUM FORMS.

THAT CAUSES THE WATER TO COME OUT AS A TRICKLE RATHER THAN A STREAM. SO LOOSEN THAT NUT, THEN FILL YOUR CUP!

Loosening nut on manhole cover releases vacuum so more water flows out

