


SEE...

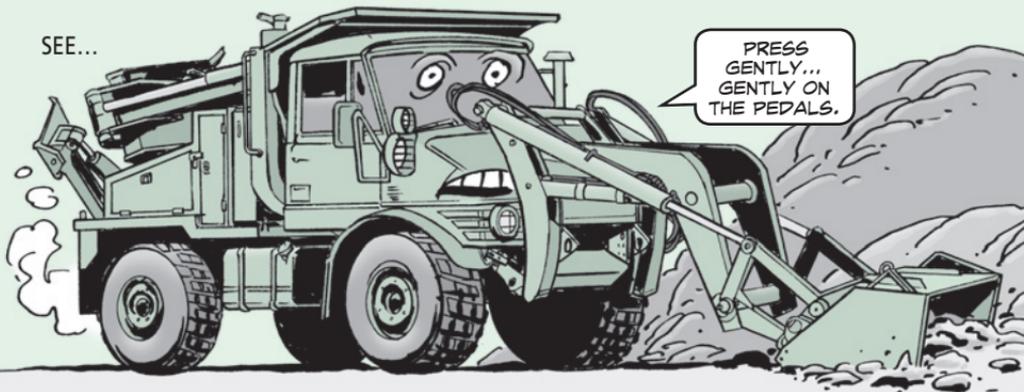

## WHERE THE BOOT LIES

**A**lmost sounds like the title of a gaudy daytime soap opera . . . but hardly.

If your left boot rests on the SEE's clutch while driving, every bump engages and disengages the vehicle's clutch—causing it to wear out! Soon your excavator is going nowhere!

So, keep your boot off the clutch pedal while driving or operating the vehicle.



## STOW IN THE KNOW

**E**asy does it when you stow the excavator's outriggers and backhoe. Slow down and use some TLC when you retract the vehicle's outriggers before leaving the worksite.

Banging the vehicle's cylinder rod with the outrigger causes damage—like scuffs and dents in the cylinder rod. Damage causes the rod's seals to leak.

Play it safe. Stow the outrigger at least three inches from the backhoe boom.

