


Don't Forget Cocking Lever


HEY, THEY'VE GOT THAT WRONG ON REMOVING MY SEAR SPRING.

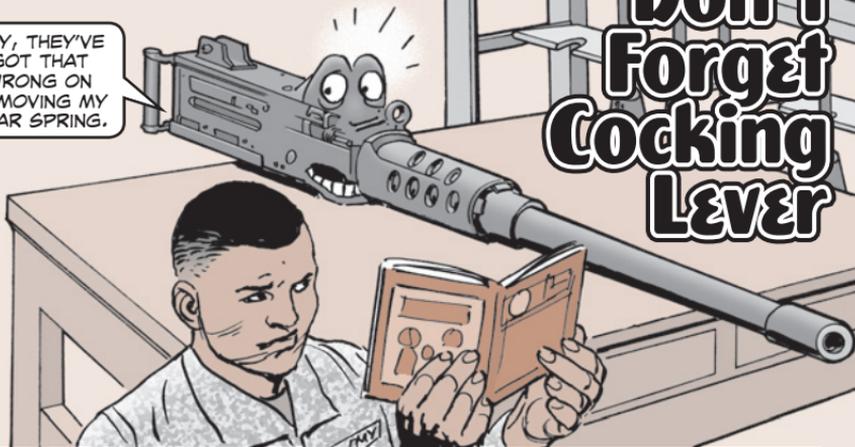

Dear Editor,

I noticed on Page 17 in PS 656 (July 07) that your article on replacing the M2 machine gun sear spring said to first depress the sear and remove the sear slide.

That is really not correct. First you need to remove the cocking lever retaining pin, the cocking lever and the accelerator stoplock. Then you can remove the sear, sear slide, and sear spring.

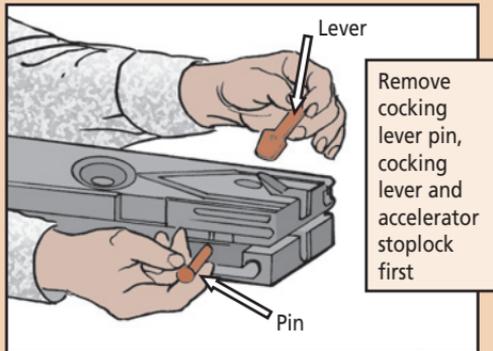

TACOM Logistics Assistance Representative
Ft Riley, KS

*Editor's note: Good point,
Thanks for the correction.*

Storing M1 and M14 Rifles

Dear Half-Mast,

What rack can we use to store M1 or M14 rifles? The M12 rack won't work for them.

L.H.

Dear Mr. L.H.,

Use the old M11 rack, NSN 1095-00-897-8755. It can securely hold M1 or M14 rifles.

Half-Mast