

YOU CAN'T WRITE ME A TICKET FOR NOT WEARING A SEATBELT!



I CAN AND I DID!

SEATBELT CHECK

Check the seatbelt to make sure its buckle and clasp work. If the seatbelt is frayed, damaged or does not fasten, adjust, retract or operate, the vehicle is non-mission capable.


So, while sitting in the driver's seat with the seat in its highest position, pull and hold the seat's height adjustment lever. If the seat does not drop to its lowest position, or the adjustment lock is broken or missing, the vehicle is non-mission capable.

Remember, these checks are necessary! If not done, severe injury or death could happen if the earthmover rolls over.

OPERATORS, DO THE FOLLOWING CHECKS *BEFORE* EARTHMOVER OPERATIONS.



Do buckle and clasp work?

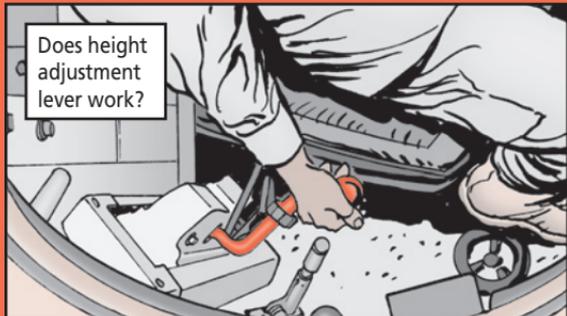

Does height adjustment lever work?