


# CAB AIR FLOW

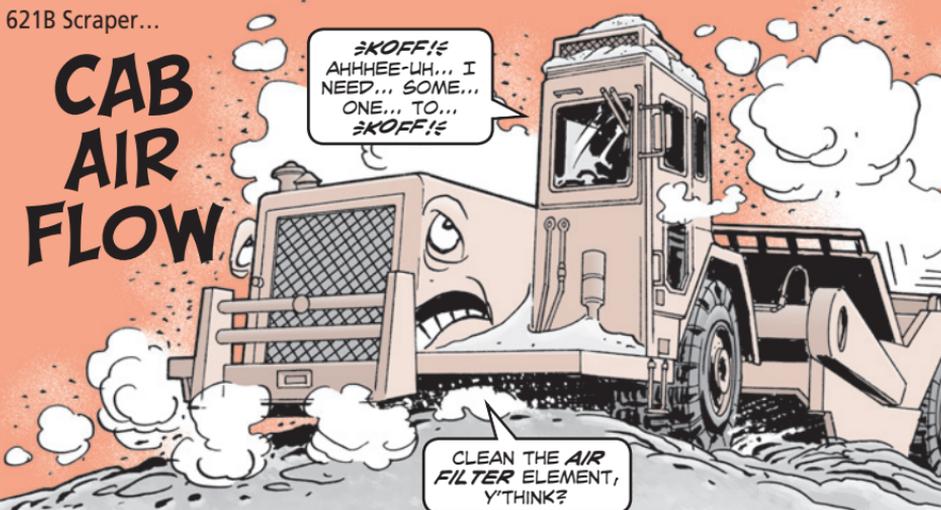


*SKOFF!#*  
AHHEE-UH... I  
NEED... SOME...  
ONE... TO...  
*SKOFF!#*

CLEAN THE AIR  
FILTER ELEMENT,  
Y'THINK?

**A** good cleaning seems to go by the wayside when it comes to the filter element for the 621B scrapper cab's air system. That's because it's located on top of the cab roof.

The filter element is important because it keeps clean air circulating inside the scrapper's cab, no matter how dusty the work site is.

So before you clean the element with low-pressure air (30 psi or less), check the air inlets for leaves, sand buildup, and ice or snow.

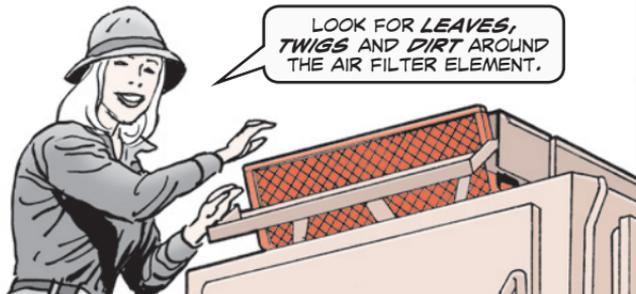

Before the day's run in dusty areas, remove the element and tap it with your hand to get rid of trapped dirt or sand. Do not bang it against the cab! You'll bend its sealing edge or crush the filtering material.

