


M68 Reflex Sight...

# NO CLICK, NO GO

STOP  
TURNING  
MY KNOB  
ALREADY.

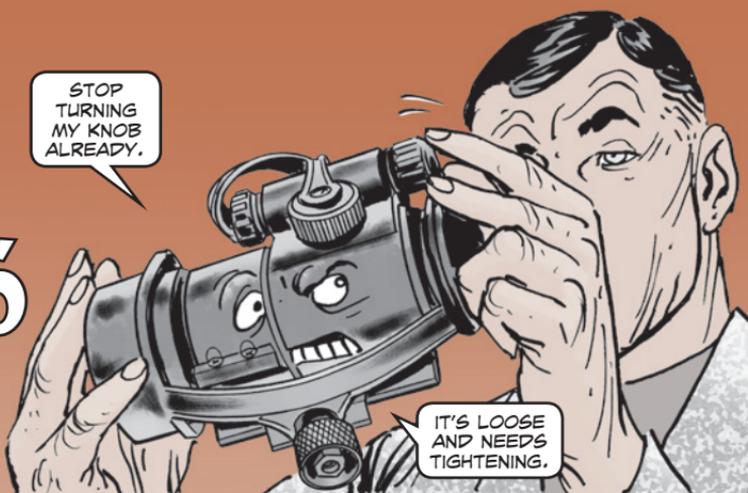

IT'S LOOSE  
AND NEEDS  
TIGHTENING.




IF YOU HAVE TO  
TURN AND TURN  
THE ON/OFF  
KNOB ON YOUR  
M68 REFLEX  
SIGHT TO TURN  
IT OFF OR ON,  
YOU'VE GOT A  
LOOSE KNOB.

ALL THAT  
TURNING  
WEARS OUT  
THE SWITCH!

THEN YOU  
CAN'T TURN  
THE M68  
OFF OR ON.




DURING PMCS,  
MAKE SURE  
THE KNOB IS  
FLUSH AGAINST  
THE HOUSING  
AND THAT IT  
CLICKS WHEN  
YOU TURN IT.

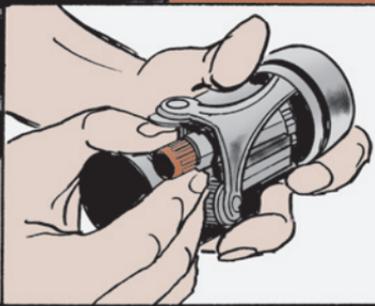

If knob  
isn't  
flush or  
doesn't  
click  
when  
you turn  
it, it's  
loose

TELL YOUR  
ARMORER.

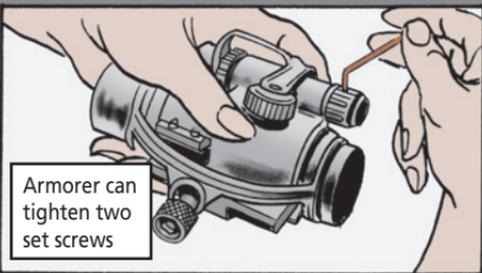

Armorer can  
tighten two  
set screws