


HYEX...

EXPANSION TANK MARKUP

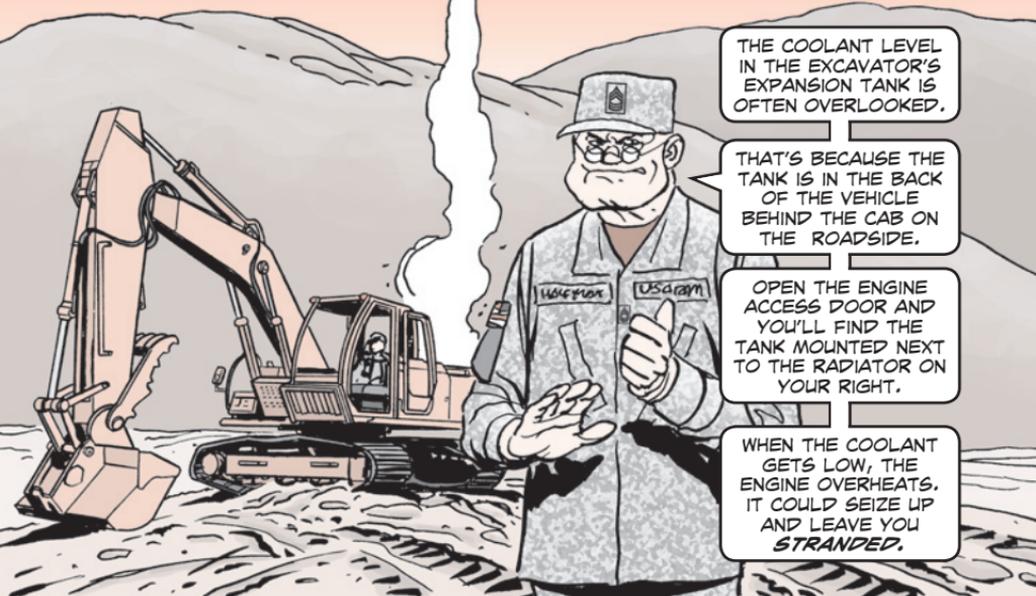


THE COOLANT LEVEL IN THE EXCAVATOR'S EXPANSION TANK IS OFTEN OVERLOOKED.

THAT'S BECAUSE THE TANK IS IN THE BACK OF THE VEHICLE BEHIND THE CAB ON THE ROADSIDE.


OPEN THE ENGINE ACCESS DOOR AND YOU'LL FIND THE TANK MOUNTED NEXT TO THE RADIATOR ON YOUR RIGHT.

WHEN THE COOLANT GETS LOW, THE ENGINE OVERHEATS. IT COULD SEIZE UP AND LEAVE YOU *STRANDED*.

Your -10 TM tells you to keep the coolant level between the **LOW** and **FULL** marks. The marks are located on the area of the tank that faces inward toward the access area, so they're a little hard to see.

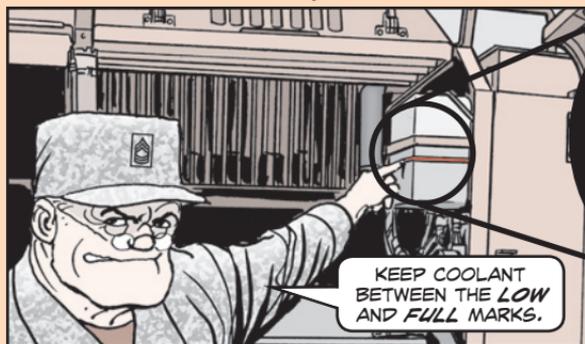

KEEP COOLANT BETWEEN THE **LOW** AND **FULL** MARKS.

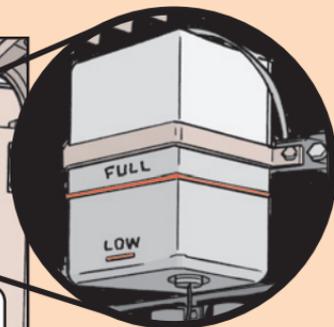

Do your excavator's cooling system a little favor. Mark the **LOW** and **FULL** marks with a permanent marker. Extend the marks so the levels are seen on the side of the tank that faces out towards you.

Now there's no guess work. Just add coolant when the coolant level gets below the **LOW** mark.