


CONTENTS UNDER PRESSURE

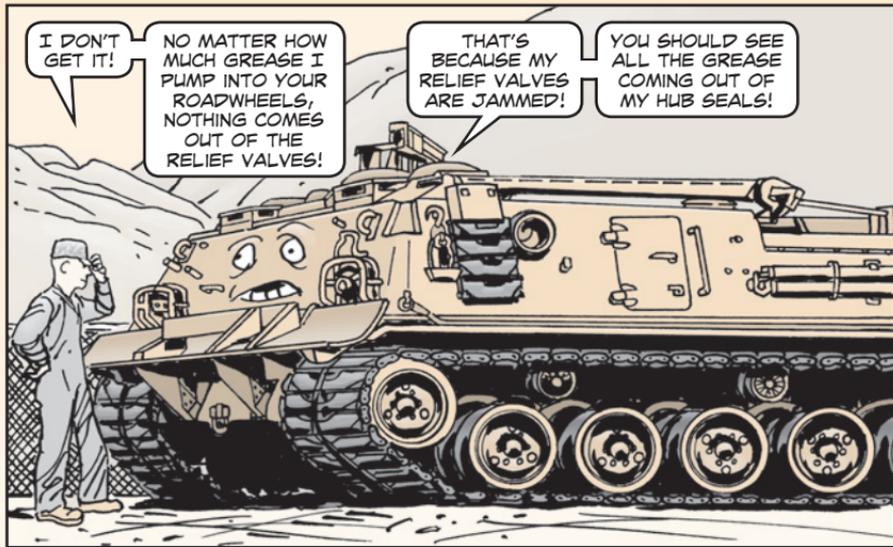

A roadwheel relief valve that's clogged with dirt and sand won't relieve pressure when you pump in new grease. The pressure grows until something gives—usually the hub seal.

When the seal goes, so does the lube. The result is burned-out bearings.

So before adding new grease, use a cloth to wipe away any dirt and sand from the relief valve. Then pull out the valve plunger.

If it slides out smoothly and pops back in when you release it, the valve's OK. If it doesn't, replace it with relief valve, NSN 4820-01-070-7670.

