


ELSE...

FOR WANT OF BATTERIES

MY MP3
PLAYER
JUST QUIT
ON ME!

DON'T EVEN THINK
ABOUT USING THE
BATTERIES FROM
THE DISTRESS
MARKER LIGHT.

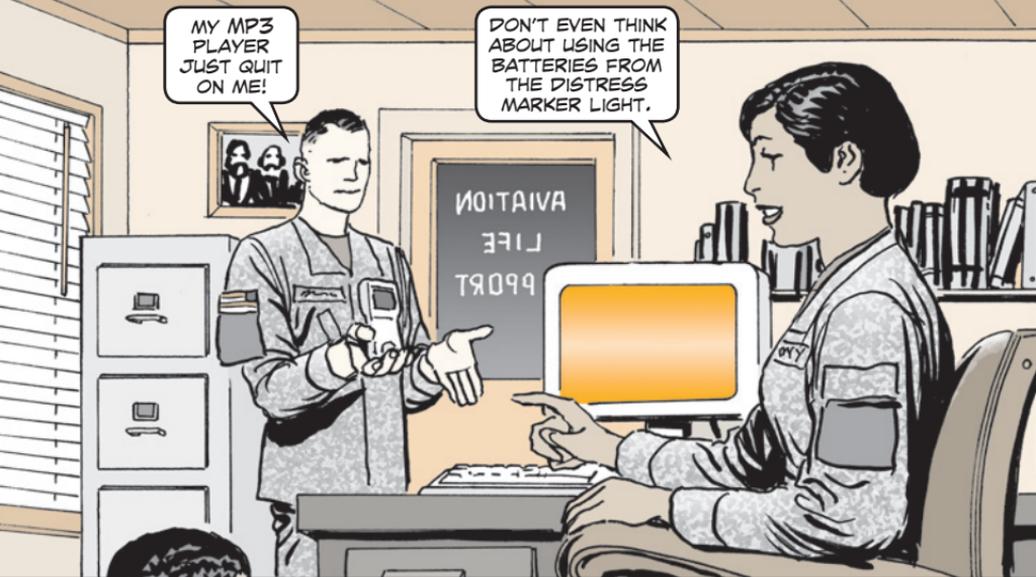

AVIATORS, BATTERIES FOR
YOUR DISTRESS MARKER LIGHT,
NSN 6230-01-411-8535, ARE
INDISPENSABLE IN A FIELD
ENVIRONMENT.

So if you're 'borrowing' the batteries out of the marker and using them on personal equipment, you're putting your life in harm's way when a real emergency arises.

Using the marker batteries in other equipment drains them. When you put them back into the marker light, there might not be enough juice left to save you in an emergency. And having a marker light with no batteries means you're just carrying some useless weight!

So take some extra batteries with you for all that other electronic equipment and leave the distress marker light batteries where they belong.

Don't
borrow
distress
marker
light
batteries
for other
things

