

# CHOOSE THE SETTINGS WISELY



The heater has two settings, HIGH (60,000 BTUs) and LOW (30,000 BTUs). But too many crewmen seem fixated on the HIGH setting. Whether it's mildly cool or bone-chilling cold, the HIGH setting is what they go for.

If it's cold enough to need the heater, but not below freezing, set the heater to LOW. That will provide ample heat. If you constantly run the heater on HIGH, especially when it's not all that cold outside, you'll burn out the wick. Then nobody's getting warm.

