


Don't Snooze on Hatch Lube

HEY, YOU...
YEAH, YOU!
I COULD
REALLY USE
SOME LUBE
HERE!

CREEEAK

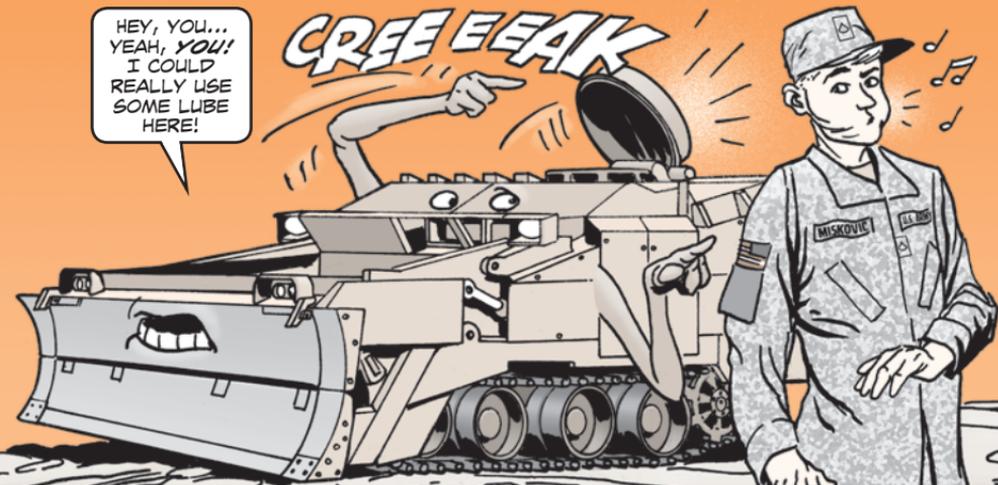


Operators, a lack of lube can cause the earthmover's hatch cover to come crashing down on your head!

Without lube, condensation gets to the hatch hinge assembly's internal spring (cam) causing it to rust. Eventually, enough rust weakens the spring until it breaks.

There are two grease fittings that lube the assembly's internal spring. They're shown in Note 16 of LO 5-2350-262-12. Give each fitting four or five pumps of GMD (grease, molybdenum disulfide) quarterly.

GMD, MIL-G-21164, is missing from the Expendable Supplies and Materials List in TM 5-2350-262-10.

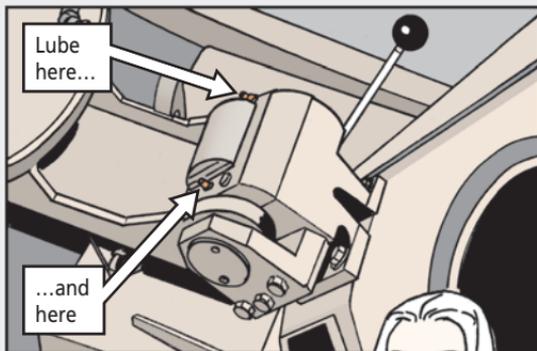

Size	NSN 9150-00-
14-oz cartridges	935-4018
1.75-lb can	754-2595
6.5-lb can	223-4004
35-lb can	965-2003

HERE'S WHAT'S
AVAILABLE...