


☹KOFF!☹  
AHHHEE-UH... I  
NEED... SOME...  
ONE... TO...  
☹KOFF!☹

...CLEAN...  
THE... AIR...  
FILTER...  
ELEMENT...  
☹KOFF!☹

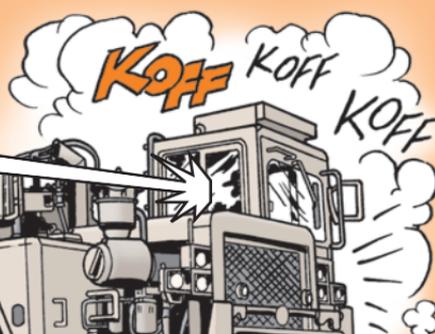

# Cab Air Flow

**B**ecause filter elements for the Scrapper cab's air system are located on the roof they sometimes don't get regular cleaning.

The filtering elements can keep you supplied with clean air, regardless of how dusty work sites can be. But, if you want clean air circulating in your cab, you've got to keep the filter elements clean.

Before you start using low-pressure air (30 psi or less) to clean the elements, make sure that leaves, dirt, ice or snow aren't blocking the air inlets.

To help keep elements clean, start your day's run by removing the elements and tapping them with your hand to loosen and dislodge trapped dirt.

Don't bang elements against the cab or other hard surfaces! That would bend sealing edges or crush its filtering material. Then you'd really be hitting the dusty trail.

