


Cab Air Flow

≠KOFF!≠
 AHHEEH-UH...
 I... UHH...
 FORGOT...
 TO...
 ≠KOFF!≠

CLEAN...
 THE... AIR...
 FILTER...
 ELEMENT...
 ≠KOFF!≠

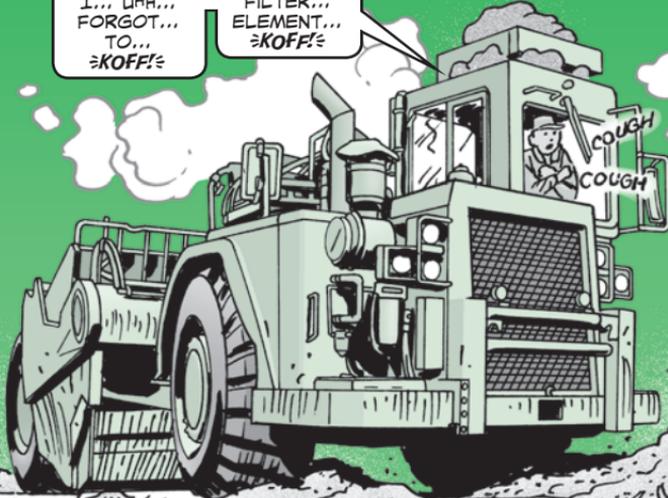

Because filter elements for the Scrapper cab's air system are located on the roof, sometimes they don't get regular cleaning.

The filtering elements keep you supplied with clean air, regardless of how dusty work sites are. But you've got to keep the filter elements clean.

Before you start using low-pressure air (30 psi or less) to clean the elements, make sure that leaves, dirt, ice or snow aren't blocking the air inlets.

To help keep elements clean, start your day's run by removing the elements and tapping them with your hand to loosen and dislodge trapped dirt.

Don't bang elements against the cab or other hard surfaces! That bends sealing edges and crushes the filtering material. Replace a damaged element with NSN 2540-01-062-7166.

