


# MAINTAINING MAINTENANCE STAND



The low-level maintenance platform, NSN 1730-00-269-8283, is not supported and does not have a TM for maintenance.

There isn't much maintenance on the stand anyway, but there are inspection criteria and replacement parts you can use to keep the stand in good shape.

Maintenance stand has no parts TM

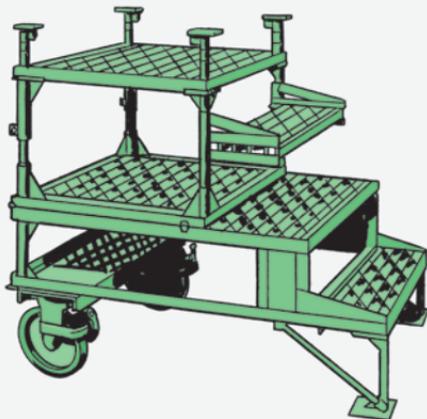

The only inspection you need to do is a visual one. Also, make a note of the load rate: open 750 pounds.

Here are the parts you can order:

- **Rigid caster**, NSN 5340-01-340-8799
- **Quick release pin**, NSN 5315-00-935-8804
- **Latch assembly-clamping catch**, NSN 5340-00-787-3209. This comes as an assembly. To order separately, use NSN 5340-01-295-4896 for the catch strike and order NSN 5340-00-821-0304 for the clamping catch.
- **Clamping latch catch spring loaded**, NSN 5340-00-860-3862. This is a nonstandard item.

