

HYEX...


COOLANT TANK NEEDS A MARKUP

TOO MANY OPERATORS ARE **OVERLOOKING** THE COOLANT LEVEL IN THEIR HYEX EXCAVATOR'S EXPANSION TANK.

IF THE LEVEL IS **LOW**, THE ENGINE OVERHEATS AND COULD SEIZE UP. THAT'LL LEAVE YOU **STRANDED** AT THE WORK SITE.

So eyeball the coolant level in the expansion tank. You'll find the tank behind the cab on the left side of the vehicle. Open the engine access door and you'll see the tank mounted next to the radiator on your right.

The coolant level should be between the **LOW** and **FULL** marks on the tank. They're a little hard to see because the marks are located on the part of the tank that faces inward toward the access area.

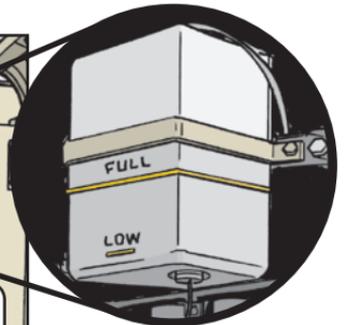

It's a good idea to mark the **LOW** and **FULL** marks with a permanent marker. Extend the marks so the levels can be seen on the side of the tank that faces out towards you. That does away with the guess work.

Just add coolant when the coolant level gets below the **LOW** mark.