


HEMTT...

Multiple Use Adapter Usage

HOOAH!
I GET TO TOW WITH A MUA!

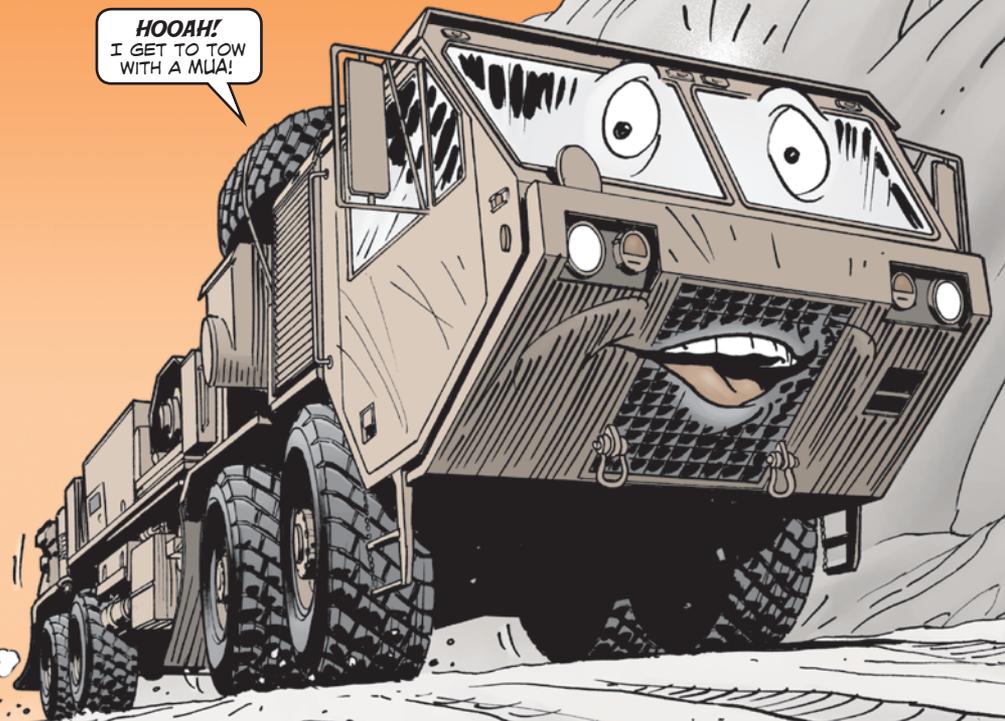


Dear Half-Mast,
I'm confused about the use of multiple use adapters (MUAs) with HEMTT wreckers. Can you break it down for me?
SPC J.P.

Dear Specialist J.P.,
Can do.
M984A4 wreckers and some M984A2 wreckers come with multiple use adapters (MUAs). The MUA adapters, spacers and pins are included in your wrecker's components of end item (COEI). Order NSN 2590-01-569-5574 if you need a MUA kit that includes the adapters, spacers and pins.

(1) Illustration Number	(2) National Stock Number (NSN)	(3) Description and Part Number	(4) U/M	(5) Qty. Reqd.
1	5340-01-516-2058	Adapter, Multi-Use, LH Weldment (45152) 3483699	EA	1
2	5340-01-516-2059	Adapter, Multi-Use, RH Weldment (45152) 3484856	EA	1
3	5315-01-515-6847	Pin, FMTV M/U adapter upper (45152) 3483739	EA	2
4	5315-01-515-6846	Pin, FMTV/HMMWV M/U adptr. (45152) 3483739	EA	2
5	5315-01-516-2062	Pin, MTRV/939 M/U adapter (45152) 3483735	EA	4
6	5315-01-490-7325	Pin, quick (45152) 3406240	EA	4
7		Spacer, 1.5W Multi-use (45152) 1KK602	EA	2
8		Spacer, 3.0W Multi-use (45152) 1KK601	EA	2

MUA components found in COEI

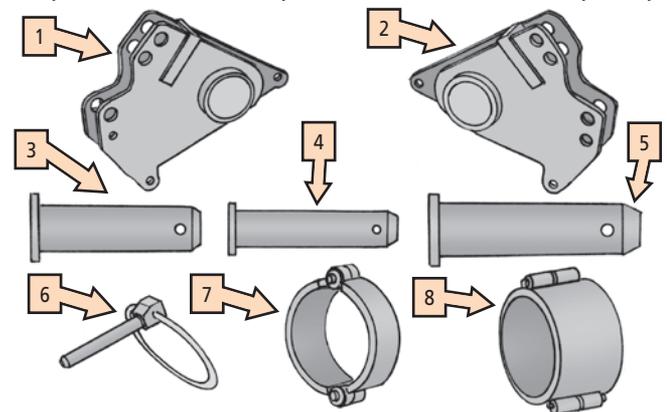

EM 0289 and TM 9-2320-421-10-1 give instructions for lifting with the MUA or older adapters. But if you're towing an FMTV with an M984A2 or M984A4 HEMTT wrecker, don't use an older adapter. You **must** use the MUA.

You won't see the MUA listed in the base HEMTT IETM or operator's manual. There are no procedures for lifting and towing with the MUA while using basic M984 or M984A1 HEMTT wreckers.

So to recap, **don't** use the MUA with basic and -A1 model M984 HEMTT wreckers. You **can** use the MUA with M984A2 and M984A4 HEMTT wreckers. You **must** use the MUA while lift towing FMTVs with M984A2 and M984A4 HEMTT wreckers.

Half-Mast