


DON'T GET BENT UP OVER BRACKET

I DON'T GET IT.
WHY WON'T THE
MANUAL CONTROL
FOR YOUR VI
EMERGENCY
VALVE WORK?

CHECK
UNDERNEATH
ME AND YOU'LL
UNDERSTAND.

THE SUPPORT
BRACKET FOR MY
MANUAL CONTROL
CABLE IS **BENT!**

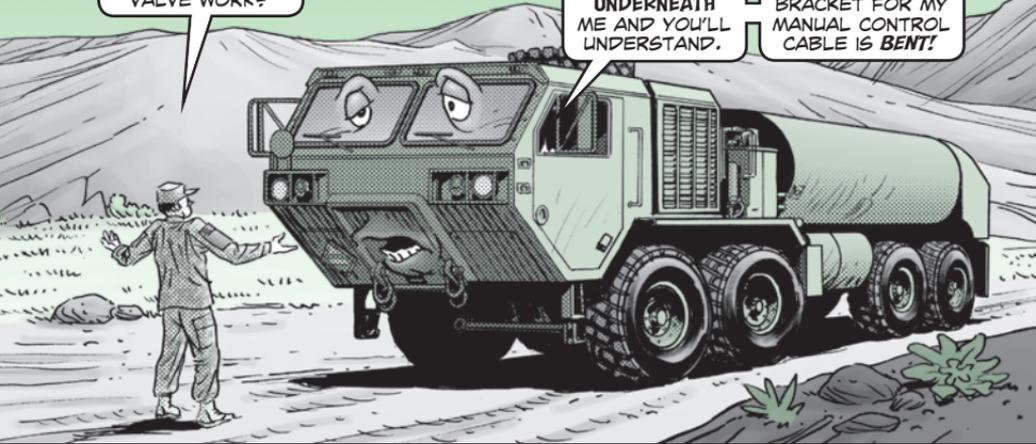

Having trouble pulling the manual control (MC) on your M978A4 HEMTT tanker's VI emergency valve, operators? Then get down on your hands and knees and take a close look at the MC cable's support bracket.

If the support bracket is bent, it's likely because the cable isn't properly adjusted. As the bracket bends, the cable binds even more. Pretty soon, you've got a cable that's damaged and an MC that won't pull at all.

If you find a bent support bracket, tell your mechanic. He'll replace the bracket, NSN 5340-01-618-5711, and readjust the cable to prevent future problems.

