

WHEN IT'S TIME TO REPLACE TIRES ON YOUR BACKHOE LOADER, YOU'VE GOT A LITTLE WORK TO DO!



Dear Half-Mast,  
I need new tires for my backhoe loader (BHL). Can you tell me the NSN for the tire and wheel assembly?

SFC J.M.K.

UNLIKE *MOST* EQUIPMENT, SERGEANT, THE BHL DOES NOT HAVE A TIRE AND WHEEL ASSEMBLY.

INSTEAD, YOU'LL NEED TO ORDER THE TIRE AND WHEEL *SEPARATELY* AND PUT THEM TOGETHER YOURSELF.



GET THE **FRONT TIRE** WITH NSN 2610-01-627-2155. NOTE THAT THAT'S A REPLACEMENT FOR NSN 2610-01-533-0485, WHICH IS CURRENTLY SHOWN AS ITEM 2 IN FIG 60 OF TM 5-2420-231-24P (JUN 13).

THE **FRONT WHEEL**, SHOWN AS ITEM 5 IN FIG 60, COMES WITH NSN 2530-01-623-3528.

INSTRUCTIONS FOR INSTALLING THE **FRONT TIRE AND WHEEL ASSEMBLY** ARE IN WP 0203 OF TM 5-2420-231-23-2 (JUL 13).

THE BHL'S **REAR TIRE** IS SHOWN AS ITEM 4 IN FIG 72 OF THE -24P AND COMES WITH NSN 2610-01-533-0486.

THE **REAR WHEEL** IS NSN 2530-01-623-3437 AND IS SHOWN AS ITEM 1 IN FIG 72.

INSTALLATION PROCEDURES FOR THE **REAR TIRE ASSEMBLY** ARE IN WP 0217 OF THE 23-2 TM.