



TB 43-PS-566, The Preventive Maintenance Monthly, is an official publication of the Department of the Army, providing information for all soldiers assigned to combat and combat support units and all soldiers with unit maintenance and supply duties. All information published has been reviewed and approved by the agency responsible for the equipment, publication or policy discussed. Application of the information is optional with the user. Masculine pronouns may refer to both genders.

ISSUE 566 JANUARY 2000



WHEELED VEHICLES

2

Tires	2-3
Split-ring Wheels	4
FMTV Transmission Filters, Plug	5,6
FMTV Door, Window Handles	7
FMTV Transmission ECU	7
HMMWV Exhaust Manifold	8
HMMWV Electric Winch	9
PLS Lessons Learned	10-11



MISSILES

47

Stinger, Avenger Cap, Glass NSNs	47
Patriot Power Distribution Units	47



SMALL ARMS

48

M224 Mortar Bipod	48-49
MK 19 Gun Night Sight Mounting	49
M16 Rifle Gas System	50-51



COMBAT VEHICLES

12

M1-Series Tank Air Cleaners	12-15
M2/M3-Series Bradley Sprocket Bolts	16
Depleted Uranium Safety	17
M992 Ammo Carrier Fire Extinguisher	18-19
M113 FOV Track Checks	19
NATO Slave Cable	20-21



NBC

52

M17-Series Decon PM	52-53
M40, M42 Mask Cleaning	53
M13 Decon Storage	54-55



COMBAT ENGINEERING

22

MICLIC PMCS, Storage	22-23
SEE Hydraulic System Exercise	24-25
D7G Tractor Transmission Filter	26-27
130G Grader Brake Bleeding	27



COMMUNICATIONS

56

Installation Kits for M939-Series Trucks	56
Installation Kits for HMMWVs	57
AN/VRC-97 MSRT Installation Kits	58
AS-3916, AS-1729 Antenna Tiedowns	59
15-KG TQG Battery Terminal Covers	60
TQG Exhaust Cover Fix	61



AVIATION

28

Hangar Safety	28-29
UH-60 Chip Detectors	30

EDITORIAL	1
1999 INDEX	31-38
CONTINUITY	39
CONNIE'S BRIEFS	69



SOLDIER SUPPORT

62

Cold Weather Clothing Waterproofing	62-63
Modern Burner Unit Differences	64-66
Tent Repair Tape	67
Aluminum Cot Parts	68

You are invited to send PS your ideas for improving maintenance procedures, questions on maintenance and supply problems, and questions or comments on material published in PS. Just write to:

MSG Half-Mast
The Preventive Maintenance Monthly
LOGSA, Bldg. 5307
Redstone Arsenal, AL 35898-7466

Or E-mail to:
psmag@logsa.army.mil

Internet Address:
<http://www.logsa.army.mil/psmag/pshome.html>

By Order of the Secretary of the Army:

ERIC K. SHINSEKI

General, United States Army Chief of Staff

Official:

JOEL B. HUDSON

Administrative Assistant to the Secretary of the Army
 9932701

PS, The Preventive Maintenance Monthly (ISSN 0475-2953) is published monthly by the Department of the Army, Redstone Arsenal, AL 35898-7466. Periodical Postage is paid at the Huntsville, AL post office and at additional mailing offices.

Postmaster: Send address changes to PS, The Preventive Maintenance Monthly, LOGSA, Redstone Arsenal, AL 35898-7466.

FOD



DON'T LET ME SCREW UP THE WORKS!

MAKE SURE I'M IN YOUR POCKET—NOT THE AIRCRAFT!

DON'T LOSE TRACK OF ME!

PUT ME IN A FOD CONTAINER!

ONLY YOU CAN PREVENT IT!

Issue 566

PS

January 2000

THE PREVENTIVE MAINTENANCE MONTHLY

TB 43-PS-566

Approved for Public Release; Distribution Is Unlimited



Bugged about PM: The Future ... See Page 39

Why 'PS'?

It's PS, the Preventive Maintenance Monthly, right? So, you ask, why is it PS, not PM? Good question.

PS stands for postscript, like the P.S. you add to a letter.

It's an "Oh, by the way" piece of info. Maybe it's an addition to a technical manual, something that's changed or needs to be changed, but the TM folks haven't gotten around to it yet. Maybe it's a tip on how to improve a tool. Maybe it's a shortcut to solve a problem more efficiently. Maybe it's just that added extra bit of information that fills in the gap and makes your job a little easier.

Most of the info in PS comes from you, our readers. It's the passing on of ways you have found to make things work better, easier, faster, cheaper. You tell us, we check it out and pass it on.

A lot of things have changed in the 49 years we've been publishing PS. The one constant is our mission—to help you maintain and use your equipment. Keeping you up-to-date is why we're here, no matter what you call us.



 THE PREVENTIVE MAINTENANCE MONTHLY		TB 43-PS-566, The Preventive Maintenance Monthly, is an official publication of the Department of the Army, providing information for all soldiers assigned to combat and combat support units and all soldiers with unit maintenance and supply duties. All information published has been reviewed and approved by the agency responsible for the equipment, publication or policy discussed. Application of the information is optional with the user. Masculine pronouns may refer to both genders.	
ISSUE 566 JANUARY 2000			
 WHEELED VEHICLES	2	 MISSILES	47
Tires	2-3	Stinger, Avenger Cap, Glass NSNs	47
Split-ring Wheels	4	Patriot Power Distribution Units	47
FMTV Transmission Filters, Plug	5,6		
FMTV Door, Window Handles	7		
FMTV Transmission ECU	7		
HMMWV Exhaust Manifold	8		
HMMWV Electric Winch	9		
PLS Lessons Learned	10-11		
 COMBAT VEHICLES	12	 SMALL ARMS	48
M1-Series Tank Air Cleaners	12-15	M224 Mortar Bipod	48-49
M2/M3-Series Bradley Sprocket Bolts	16	MK 19 Gun Night Sight Mounting	49
Depleted Uranium Safety	17	M16 Rifle Gas System	50-51
M992 Ammo Carrier Fire Extinguisher	18-19		
M113 FOV Track Checks	19		
NATO Slave Cable	20-21		
 COMBAT ENGINEERING	22	 NBC	52
MICLIC PMCS, Storage	22-23	M17-Series Decon PM	52-53
SEE Hydraulic System Exercise	24-25	M40, M42 Mask Cleaning	53
D7G Tractor Transmission Filter	26-27	M13 Decon Storage	54-55
130G Grader Brake Bleeding	27		
 AVIATION	28	 COMMUNICATIONS	56
Hangar Safety	28-29	Installation Kits for M939-Series Trucks	56
UH-60 Chip Detectors	30	Installation Kits for HMMWVs	57
		AN/VRC-97 MSRT Installation Kits	58
		AS-3916, AS-1729 Antenna Tiedowns	59
		15-KG TQG Battery Terminal Covers	60
		TQG Exhaust Cover Fix	61
		 SOLDIER SUPPORT	62
		Cold Weather Clothing Waterproofing	62-63
		Modern Burner Unit Differences	64-66
		Tent Repair Tape	67
		Aluminum Cot Parts	68

You are invited to send PS your ideas for improving maintenance procedures, questions on maintenance and supply problems, and questions or comments on material published in PS. Just write to:

MSG Half-Mast
 The Preventive Maintenance Monthly
 LOGSA, Bldg. 5307
 Redstone Arsenal, AL 35898-7466

Or E-mail to:
psmag@logsa.army.mil
 Internet Address:
<http://www.logsa.army.mil/psmag/pshome.html>

By Order of the Secretary of the Army:
ERIC K. SHINSEKI
 General, United States Army Chief of Staff
 Official:

JOEL B. HUDSON
 Administrative Assistant to the Secretary of the Army
 9932701


PS, The Preventive Maintenance Monthly (ISSN 0475-2953) is published monthly by the Department of the Army, Redstone Arsenal, AL 35898-7466. Periodical Postage is paid at the Huntsville, AL post office and at additional mailing offices.
 Postmaster: Send address changes to PS, The Preventive Maintenance Monthly, LOGSA, Redstone Arsenal, AL 35898-7466.

Where the Rubber Meets the Road

TO KEEP YOUR WHEELED VEHICLES ROLLING, DRIVERS, YOU'VE GOT TO KEEP A TRAINED EYE ON YOUR TIRES. AFTER ALL, NOTHING ROLLS UNLESS YOUR TIRES DO. TRAIN YOUR EYE TO LOOK FOR THESE PROBLEMS...

Low pressure

Make sure all tires, including the spare, have plenty of air. If one looks low, put a gauge on it. Add air as necessary before operation, while the tire is cold. You'll get the right amount of air in the tire when it's cold. If the tire is warm or hot, the pressure in the tire will be higher because of the heat, meaning not enough air will be added.

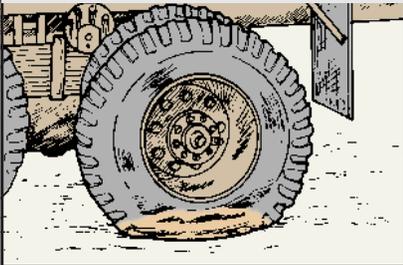


Flat-makers

Look for nails, metal or rocks dug into the rubber. Find any? Report it.




Abrasions

Tires rubbed raw are a sore sight for good eyes. Abrasions that go through the rubber to the cord or steel below mean you change the tire.

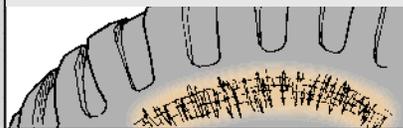

Cracks

Low tire pressure leads to sidewall cracks. Make sure the crack doesn't go to the cord or steel.

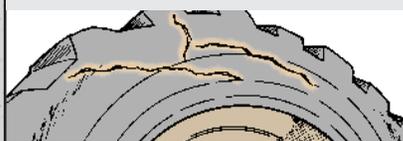


Overinflation

Look for tires that are worn in the middle. Overinflated tires don't flex enough. The middle of the tire takes all the weight, causing rapid wear. When an overinflated tire hits a large rock or a rut, the cords or steel belts inside snap and break, weakening the tire.




Wall separations

Most bulges in the sidewall or tread make a tire unserviceable. Radial tires, however, need a closer inspection. Some bulges on radial sidewalls are not defects, but the result of how they are made. Let your mechanic make the decision.

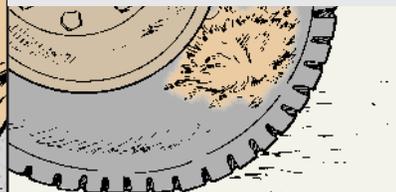


Underinflation

A sure sign of underinflation is a worn tread at each side of the tire. Underinflated tires flex more than properly inflated tires. The flexing causes heat, which ruins tires.

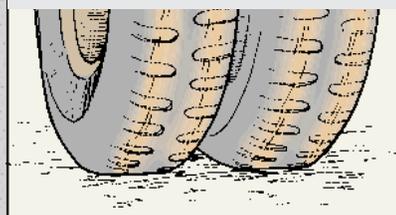


Weather-checking

Ozone cracks weaken tires. If you find weather-checking that covers large areas of a tire, report it.

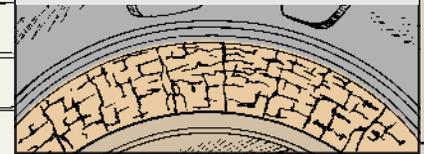


Wrong caster/camber adjustment

A sure sign of misadjustment is wear on one edge. Tires worn on the inside or outside edge have caster/camber problems. Either way, report it so your mechanic can make adjustments.

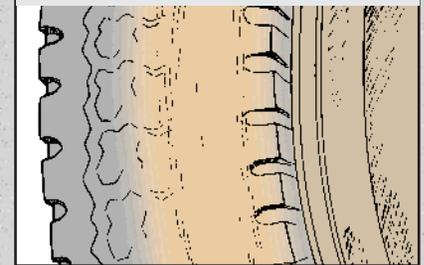

Balding tires

When tire tread gets below a certain height, a tire needs to be replaced. Report any tire you believe to be worn out to your mechanic. He'll measure tread using the wear gauge in the No. 1 and No. 2 Common shop sets to make the final decision.

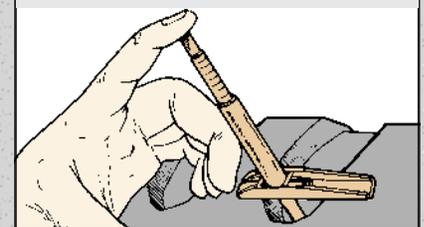


PM for Split-ring Wheels

Repairing a flat or replacing a tire is the perfect time to inspect split-ring wheels on tactical trucks.


Here's what to look for:

Split and Lock Rings


Erosion? Corrosion causes bead seat of lock ring to erode and chip. Then ring won't seat properly, so replace it.

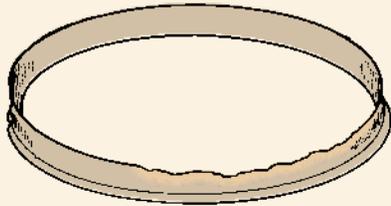

Cracks? Any crack in lock ring means it will break. Don't use it!

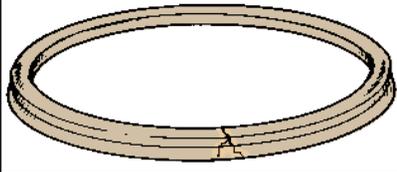


Sprung or out-of-round? Ring won't seat properly into rim. If you find a bum split ring, replace it.

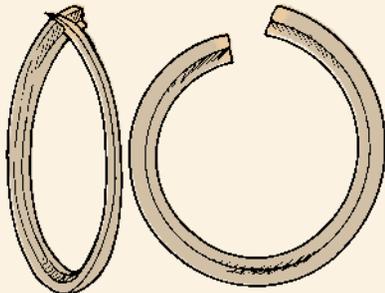


Wheel Rim


Cracks in base? They're caused by tools during assembly or disassembly, overloading or overinflating tire. Replace rim.

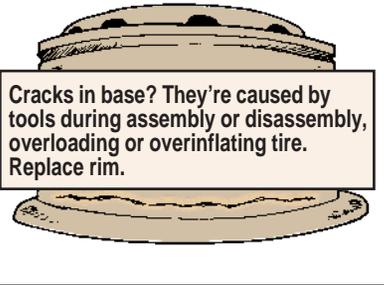

Cracks in disc? They're caused by loose lug nuts or overloading. If you find any damage to rim, replace it.

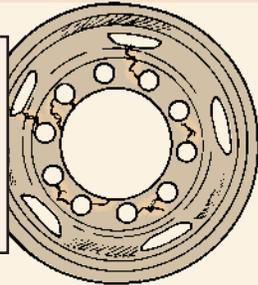

Rust? Use wire brush to remove it. Then paint rim. If you paint with CARC, refer to TB 43-0242. If you paint with anything besides CARC, see TM 43-0139.

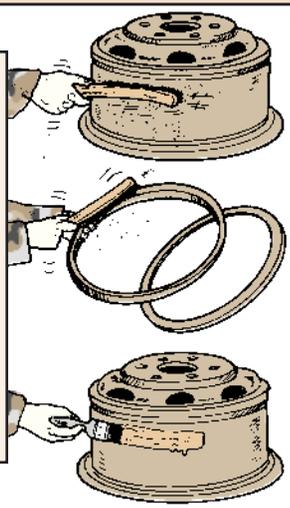

Transmission-Oil Filter Tips

THAT TAKES CARE OF THAT FILTER.



FILTER? DON'T YOU MEAN FILTERS?!



Like everything else, mechanics, there's a right way to install the transmission oil filter elements on your FMTV. That's right, elements. Plural.



There are **two** oil filter elements that must be changed at each service. One of the elements is easy to get to, but you've got to remove the propeller shaft to reach the other.

Then note this: Do not use the cover screws to draw the cover and element to the sump.

That can break covers, crush elements and pinch seals.

Instead, push the cover and element into the sump and install the six screws finger tight. Then torque the screws in a criss-cross pattern to 38-45 lb-ft.


Don't use cover screws to draw cover tight

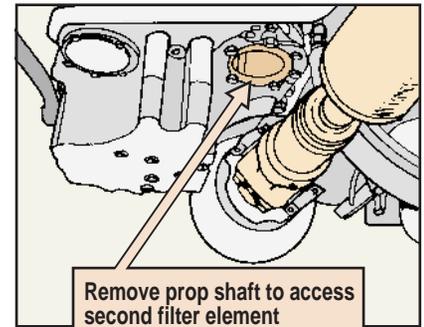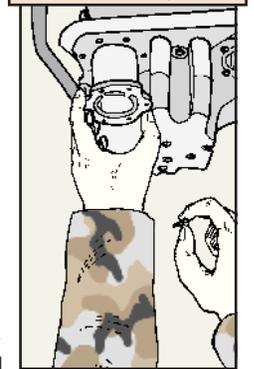

Remove prop shaft to access second filter element

Don't think you can short-cut the service by skipping the hard-to-get-to element. That won't work. All you're doing is risking transmission failure.

Just as importantly, when you install each element pay attention to the instructions in your truck's -20-3 TM.

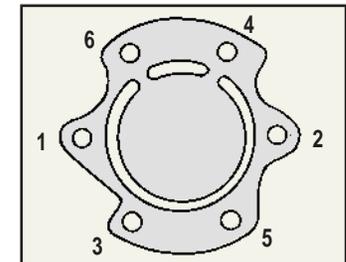

Torque screws in criss-cross pattern

Take a Look at That Plug



When you FMTV mechanics change a vehicle's transmission oil for the first time, eyeball the magnetic drain plug. It could save a transmission.

The plug is magnetic for a reason. If there are metal particles swimming in the oil, they'll be attracted to the plug. Then they won't be moving around in the oil to mess up something. And, when they're on the plug you can see them, if you look.

Troubleshooting task f20 in your -20-1 TM says to notify your DS if you find metal particles on the drain plug. DS then knows the C6 thrust bearing in your truck's transmission is wearing. DS will make repairs before something really bad happens.

Later, any time you change the transmission oil to meet an AOAP requirement, look closely at the plug. If the plug needs a "shave," include some of the metal particles in your next required sample. Note on the bottle label that particles were found on the plug.

Keep Door and Window Handles Tight



Getting out of a military vehicle is just as important as getting into it, drivers.

So, keep an eye out for loose door and window handles inside your FMTV.

Field reports say these handles don't stay tight for very long when they're used. Eventually, the screws come loose and you're left with no way to open the door except to roll down the window, and maybe no way to roll the window up or down.


Does your truck already have loose or missing door or window handles? Report it to your mechanic now, before you come up handle-less in an emergency.

Information on door repair and adjustments is found in Paras 16-5 and 16-6 in both TM 9-2320-366-20-4 (for 5-ton models) and TM 9-2320-365-20-4 (for 2¹/₂-ton models).

FMTV Transmission ECU

NSN 2520-01-361-1091 gets the electronic control unit (ECU) for the FMTV's transmission. The NSN shown as Item 6, Fig 103 of TM 9-2320-365-24P and Item 6, Fig 125 of TM 9-2320-366-24P is no longer available.

Stop Exhaust Manifold Breaks

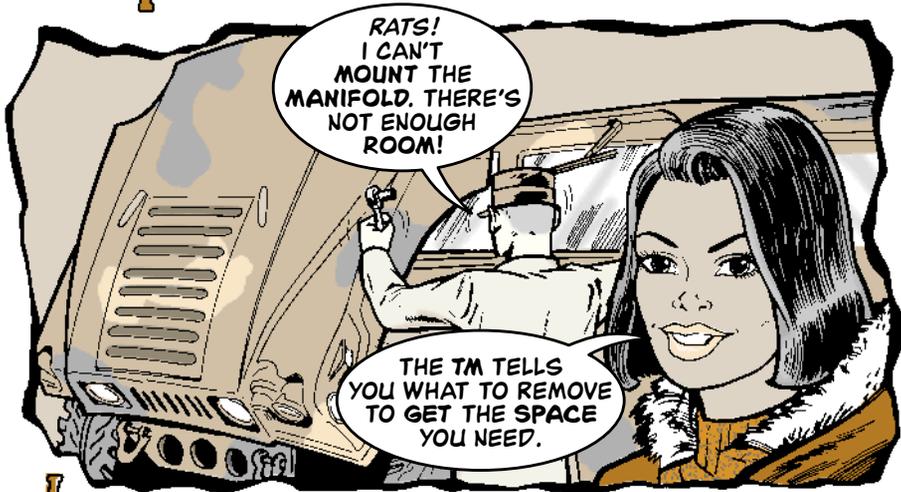

It's a tough job, but you **can** mount the exhaust manifolds on a HMMWV engine right, tight and in one piece.

What it takes is patience and experience. Here's what you need to know:


- ⌘ Make sure you have enough room to work so the manifold can be mounted properly on the engine head. Remove everything the TM tells you to remove so you have plenty of elbow space.

Working in tight spaces can create leaks and broken flanges as you try to make things fit where there's no room.

- ⌘ Clean the head mounting surface and the manifold mating surface. Remove all traces of old gasket material. Leftover gasket material leads to seal leaks and a repeat job you don't need.

- ⌘ Finger-tighten all screws and the alternator stud, and then torque them to 25–33 lb-ft.

Alternate the screw and stud tightening. This reduces the strain on manifold flanges and prevents leaks. Flanges often break when each screw is tightened completely before others are snugged up.

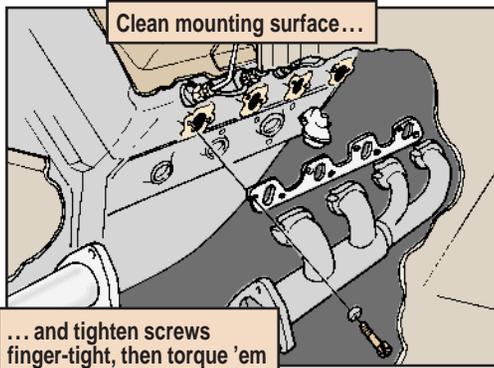

Grounded to a Halt?


Mechanics, when you first go out to troubleshoot an electric winch that's reportedly busted, take a hard look at its ground point.

That ground point is usually covered in dirt or mud, which means the last time it was checked for a tight, **clean** connection was not yesterday.

Because electric winches pull a lot of amps in operation, a clean, tight ground connection is required for operation.

Remove the dirt or mud and disconnect the ground strap. Clean the strap and the mounting stud, making sure that all corrosion is removed.

Use a bristle brush, any corrosion-removal compound, rags and lubricating oil to prevent rust's return. Then reinstall the strap, tighten the nut and test the winch.

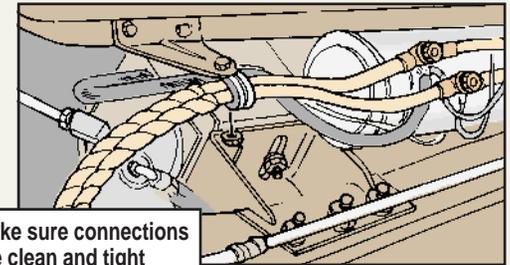

Chances are, the report that the winch was busted was a bust itself.




Operator Lessons Learned

The palletized loading system (PLS) truck is different from anything else the Army has, and operators have learned (often the hard way) that it must be handled differently.

Here are some items you operators should put to memory:

- Never shift the transmission into first gear while the PLS is moving.


Never shift into first gear when PLS is moving

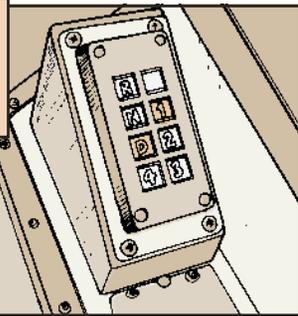


reaches a height of 17 feet 2 inches when lifting a standard shipping container.

- Do not back up while the LHS hook arm is attached to a flatrack. A flatrack roller could get caught in a pothole or uneven ground, damaging cylinder rods and the flatrack.
- Never drive the PLS with the LHS NO TRANS light on. When the light

Never drive PLS with NO TRANS light on

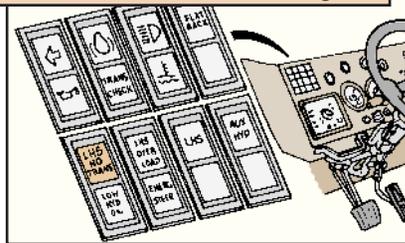


- Keep an eye out for overhead power lines or other obstructions before beginning load handling system (LHS) operations. The LHS hook

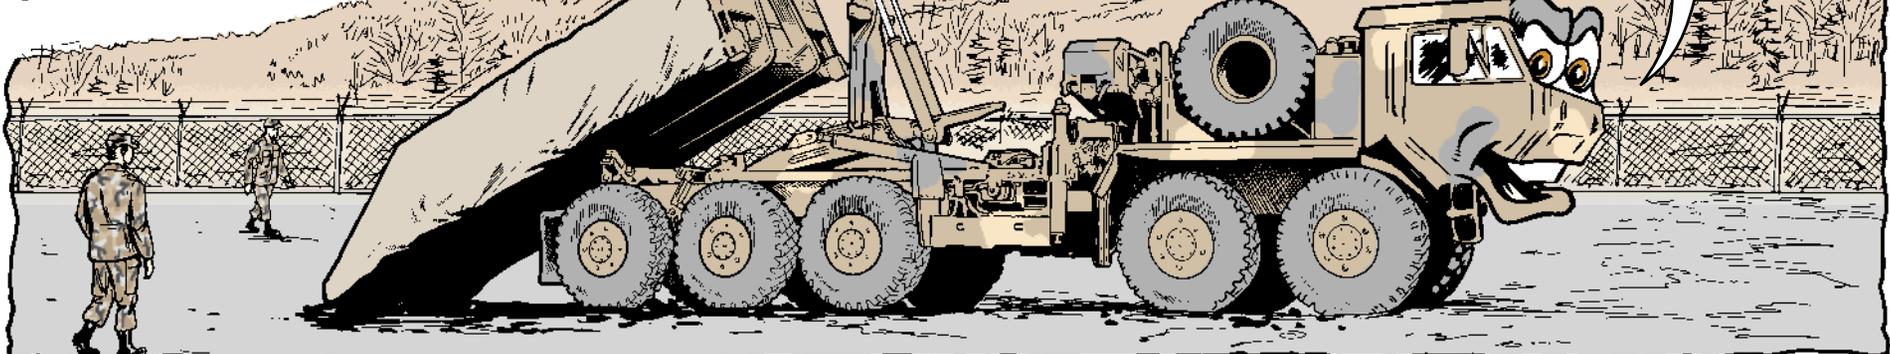

is on, the LHS load locks are not engaged and the LHS is not fully stowed. You can lose your load and damage your equipment.

- The mudflaps hang real close to the tires—so close that it's a good idea to hook 'em up any time you're traveling in mud or snow. It's easy for the flaps to "catch" and be pulled over the tires. Be sure to hook 'em before you load a flatrack.


Hook mudflaps up before loading flatrack

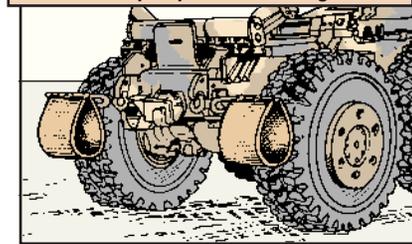

- Do not hold the PLS' steering wheel at full left or full right for more than 10 seconds. Oil overheating and pump damage can result.

● You must be extra careful when loading and unloading flatracks manually. In MANUAL mode (MAN H.A., MAN M.F. and MAN TRANS), you control every part of the loading and unloading process. You must follow the steps exactly or risk damage. In AUTO mode, the cycle is controlled by the LHS.

Be extra careful using MAN H.A., MAN M.F. and MAN TRANS modes

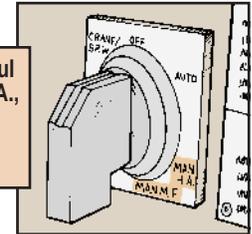

Keep the instructions in front of you any time you use MANUAL mode. They'll help you prevent hydraulic seal, hose and cylinder damage, roller damage and hook arm/main frame cylinder damage. See Pages 2-203 through 2-215 in TM 9-2320-364-10 for the details.

Keep Your Tank Breathing Clean Air

The air induction system on your M1-series tank is like a giant vacuum cleaner—it sucks up anything that gets close.

That's the reason for your tank's seals and filters. They screen out sand and dirt so that only clean air can get through. They also keep out larger debris that can dent, crack or break compressor blades.


If you want them to continue to stop potential damage, pay special attention to these important PM points:

Precleaner


Trees and bushes make a good hiding place for your tank, but they also result in clogged air precleaners.

Leaves that fall on or near the air inlets get sucked onto the precleaner. Enough leaves will cut off airflow and lower power output.

If the AIR CLEANER CLOGGED FILTER light comes on, make the precleaner one of your first checks.

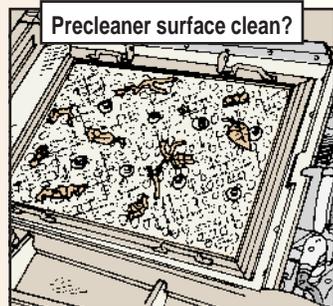


While you're there, take a close look at the baffle seals. Cracked, torn or missing seals allow dirt and oil from the engine to clog the air cleaner assembly element strainers.

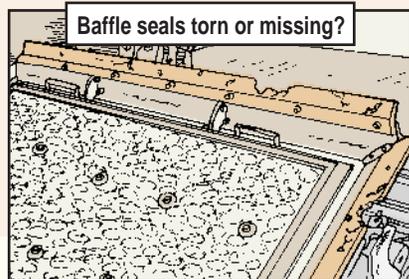

NSN 5330-01-225-6106 gets a new short seal. The longer seal is NSN 5330-01-320-3696.

Next, eyeball the bottom precleaner seal. If the seal is missing, loose or

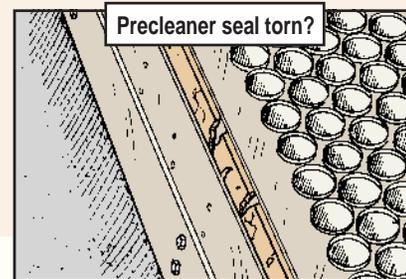

torn, replace it. NSN 5330-01-166-5798 gets a seal for the type A precleaner. The type B precleaner takes NSN 5330-01-329-6614.

A new seal is useless, though, unless you put it on right. Here's how:

1. Clean off the old seal and adhesive completely. To do it right you'll need a lot of elbow grease—combined with a rag, dry cleaning solvent and a wire brush.

2. Spread adhesive, NSN 8040-00-664-4318, in the seal groove. Use enough to hold the seal, but not so much that it squeezes out around the seal. The right amount of adhesive keeps the seal from sticking to the airbox frame and ripping loose every time you remove the precleaner.

3. Apply a very light coat of adhesive to the bottom of the new seal and press it into the groove with your finger. Take extra care not to twist the seal as you put the rounded side in the mounting groove. A twisted seal is not airtight.

4. Let the adhesive dry completely before you put the precleaner back in place. Put a dab of adhesive on a piece of paper. When it's dry, the seal should be, too.

Skirt Seals

If you're having problems with clogged air cleaner intake filter elements (V-packs), missing fender skirt seals could be the cause. Those rubber strips are there to seal the area between the skirts and hull.



Missing seals allow dirt and dust to be sucked inside the fender skirts. The engine pulls the dirt into the air intake system where it clogs up the V-packs.

All the seals are important, but pay special attention to the seals at skirts 4, 5 and 6 on the left side of the vehicle. These seals are closest to the air intake grills and can let in the most dirt.

NSNs for the seals are listed in Figs 261-264 and 266 of TM 9-2350-255-24P-1 (Oct 92) for the M1, Figs 248-251 and 253 of TM 9-2350-264-24P-1 (Mar 96) for the M1A1, and Figs 235-238 and 240 of TM 9-2350-288-24P-1 (Sep 95) for the M1A2.

V-Packs

The three V-packs on all tanks not equipped with the pulse jet system (PJS) should be removed, cleaned and inspected after every operation. V-packs on PJS-equipped tanks are self-cleaning. Removing the V-packs on these tanks will ruin the system.


The preferred cleaning method is the V-pack cleaning wand. You'll find info on the wand in the "unusual conditions" section of your -10-2 TM's operating instructions.



If the cleaning wand isn't available, shake the V-packs, making sure not to hit them against anything harder than your hand. Brush dirt and dust from the elements with your hand. Then, have the elements properly cleaned by your unit maintenance folks as soon as possible.

While the V-packs are out, inspect the plenum box and elements for potential problems:

- ◆ Eyeball the bead on the front face of each V-pack element for dents or sharp edges that could cut the plenum box seal. Then check for buckling on the rear face of the element. Either problem means you need a new V-pack.
- ◆ Look for broken welds and cracks in the plenum air box. Dust trails along the welds and seams of the box are

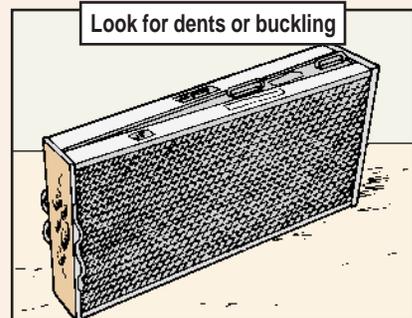


a good sign of a leak, so tell your mechanic.

◆ Look for torn, cracked or missing plenum box seals. A missing seal makes your tank NMC.

Those three seals also deteriorate over time, so check each one by measuring the depth of the depression made by the V-pack bead in the seal. If the depression measures more than 3/16 inch, get the plenum box seal replaced.


Here's another way to check the seals:

1. Apply chalk to the raised portion of the V-pack bead.
2. Install the V-pack and secure the holding clamp.
3. Remove the V-pack and eyeball the plenum box seal. There should be a complete chalk line around the seal from contact with the V-pack bead.

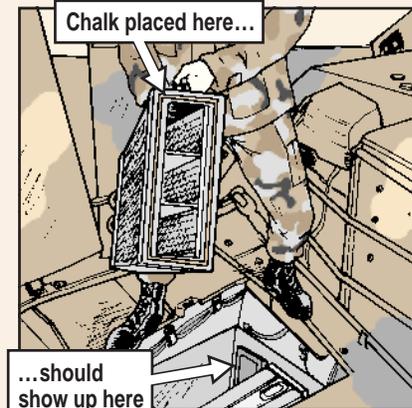


If the chalk line is broken, the V-pack may not be sealing correctly. So, get your mechanic to install a new seal, NSN 5330-01-098-6807. Remember to wipe the chalk off the V-pack bead and seal after testing.

This method works especially well if you are putting new V-packs in **without** replacing the plenum box seals. But, it's a good idea to put in new seals along with the new V-packs whenever possible.

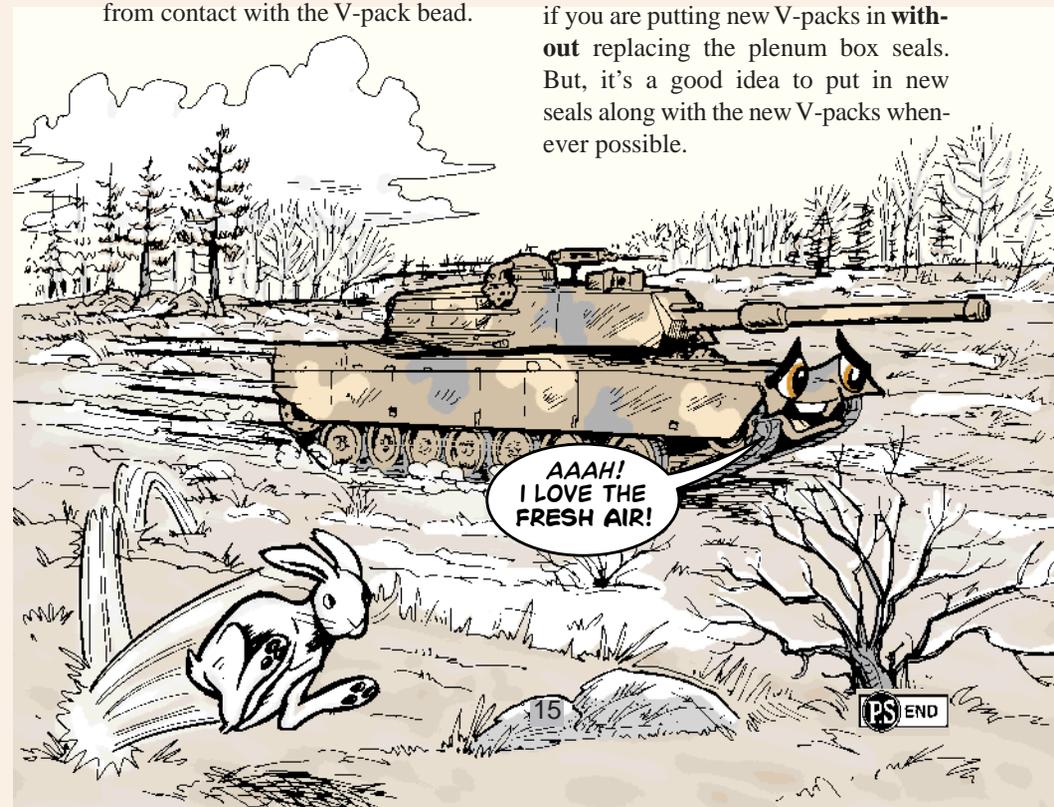

Keep Carrier Bolts on the Mark

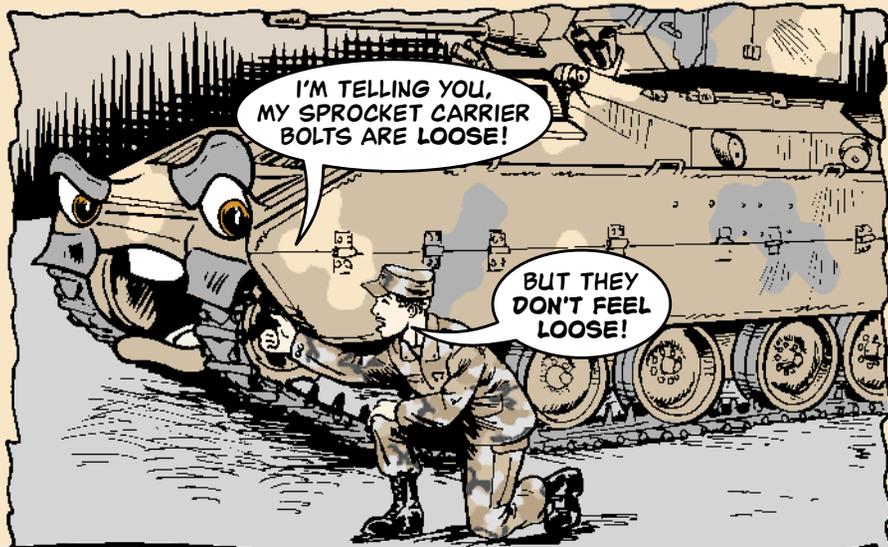

Dear Editor,


Crewmen are supposed to keep a sharp eye out for loose sprocket carrier bolts on all M2/M3-series Bradleys.

But unless the bolts have loosened enough to move with your fingers, it's hard to tell a tight bolt from one that's just started coming loose.

A simple grease pencil solves this problem. After the bolts are torqued in place, we use the grease pencil to draw a line over each bolt head, forming a circle all the way around the face of the sprocket carrier.

If one of the bolts comes loose, the line on the bolt head moves and is easy to spot.

SFC Duaine Buck
3/3d ACR
Ft Carson, CO

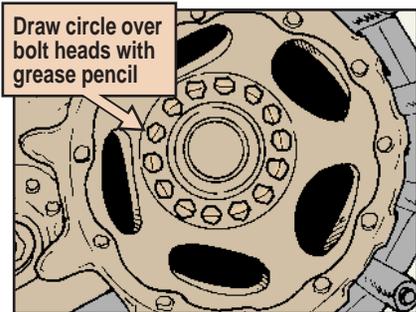

FROM THE DESK OF THE Editor 

We give you high marks for that idea!

DU Help for You

BECAUSE OF ITS STRENGTH, DEPLETED URANIUM -DU- IS USED TO MAKE THE ARMOR FOR SOME M1 TANKS AND AMMO ROUNDS FOR THE M1 AND BRADLEY. DU IS NOT HIGHLY TOXIC UNLESS THE METAL JACKET OR STEEL ARMOR ENCLOSING THE DU IS RUPTURED. THEN THE RADIATION CAN BE HAZARDOUS.



You can tell if your tank's armor has DU by checking its serial number. If it ends with a U, it's DU. Bradley M919 ammo rounds are DU, as are the M1/IPMI's M900, M833 and M874 ammo and the M1A1/M1A2's M829, M829A1, and M829A2 ammo rounds.

If your unit's vehicles have DU armor or use DU rounds, order TB 9-1300-278, which gives the lowdown on handling DU safely.

If you have questions about DU, call the Radioactive Waste Disposal Office at TACOM-Rock Island, DSN 793-2989 or (309) 782-2989.


Extinguish CO₂ Concerns




Crewmen, now that the portable fire extinguisher in your ammo carrier is filled with carbon dioxide (CO₂) instead of Halon, you've got a whole new set of safety concerns.

If they're not used right, CO₂ extinguishers pose some dangers—including severe frostbite and suffocation. So, follow these tips for safe CO₂ use:

1. Shout a warning to all crewmembers before using the fire extinguisher.
2. After hearing the warning, the driver should pull down the air duct control

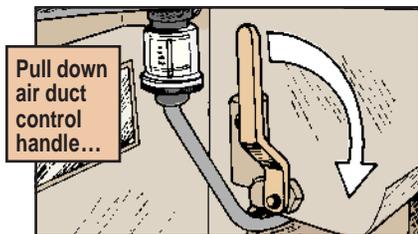


handle to open the vent door and turn the VENTILATOR BLOWER INTAKE switch to EXHAUST.

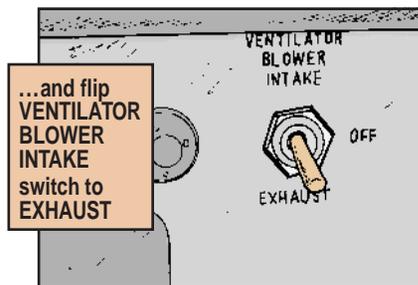

If the vent door doesn't open, or the blower motor doesn't work, open all hatches and doors to reduce the concentration of CO₂.

3. Pull the two latches to release the fire extinguisher.
4. Break the plastic safety wire and remove the ring pin.

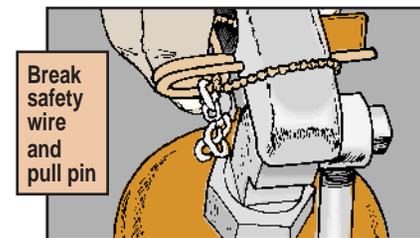

5. Aim the discharge nozzle at the base of the flame and squeeze the trigger until the fire is out.

Once you've begun using the extinguisher, avoid breathing the CO₂. It causes rapid breathing, loss of consciousness and suffocation.

Keep your hands away from the nozzle to avoid frostbite and exit the vehicle as soon as possible.

6. Continue ventilating the vehicle until it's clear of all smoke, fumes and CO₂.

Don't Bet Your Life!

Crewmen, checking the track on your M113-series vehicle is a life or death matter.

Several soldiers have been killed in recent accidents because they didn't follow the suspension system PMCS in their -10 TMs. Those TMs spell out critical maintenance checks and deadlining information, such as:

- Never extend the track adjuster more than 17 inches or it may buckle during operation.
- Use the track and sprocket gauge, NSN 5220-01-041-9920, to check wear limits for sprockets and cushions.
- Eyeball roadwheels, idler wheels and hubs for rubber chunking, loose hardware, and proper lubrication.
- Check shock absorbers for heat, leaks and loose or missing bolts after every operation.


All of these are after-operation checks, but it's a good idea to do them before operating your vehicle, too. In fact, the following warning will soon be added to your -10 TMs:

WARNING

Bad track has killed/injured. Do these checks before and after vehicle operation.

Even when you've checked your track, accidents still happen. That's the reason for the thrown track warning at the front of your -10 TM. Learn and practice the instructions in the warning so you'll know **exactly** what to do in the event of a thrown track.

BE FREE OF 'SLAVE

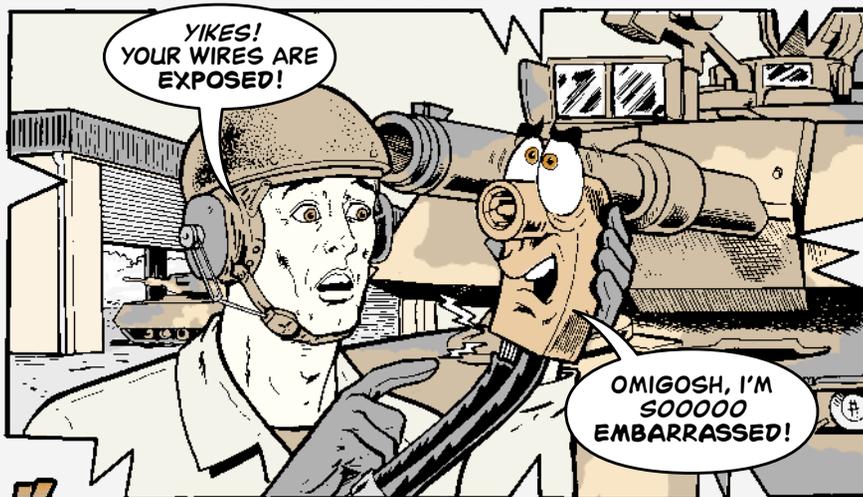

Knowing how to use the NATO slave cable is important, but knowing how to fix a broken cable is even better.

NSN 6150-00-398-6527 gets a cable *without* end connectors

NSN 6150-01-022-6004 gets a cable *with* end connectors

NSN 5935-00-567-0128 gets one end connector


NSN 5935-00-322-8959 gets a connector adapter for each end to fit two-hole receptacles (two come with complete cable)

Shock Stopper

Before slaving your vehicle, eyeball where the wiring goes into the end connector. Look for bare or exposed wires where insulation has pulled back from the connector housing.

You'll get a real charge from your slave cable if you touch one of those

Check here for bare or exposed wires

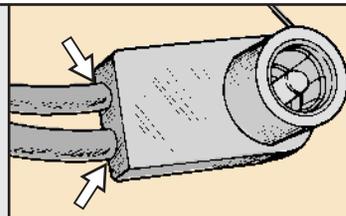

CABLE PROBLEMS'


bare wires while you're hooking up. Here's how to make it safe again:

1. Remove the connector's back plate, then disconnect the cable from the connector.
2. Cut off the terminal lugs. Strip back just enough insulation to put on new terminal lugs, NSN 5940-00-115-5004.
3. Reconnect the cables to the connector. Make sure the positive lead (+) is reconnected to the center post and the negative lead (-) is reconnected to the negative cup of the connector.
4. Reassemble the connector.


Connector Cover Fix

If the connector inserts pull out, the cover won't seal tight. Water gets inside and corrodes the cables. Fix loose insert problems like this:

1. Remove the cover.

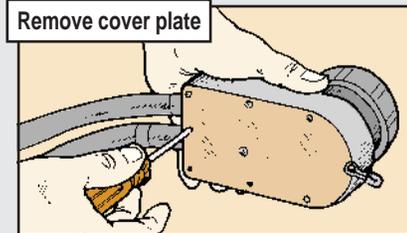

2. Remove the loose inserts by threading in a screw and gently wiggling each

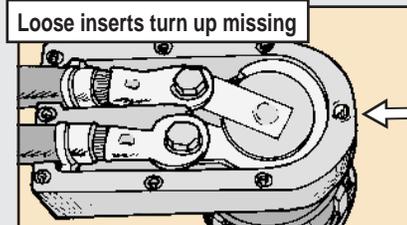


insert until it comes out the body of the connector.

3. Fill each hole about halfway with silicone adhesive caulk, NSN 8040-00-865-8991.
4. Press the inserts back into their holes, making sure they're flush with the surface of the connector.
5. Run a thin bead of silicone adhesive caulk around the connector and screw down the cover. Wipe off any caulk that oozes out. Let the caulk cure for an hour or two before using the cable.

To get back into the connector the next time, remove the screws and use a sharp knife to cut the caulk.

Longer Version

Solve your long-distance slaving problems with the 50-ft power cable, NSN 6150-01-310-1829. It comes with NATO connectors and covers.

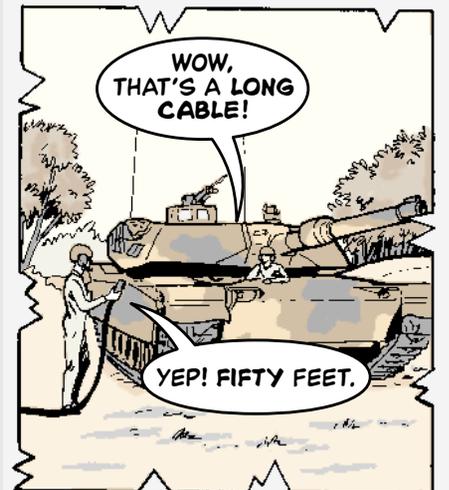

Your Minefield Insurance Policy

MY INSURANCE AGENT SAYS MY NEW POLICY COVERS EVERYTHING.


EVEN MINEFIELDS?

THAT'S WHERE I COME IN! GOOD PM IS THE ONLY INSURANCE I NEED!

If you're operating in areas that have been mined, you should appreciate your MK-155 mine clearance line charge (MICLIC). It's your best insurance against being blown up. But you need to keep your MICLIC policy paid up with PM. Here's how:

PMCS

Make sure the hand knobs on the launcher rail move in and out freely. They often get bent during use. If the

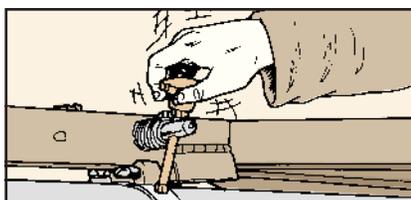


Hand knobs move in and out freely?


knobs can't be screwed all the way down, you can't mount the rocket. Your repairman can replace bent knobs.

Storage


If you leave the pump pumped up during storage, the pressure wears out the pump fast. So, hit the release valve and raise and lower the launcher rail until the pressure is 0.

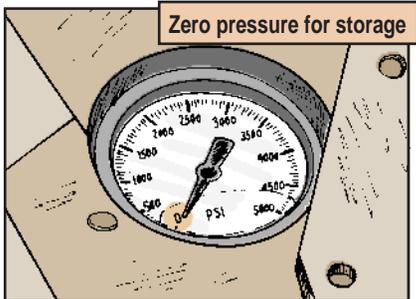

Zero pressure for storage

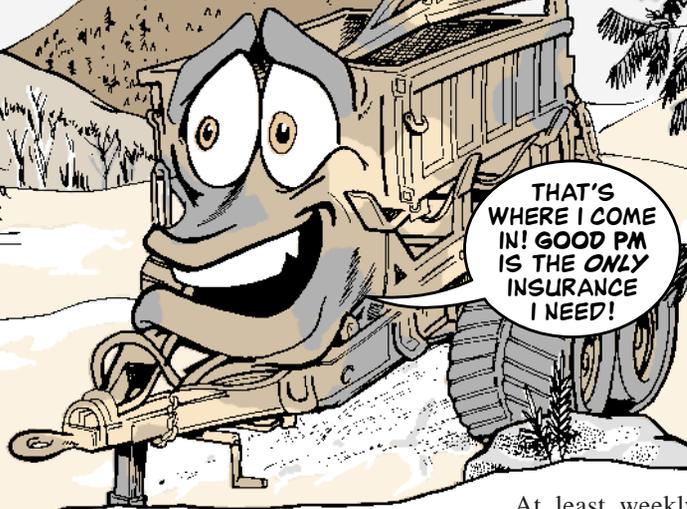


Don't let the MICLIC sit for weeks without attention. Rust can lock it up. Follow the lube chart on Page 3-1 in TM 9-1375-215-13&P and pay special attention to the two launcher rail supports. They need a coating of OHT before you park and leave the MICLIC.

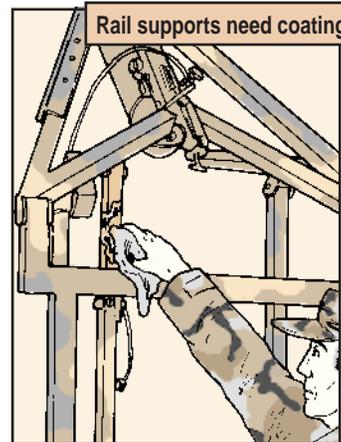

Rail supports need coating of OHT

At least weekly, raise and lower the launcher rail to make sure it's moving smoothly. Relube the supports if necessary.

Don't leave the MICLIC uncovered. Rain can wash out lubricants and also get in the hydraulic pump and ruin it. You can have your canvas shop make a cover for your MICLIC with this pattern:

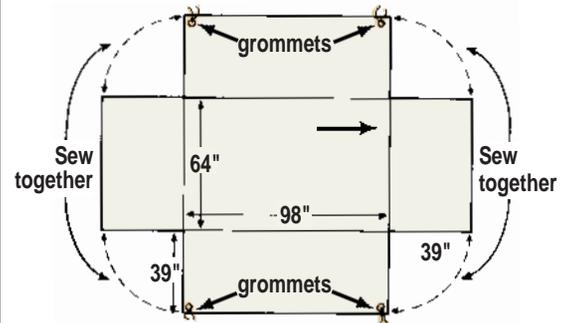


If that's not possible, use a cover from something like a 1 1/2-ton trailer.

Circulate the Hydraulic Oil

Operators, everyone knows that exercise is good for you...look what it's done for Sammy Sosa and Mark McGwire.

It's good for the SEE, too. Exercise heads off hydraulic system corrosion, keeps the hydraulic system moving freely and lubes seals. It also heats up the oil and creates friction between moving parts. Friction creates heat that gets rid of water that collects in the oil from condensation.

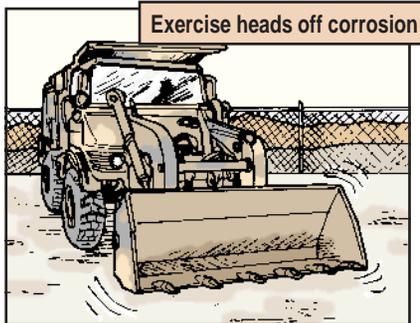

Left alone, that water reacts with the oil to form acid. Acid causes rust, breaks down filter elements and damages valves and seals. You'll get leaks, pressure loss and vehicle breakdown.

Your tractor needs exercise about once a month.

Start by warming up the engine—idle at 750 rpm for 3–5 minutes. That's like the stretching you do before exercising.

Then, move on to the exercise. Operate the SEE for 30 minutes. Be sure to move every control, valve and lever that operates the tractor's backhoe and

front loader bucket. That'll circulate oil through every line and cylinder.

Finally, don't just shut down the SEE, cool it down. Idle the engine at 750 rpm for a 3–5 minutes while the engine cools.

Remember Filters



Regular exercise doesn't mean you can forget the filters on the hydraulic tanks for the backhoe and front loader bucket. Your mechanic needs to change the filters during scheduled services or when the red indicator button pops up on the service filter indicator.

If your SEE is going to be stored for several months, your mechanic should follow the storage procedure on Page 2-36 of TM 5-2420-224-20-1.

Auxiliary Tool Warmup

In cold weather, extend the SEE's warmup to the hydraulic oil for the tractor's auxiliary tools.

Before operation, preheat the oil by connecting the two auxiliary hose quick disconnect couplings. Let the oil circulate and warm up for a few minutes. That way the auxiliary tools will operate smoothly right away.

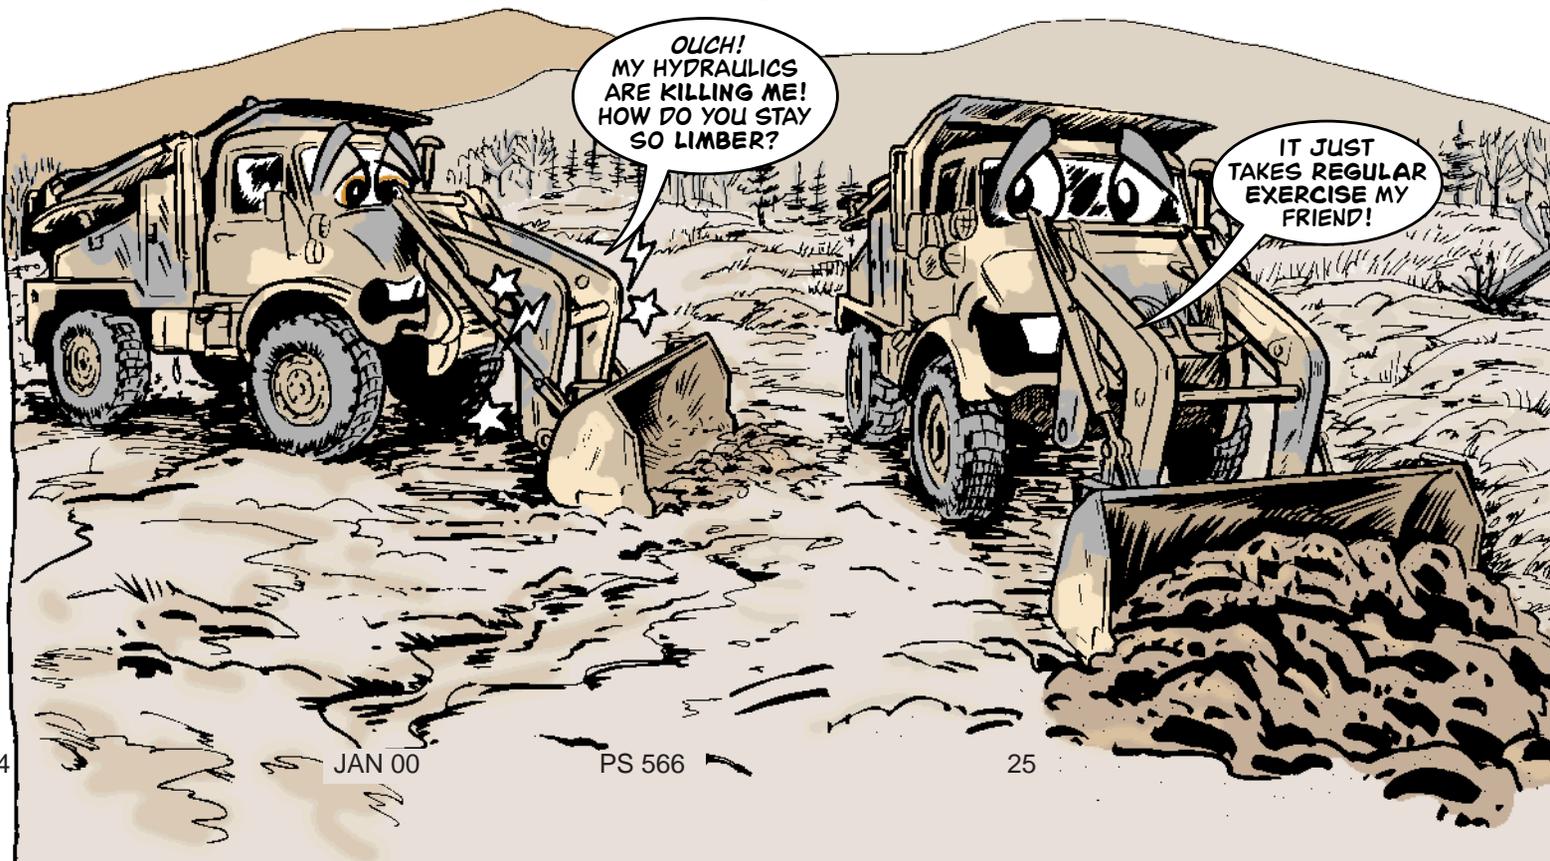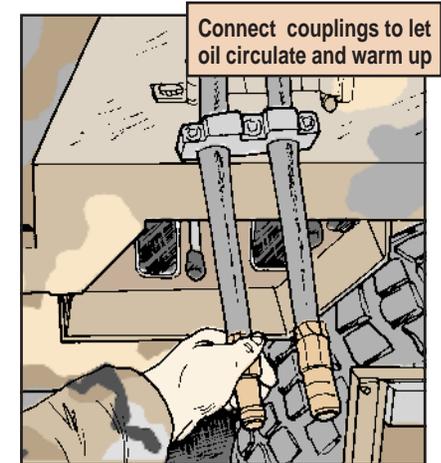

A Keep Transmission

An AOAP report just came back from the lab. It says the transmission fluid in your dozer is contaminated with metal shavings.


What gives? You always change the transmission's primary filter.

What gives is a clogged screen in the transmission system's magnetic strainer.


A clogged screen restricts oil flow in your D7G's transmission. The result is wear and tear in the engine and transmission, and a bad AOAP report.

Cleaning the screen and magnets is a 250-hour service in LO 5-2410-237-12 and TM 5-2410-237-20.

- Here's how:
1. Remove the cover and spring, then remove the filter assembly.

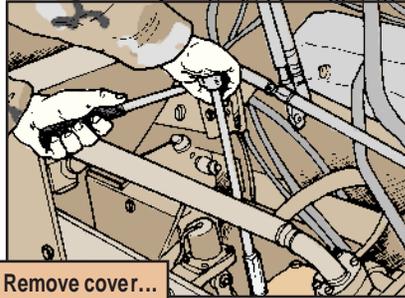

Remove cover...

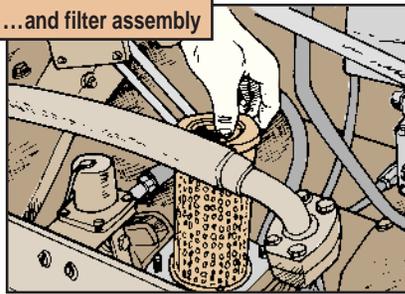

...and filter assembly

METAL SHAVINGS!?

BUT I JUST CHANGED THE PRIMARY FILTER!


DID YOU CHECK MY MAGNETIC STRAINER?

AOAP

Filter Clean

2. If you're in the motor pool, steam clean the screen and magnets, and then dry them with pressurized air. In the field, wash the screen in P-D-680 dry cleaning solvent. Clean the magnets with a stiff bristle brush. Don't use a **wire** brush! That can scratch or demagnetize them. And, don't drop or tap the magnets. That can demagnetize or break them.


Wash screen in P-D-680 dry cleaning solvent

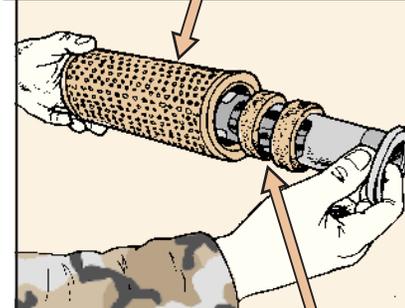

Use stiff bristle brush to remove shavings

3. Check the cover seal for cracks, tears or mashed edges. If you find any, replace the seal, NSN 5330-00-863-5549.

Replace worn seal

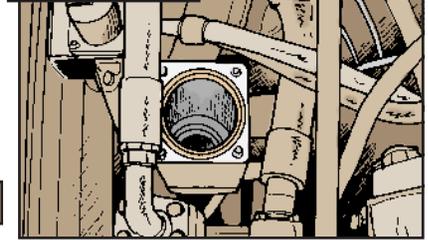

4. Install the magnets, screen, spring and cover, in that order. Torque the cover nuts to 31-34 lb-ft dry (no oil) or 23-25 lb-ft wet (threads lubed with oil).

5. With the engine running and the transmission in neutral, pull the dipstick to measure the oil level. Add oil to bring it to the FULL mark on the dipstick.


Bleed the Brakes

Operators, you've got to bleed your 130G graders' air brakes each day after use.

If you forget, moisture in the air lines leads to corrosion. Corrosion plugs up brake valves and cylinders and leads to brake failure.

So drain the water from each air tank at the end of the day. Just open each tank's valve until no more water comes out. Close the valve tightly when you're done.

Open each valve to let water out

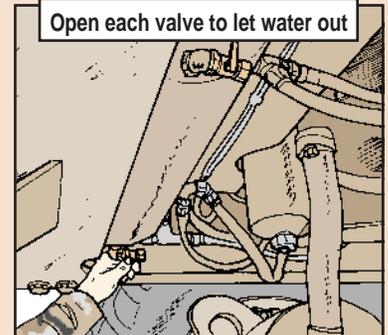


Keep Hangers Clean and Organized

There's never enough time to do everything that needs doing in your hangar. Would you believe that taking a few minutes to answer these questions and take corrective action could save you hours of aggravation? Here are the questions to ask as you walk around your hangar:

Are the aisles clear and walkways marked?

Stumbling and stepping over cowlings and other parts is hazardous to your health. Mark areas for walkways and keep equipment out of them.


Walkways marked and clear?

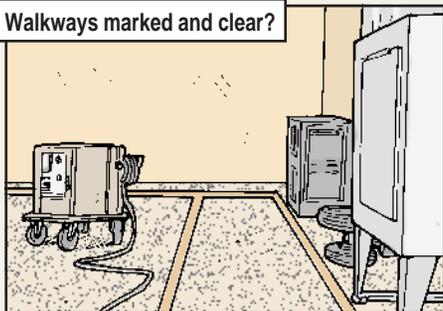

Are drip pans in use?

Sure, you always take care of oil spills with sweeping compound as soon as you can, but a pan takes care of the mess before it happens.

Drip pans in use?

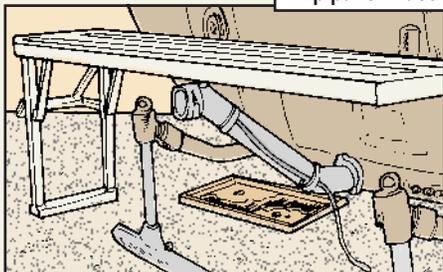


Are oily rags in a self-closing metal can? Is the can emptied daily?

Chemical-soaked rags can cause fires and produce harmful fumes. It's not enough to keep them in a container. A self-closing lid is a must.

Do you have a metal container labeled FOD? Is it easy to get to?

Use an old, topless oil drum to hold FOD-causing junk. Put the FOD inside the drum. Even if you fill the can with junk, it stays safely inside the drum.

Container for FOD marked?

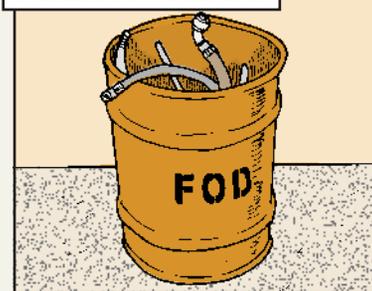


Are weatherproof items outside the hangar?

Not everything needs to be inside. Keep your hangar uncluttered

by using outside space for things that can stay outside, like shipping containers.

Shipping containers kept outside?

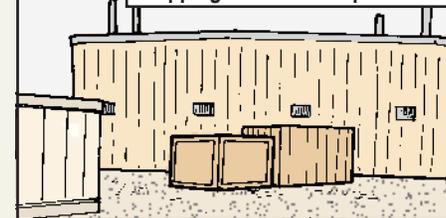

Are fire extinguishers handy and ready to use?

Make sure all fire extinguishers are fully charged, and their inspection dates are current. For fire prevention, NSN 4210-00-257-5343 gets a 20-lb fire extinguisher and mounting bracket.

Have you prevented static electricity?

If there's a leak in an aircraft fuel system, a spark can ignite the fumes. To stop sparks, all aircraft must be grounded. If there's a chance of someone tripping over the grounding wire, make it more visible with red tape.

Is your powered ground support equipment parked out of the way?

Paint lines on the floor to reserve parking places for your ground support equipment. Reserve places for jacks, maintenance stands, and ground-handling wheels, too.

How'd you do on the questions? Remember, there's always room for improvement. A clean, well-organized hangar is a safe place to work, and a sign of a first-class maintenance operation.

Bad Chip Detectors Must Go!



Do NOT use chip detector, part number (PN) 70351-08249-101, in the UH-60A/L accessory module or in the UH-60L input module. Its probe is too short to open the self-closing valves in these modules. That means oil and metal chips do not pass the detector. The result is that there may be delayed warning of an impending failure of an internal component.

Dispose of all on-hand stock of the bad chip detectors and inspect all Black Hawks to see if any are installed. The bad chip detectors have PN 70351-08249-101 stamped on the electronics pod attached to the end of the chip detector cable. The vendor number—G5034—is stamped on the end of the chip detector probe.

If you find bad chip detectors, replace them. The current TM 1-1520-237-23P-2 (Nov 98), shows PN 70351-08249-103 (NSN 1615-01-263-8725) as the replacement. But, PN 70351-08249-102 (NSN 1615-01-106-1944) is also OK.

The TM will soon be updated to add PN 70351-08249-104 (NSN 1615-01-459-7960) and the following:

CAUTION

Do not use PN 70351-08249-101 chip detector. If installed, replace with chip detector PN 70351-08249-104.

PS Magazine Index No. 54

Issues 554 through 565 (January-December 1999)

Subject	Issue/Pg	Subject	Issue/Pg
AIR COMPRESSORS			
250-CFM—Oil filter element and packing	554 61	Hydraulic system leak tip	555 25
AIRCRAFT GROUND SUPPORT EQUIPMENT			
AGPU checks	558 38	Roadarm actuator bolts	557 22
B1 Stand maintenance	559 36	ARMORED VEHICLE-LAUNCHED BRIDGE	
AIRCRAFT, AH-1, COBRA			
Gearbox housing corrosion	56 40	Bridge storage	556 20
AIRCRAFT, AH-64, APACHE			
30-mm gun—Recoil system care	560 36	Engine deck sling points	562 17
APU—Upper bracket attachment	560 37	Roadwheel hub and housing lubing	563 19
HARS circuit cards	557 52	Speed, broken rivets, launching sites	563 20
Main rotor lead lag link bearing tool	563 38	Track inspection	561 18
AIRCRAFT, CH-47, CHINOOK			
Driveshaft removal	562 37	BACK COVER	
Engine mount dogbone storage	560 35	Biodegradeable doesn't make the grade...	563 62
AIRCRAFT, OH-58, KIOWA			
Gearbox housing corrosion	564 40	Dispose of oil and other waste...	564 62
OH-58D—Gun pylon cable move	555 35	Filters will do their job—if you do yours!	557 62
AIRCRAFT, UH-1, HUEY			
Gearbox housing corrosion	564 40	Folding Kills Masks	562 62
AIRCRAFT, UH-60, BLACK HAWK			
APU starter gasket	554 61	Got PM?	555 62
Gearbox oil sample spills	561 37	If it's METAL and COLD, don't barehand it!	554 62
Input module seal removal	561 37	Prevent Tip-back!	559 62
Main rotor swashplate bearing retainer	561 35	Start? STOP!	558 62
Tail rotor blade boot tool	561 36	To make an accurate reading...	561 62
AIRCRAFT, GENERAL			
Aircraft washing	562 36	Twas late in December....	565 62
Aviation fuel testing	564 41	You aren't done LUBIN'...	556 62
Aviation vibration analyzer Y2K fix	565 47	BARBER KIT	
DA Pam 738-751 revised	562 35	Components	
Digital scale for resin mixing	559 35	562 56	
Dzus installation tool	559 38	BATTERY COMPUTER SYSTEM	
AIRDROP EQUIPMENT			
Drop zone panels	564 57	See COMPUTERS & SOFTWARE	
ALARM, CHEMICAL, M8			
M42A1 detector radiation hazard	554 40	BATTERY, DRY-CELL	
Purging	555 42	BA-5600A/U replaces BA-5600/U	
Test paddles, tether modification kit	559 57	565 61	
ANTENNAS			
AB-1339/G—Masthead caps	562 50	BA-5800—Differences explained	
AS-1729—MX-6707 matching unit draining	559 48	555 50	
OE-254—Antenna support sleeves	560 52	BA-5800/U, 5590/U—Disposal	
Feedcone assembly, elements, cables	560 48	563 48	
Vehicular—Antenna untied when parked	554 43	BB-390A/U Rechargeable—SOC, case	
Vehicular—Tying down and caps	561 48	556 46	
ANTIFREEZE			
Antifreeze NSNs changed	559 61	Lithium—Shelf life extension	
AOAP			
LCU-2000—Oil change interval change	557 61	559 51	
Sampling equipment, sample taking	563 58	PP-8444 battery charger use	
ARMORED COMBAT EARTHMOVER, M9			
Air tanks, NATO dust cap, sponson drains	563 22	559 50	
Ejector cylinder removal	564 24	562 52	
		BATTERY, LEAD-ACID	
		Operator responsibilities	
		564 8	
		Water, cleaning, protection	
		564 2	
		BINOCULARS	
		M22—Black, green differences	
		558 55	
		M22 Green—Rubber armor bushing	
		565 61	
		CABLES	
		CX-11230 Cables—Connectors and caps	
		561 47	
		CAN, FUEL	
		Cradle	
		562 57	
		Fuel can marking	
		562 57	
		CAN, WATER	
		Cap NS	
		563 61	
		Lid and cap assembly	
		558 61	
		Plastic—NSNs, care	
		556 60	
		Wick to dry out cans	
		554 57	
		CANNONS	
		Watervliet Arsenal hotline	
		561 61	
		CANTEEN	
		Parts	
		560 56	
		CARBINE, M4-SERIES	
		Carrying handle, extractor springs	
		564 35	

Subject	Issue/Pg	Subject	Issue/Pg
M68 Sight—Remove for storage	562 45	TAMMS input	556 51
Sight adjustment	565 38	Transport case manufacturer number	565 61
CARC		ULLS—Computer transport cases	562 60
Spot painting information	557 53	ULLS—System care	560 58
Unit ID marking colors	563 7	ULLS-G—AMSS reports	555 56
CARRIER, AMMO, M992		CONCERTINA WIRE	
APU filter wing nut	59 22	Posts, gloves	564 57
APU hydraulic check valve	561 20	CONSTRUCTION EQUIPMENT	
Engine access grill support	554 21	Fuel filter cleaning	559 24
Gear shift grease fittin	557 21	Hydraulic cylinder exercise	555 26
Radiator shroud shields	554 22	Parking in cold weather	564 22
Rear door knob staking	557 21	Tire PM	562 26
Roadwheel grease fitting cap	564 21	Tire cage for largest tires	555 7
Starter NSN	554 21	Tire tread direction	561 22
Vaneaxial fan differences	555 21	COOLING SYSTEMS	
CARRIER, PERSONNEL, M113 FOV		Antifreeze NSNs changed	559 61
Antifreeze drain extension	560 15	COTS	
Driver's hatch bumper	554 20	Aluminum—Rivets, straps, cover	564 56
Exhaust system clamps	561 17	Insect netting	562 55
M1068—Rubber floor matting	555 20	CRANES	
M113A2—Engine wiring harness clamps	565 15	Grove 22-Ton—Cab handholds	558 26
M113A2—Slobber cup draining	559 16	P&H 25-ton—Alternator	559 26
M113A3—Steer lock conversion	561 17	DECON	
M113A3—Transmission oil pressure unit	565 15	M12A1—Exhaust extensions, fuel, starting	563 44
M548—Door glass breakage	562 18	M17—Exhaust ports, valves, sensors, filters	559 54
M577—Rubber floor matting	555 20	M17—Spark plug, fuel pressure, blivet drain	562 46
Prop shaft bolt marking	557 18	DESKS	
Ramp hydraulic fluid reservoir check	557 19	Field desk, battle box, filing cabinet	558 54
CENTER SECTION		DETECTOR, CHEMICAL	
Be Prepared	564 27	CAM—Sampler check	559 57
Bugged About PM	565 27	EDITORIAL	
Godzilla	558 27	Between Winter and Summer	556 1
Have Grease Gun—Will Travel	557 27	Change Is Good	563 1
Hercules and the Unknown Labor	560 27	Fix Field Fixes	562 1
Not Your Father's TM	562 27	If You Don't Know, Ask!	555 1
Rustfinger	559 27	PS Magazine...It's the Commander's Call	558 1
The Case of the Confused NBC NCO	556 27	Take All You Want, But Want All You Take	560 1
The Grasshopper and the Ant	563 27	Take Care of Your People	559 1
The Private Truman Show	555 27	The Complete PMCS	554 1
The Yellow Brick Road to PM	561 27	The Maintenance Standard	561 1
CLOTHING		The Small Stuff	557 1
AAFES catalog	558 60	Times have Changed	565 1
BDU—Washing, drying, starching	565 48	Willing! Able! Ready!	564 1
Gloves for handling hot equipment	555 61	ENTRENCHING TOOL	
Hot weather boot care	559 59	Care, parts	556 56
Intermediate cold weather boot care	565 50	FACSIMILE, AN/UXC-7	
COMMUNICATIONS EQUIPMENT		Document holder use	554 46
Cleaning materials	563 49	FIRE CONTROL INSTRUMENTS	
Duster kits	554 45	AN/GYK-29 BCS—50-ft power cable	562 48
Environmental cleaning compounds	559 53	Compressed air for optics cleaning	555 21
Installation kits losing reportability	556 61	FIRE EXTINGUISHERS	
Installation kits—LINs dropped	559 53	M2 Burner—Fire extinguishers	559 60
COMPUTERS & SOFTWARE		FIRST AID KITS	
AN/GYK-29 BCS—50-ft power cable	562 48	Components	560 54
Cleaning supplies	557 57	FISTV, M981	
LC-305S optical reader	565 42	M249 machine gun not safe	556 61
Power supply settings	565 54	FORKLIFTS	
QDR filing on-line at ACALA	554 60	6K VR RTFL—Rear safety window	561 25

Subject	Issue/Pg
6K VR—Starter switch, fork shaft lube, hoses	560 24
Fire extinguisher	559 26
FOX NBC VEHICLE	
Air tank bleeding	563 46
Spectrometer, VOS care	557 40
G/VLLD	
Battery, tripod, traversing unit, cover	560 18
Eyepiece cup	556 19
Night sights contain radioactive parts	565 35
GENERATOR, SMOKE, M157-SERIES	
Before, After PMCS	555 44
Engine head blank use	554 38
Engine head, starting and stopping	565 40
Fuel, spout caps	561 44
GENERATORS	
15-, 30-KW—Acoustic supression kit parts	555 61
ASK parts	562 49
Trailer maintenance	555 46
GLOBAL POSITIONING SYSTEM	
AN/PSN-11—Batteries	557 50
AN/PSN-11—Parts	557 49
AN/PSN-11—Power hookups	561 50
AN/PSN-11—Reprogramming software	565 44
AN/PSN-11—Return with memory battery	559 52
Repair location addresses	559 52
GRADERS	
130G—Cab step replacement	560 25
130G—Hand throttle not cruise control	564 25
130G—Hydraulic oil reservoir check	557 23
130G—Hydraulic pump shaft grease fittings	557 26
GRENADE LAUNCHER, M203	
Firing pin check	562 41
Movement, breech insert, storage	555 40
GRENADE LAUNCHER, SMOKE	
M239,M250—Canvas covers	565 21
GUN, MACHINE	
Cocking lever hand position	563 41
M2—AOAP bottle to protect barrel threads	563 43
M2—Back plate latch	554 35
M2—Barrel locking spring, front sight cover	564 39
M2—Blank firing attachment	555 38
M2—Carrying, assembly, dry firing	556 36
M2—Stuck bolt removal	555 38
M2—Unlined barrels	560 43
M240—Be Your Own Inspector	561 40
M240—Buffer checks	557 38
M240—Part NSNs	560 42
M240B—No rack; modify M249 rack	561 61
M249—BYOI	558 42
M249—Barrel marking	562 44
M249—Extractor problems	559 46
M60—Bolt cleaning, PMCS, safety	556 38
M60—Bolt inspection	562 42
M60—Recoil spring and guide rod	554 37
M60—SMR code correction	558 60
M60—Stuck round removal	554 36
M66 Ring mount—Cover correction	555 61
Racks available through supply	557 39

Subject	Issue/Pg
Tripod—Corrosion treatment	554 35
HARDWARE	
Bolt, screw catalogs	563 26
Compound to absorb oil spills	555 61
Duster kits	554 45
Fluorescent marking tape	556 61
Gripping compound for fasteners	560 55
Key ring NSNs	559 61
Padlock NSNs	560 55
Screw, nut, washer assortments	554 48
Tiedown straps, hose clamps	558 59
HAZARDOUS MATERIALS AND WASTE	
Compound to absorb oil spills	555 61
HAZMAT training courses	558 59
Joint service pollution prevention on-line	562 59
PSCC answers questions	557 6
HEATER, IMMERSION	
Fuel tank filler plug leak	559 60
Rust prevention	554 56
HEATERS, PERSONNEL	
A-20 Global replaces heaters	564 20
Stewart-Warner—Burner repair kit parts	564 19
HIGH MOBILITY MATERIAL HANDLER	
Shock absorber info	564 23
Video on operating and maintenance	555 23
Video—Revised ordering instructions	557 61
HOTLINES	
Chemical/biological maintenance hotline	564 47
LOGSA hotline for logistics info	560 57
Petroleum center POCs	559 9
SBCCOM contacts	558 54
HOWITZER, SP, M109-SERIES	
Engine access grill support	554 21
Gear shift grease fitting	557 21
Radiator shroud shield	554 22
Recuperator pin check	559 61
Roadwheel grease fitting cap	564 21
Starter NSN	554 21
Vaneaxial fan differences	555 21
HOWITZER, SP, M109A6 PALADIN	
Breechblock closing spring tension	558 20
Fire extinguisher bracket	561 21
Generator container labeling	565 20
Segment board cleaning pads	562 19
Shock absorbers	556 21
Track end connectors	559 23
HOWITZER, TOWED, M119A1	
Recocking tool plans	558 21
Stuffing box plug	554 23
HOWITZER, TOWED, M198	
Cannon tube lube	560 21
HYDRAULIC SYSTEMS	
Hydraulic cylinder exercise	555 26
Hydraulic seals damaged by paint	556 8
IMPROVED TOW VEHICLE, M901	
See MISSILE, TOW (M901 ITV)	
INTERCOM SYSTEM	
AN/VIC-3—Ear cushions	560 47

Subject	Issue/Pg	Subject	Issue/Pg
KITCHEN EQUIPMENT		Avenger—FLIR lenses	558 36
Field feeding FM revised	559 61	Avenger—M3P machine gun lubrication	555 36
Food container painting	562 54	Avenger—RCU cables	558 35
Food container paint NSNs	565 61	Avenger—Remote control unit	557 36
Immersion heater—Fuel tank filler plug leak	559 60	Avenger—Seat differences	554 25
M2 Burner—Air valve assembly, safety kit	554 54	Avenger—Slip ring drain hole screen	559 43
M2 Burner—Checklist	558 56	Avenger—Tarp, heater, to dry system	561 38
M2 Burner—Fire extinguishers	559 60	Dragon—Sight system protection	554 24
MKT—Leveling before use	562 55	Hellfire—Missile, launcher connectors	563 36
LANTERNS		IFTE—Cooling, card power, troubleshooting	564 44
Propane lantern parts	561 56	Javelin—Rechargeable batteries	560 39
LOADER, SCOOP-TYPE		IFTE—Cooling, card power, troubleshooting	564 44
MW24C—Brake chamber bolts	564 26	Patriot—Cable strain reliefs	557 35
MW24C—Bucket lube points	562 21	Patriot—ECS, ICC lamps, power switches	564 43
LUBRICATION		Patriot—M860A1 trailer kingpin check	564 42
Have Grease Gun—Will Travel	557 27	TOW—M2/M3 launcher loading, MILES	556 40
Lubrication in desert conditions	560 2	TOW—Tripod care	554 26
Rustfinger	559 27	M901 ITV—M249 machine gun not safe	556 61
MAINTENANCE EXCELLENCE AWARDS		RCMAT items free for limited time	558 60
FY98 Army Maintenance Excellence Awards	561 60	Viper M68—Simulator firing	559 44
MAINTENANCE MANAGEMENT		MLRS	
DA Pam 738-751 revised	562 35	ATACMS handling, storage	562 61
TAMMS input	556 51	ATACMS—Handling cautions	565 36
MAINTENANCE, GENERAL		Cab lift mechanism lubing	561 16
LOGSA phone number changes	554 58	Cab raising	563 12
QDR filing on-line at ACALA (TACOM-RI)	554 60	Cab window washing	554 16
SBCCOM contacts	558 54	Cleaning tips	559 17
Toolroom organization	563 24	Coolant leaks	554 17
MASK, PROTECTIVE		Fan axial fan differences	558 15
M40, M42—Drink tubes	564 47	Fan shroud fins	554 18
M40—Deflector, voicemitter, nose cup	558 44	Fuel in oil prevention	556 18
M40—Cleaning	563 47	Fuel shutoff lever locknut	555 19
M40/M42—Eyelens cleaning	560 46	Hoist cable	559 18
M40/M42—MWO installs clamp	555 61	Hull drain after washing	560 14
M40/M42—New hoods	554 61	PM wrapup	557 12
M40/M42—Putting them on	556 45	Prop shaft screw torque	559 12
M40/M42—Stowing in carriers	560 44	Roadwheel matching	563 14
M41 PATS calibration	554 41	Track pad, cab hinge nuts	554 18
M42—Handling, outserts	559 56	Track wear gauge, homemade	558 14
MINE CLEARING EQUIPMENT		MOBILE FIELD KITCHENS	
MICLIC—Brake hoses, tires and track	565 24	See KITCHEN EQUIPMENT, MKT	
MICLIC—Continuity tests	555 22	MOBILE SUBSCRIBER EQUIPMENT	
MICLIC—Hand pump fluid change	557 23	Loop interface tester	564 53
MICLIC—Launcher travel tiedown	562 20	Remote affiliation indicator	555 49
MICLIC—Mounting on AVLB chassis	560 20	MORTARS	
Mine clearing blade B Y O I	564 12	M120/M121—Tube cleaning, storage	564 38
Mine clearing blade motors, lifting belts	564 14	Watervliet Arsenal hotline	561 61
Mine clearing blade—Lubrication	563 18	MULTIPLE LAUNCH ROCKET SYSTEM	
MINE DETECTOR		See MLRS	
AN/PSS-12—Head, pole, night operation	565 22	NBC EQUIPMENT	
MINE DISPENSER, M139 VOLCANO		Chemical defense website	554 61
Locking pins, cables, DCU indicators	560 22	Chemical/biological maintenance hotline	564 47
MISSILES, GENERAL		M41 PATS calibration	554 41
Avenger—Battery power warning light	559 42	NIGHT VISION EQUIPMENT	
Avenger—Boresighting target	560 38	AN/PVS-5C/7A/7B—Battery check	560 47
Avenger—Caps for launchers	562 38	AN/PVS-7—Lens cap	554 61
Avenger—Door latch adjustment	563 35	AN/PVS-7B—Packing instructions	556 48

Subject	Issue/Pg
Sights for missiles contain radioactive parts	565 35
OFFICE EQUIPMENT	
Copier maintenance, paper	565 56
PADLOCKS	
Low-security padlocks	560 55
PAINT AND PAINTING	
Shop floor paint—Environmentally safe	565 51
Spot painting information	557 53
PISTOLS	
M9—Cracks and spring length	561 42
M9—Magazine care	556 35
M9—Sharpshooting tips	562 40
POL	
350-GPM pumps—Fuel/water separator	565 9
Fuel can marking	562 57
Fuel tanker grounding and bonding	562 10
Fuel tanker—Grounding studs	555 9
Petroleum center POCs	559 9
POWER SUPPLY	
UPS battery check	562 53
PS MAGAZINE	
Distribution instructions	557 58
Distribution quantity requirements	560 1
Issues posted on Internet	562 61
PUBLICATIONS	
DA Pam 738-751 revised	562 35
On-line sources of pubs	561 59
Tech manuals—Work packages	557 60
Tool supply catalogs on Internet	561 61
Work package manuals	562 27
RADIAC EQUIPMENT	
AN/PDR-75—Humidity indicator	554 42
AN/PDR-75—Use, checking, calibration	557 43
AN/PDR-77—Handling, batteries	556 44
AN/VDR-2—Cables, packing, probe	556 42
IM-93—Storage box, cleaning	564 46
RADIO SETS	
AN/GRC-103—Air filter cleaning	563 52
AN/GRC-103—Power cable base plate	565 46
AN/GRC-122—Antenna mast	558 61
AN/VRC-12—Antenna hookup adapter	554 43
SINCGARS—Antenna cap	564 61
SINCGARS—BB-390A rechargeable battery	558 53
SINCGARS—Cable hookups	558 48
REELING EQUIPMENT	
CE-11—Parts, maintenance	563 50
RL-207—Lower V-belt	554 47
RESPIRATORS	
Care, cleaning	563 54
RIFLE, M16-SERIES	
M68 Sight—Remove for storage	562 45
Mount kit for HMMWV	563 61
Sight adjustment	565 38
Tips from marksmanship team	558 41
ROLLER	
RS-28—Seat cushion	557 26

Subject	Issue/Pg
SAFETY	
Countermeasures & Flightfax distribution	557 57
Respirator care, cleaning	563 54
Safety Center web site	557 61
SCRAPER, EARTHMOVER, 621B	
Battery	562 25
Battery box, tires, air tanks	562 22
Hydraulic fluid level	561 23
SHELTERS	
AN/ASM-146—Modification upgrade	560 53
Commo—Skin protection	554 44
SLEEPING MAT	
Mat tips for extreme cold	564 54
SMALL ARMS	
AN/PAQ-4B/4C Aiming lights	563 40
Armorer help	560 40
Armorer's tool kit supply catalog	560 42
Armorers—Cleaning, solvents, storage, caps	564 36
Small arms tool kit inventory tip	563 42
SMALL EMPLACEMENT EXCAVATOR	
Backhoe hydraulic hoses	561 26
Brake lines—Stainless steel replacements	559 26
Bucket rest, drains, travel locks	562 24
Cab tilt takes two	557 24
Hydraulic filter element	559 26
Hydraulic system slowdowns	555 24
Hydraulic thermal switch guard	560 26
Master brake cylinder dust boot	559 61
Shock absorber info	564 23
Side mirror	562 25
Tire pressure	562 24
Video on operating and maintenance	555 23
Video—Revised ordering instructions	557 61
SMALL UNIT SUPPORT VEHICLE	
Cooling system bleeding	555 19
Engine fire system checks	565 9
Fire extinguisher	554 22
Grill cover use	555 18
Grill covers	565 18
Steering damper pressure	564 18
SMART	
Program address	555 54
SMART program	561 52
STEAM CLEANERS	
Freeze protection	564 59
Fuel—JP-8 OK	556 58
Repair parts, maintenance info	556 59
SUPPLY	
BII, COEI, AAL explained	561 58
DESEX points of contact	557 61
GSA customer service help center	563 61
I&S codes	565 58
JR2020 Bar code scanner batteries	564 48
LC-305S optical reader	565 42
LOGSA phone number changes	554 58
Priority designator use	562 58
Reduced price initiative	564 60

Subject	Issue/Pg	Subject	Issue/Pg
Repair parts shipment tracking	555 60	Drill chuck keys	554 52
SMR codes explained	556 52	FLUX multimeter fuses	556 61
TANK, FABRIC		Hydraulic jack checks, fluid	564 61
Repair kit for fabric tanks	564 58	Magnetic retrieval tool	556 23
TANK, M1-SERIES		Mechanics tool kit with warranted tools	559 61
Ammo frame cotter pin	560 17	Motor vehicle tow bar checks	559 10
EMFS connector caution	558 13	Multipurpose tool	556 26
Engine exhaust seal	556 12	Puller kit, NSN 5180-00-423-1596	556 24
Exhaust deflector plans	562 13	Radiator testing kit adapter kit	565 7
Exhaust grill seal installation	565 13	Small arms tool kit inventory tip	563 42
Fire extinguisher label for HALON	558 12	TIPS address	555 54
Firing mechanism assembly	562 12	TK-101/G electronic tools kit list	557 44
Fuel filter retainer retained	555 15	TK-105A/G—New electronics tool kit	562 51
Hub and axle parts	558 13	Tool supply catalogs on Internet	561 61
Hull drain valves	561 13	Toolbox warning flags	554 50
Hydraulic manifold clamp	556 13	Toolroom organization	563 24
Inlet guide vane pin	554 15	Truck wheel lifts	563 11
M1A1—Race ring seal check	565 14	Wheel weights for balancing	555 6
M1A1—Wiring harness change	559 15	Wrecker—Welding torch parts	554 51
Mine blade repair	562 14	TRACTOR, D5B	
Mine clearing blade B Y O I	564 12	Sprocket tooth check	558 25
Mine clearing blade motors, lifting belts	564 14	TRACTOR, D7G	
Mine clearing blade—Lubrication	563 18	AOAP, slave receptacle caps	561 24
Muzzle boresight device flag	557 17	Fan pulley lube, fan blade screen cleaning	558 24
NBC filter warning lights	560 17	Governor control linkage lube	561 25
Roadwheel hub lubing	554 15	Moldboard cutting edge check	564 25
Roadwheel nut torque	565 61	Sprocket tooth check	558 25
STE-M1/FVS test set testing	554 19	Steering brake adjustment	557 25
Smoke generator fuel requirement	561 13	Track shoe nuts	558 26
Spent ammo frame pins	554 14	Undercarriage inspection	558 22
Startup, shutdown process	563 16	TRACTOR, D8K	
Tank fires	555 12	Sprocket tooth check	558 25
Thermal receiving unit cooler	561 12	Track shoe nuts	558 26
Track impact wrench	554 12	TRAILERS	
Track tension	565 12	1 1/2-ton—Payload ratings	555 10
Weapon station spur gear NSNs	558 13	Brake cylinder boot leak checks	563 5
TENTS		Dolly sets—parking	564 24
Canvas, polyester leak treatment	565 52	Generators trailer maintenance	555 46
Cleaning, patching, pins, rope	555 52	HEMAT—Cargo strap sleeves	562 11
Expandable frame tent NSN	563 61	M101/M116—Rear landing leg	560 9
Expandable tent thermal liner	565 61	M1076 PLS—Tow ring assembly	555 8
Fabric for tent repair	557 56	M149A2 Water—Fiberglass tanks replaced	560 10
Soldier crew tent	557 54	M149A2 Water—Tank cleaning	554 10
TEST EQUIPMENT		M796 Bolster—Retractable support	560 11
FLUX multimeter fuses	556 61	M989A1 HEMAT—Brake parts	560 11
STE-M1/FVS test set testing	554 19	M989A1 HEMAT—Tie rod nuts	560 11
TIRES		Prevent Tip-back!	559 62
Buffing fluid NSNs for repairs	560 10	Safety chain hooks for larger shackles	560 9
Construction equipment tire direction	561 22	Trailer backing techniques	561 2
Rubber preservatives allowed	556 4	TRAILERS, SEMI	
Tire cage for largest tires	555 7	Brake cylinder boot leak checks	563 5
Tire chain NSNs	562 9	Fuel tanker grounding and bonding	562 10
Tire pressure gauge	557 11	Landing gear pads	558 10
Wheel weights for balancing	555 6	M1000 HET—Gooseneck safety checks	563 9
TOOLS		M1000 HET—Hydraulic breather NSN	560 10
Antifreeze and battery tester check	564 6	M1000 HET—Hydraulic valve breather	556 11
Bolt size, thread pitch gauge	556 22	M1000 HET—Load binder, chains NSNs	558 11
Contact pin straightener	557 61	M1000 HET—Ramp pivot shafts not lubed	557 7

Subject	Issue/Pg	Subject	Issue/Pg
M172A1—Brake drum	560 11	TRUCK, 5-TON, M939-SERIES	
M860A1 Patriot—Fenders	556 11	A2—Turbocharger	556 11
M870/M870A1—Purpleheart wood decking	560 8	A2-Series—Battery OFF to disconnect CTIS	557 6
M870A1—Truck wrench, handle NSNs	560 11	Air brake governor	561 5
M872-Series—Bends, tiedowns, boxes	563 2	Brake master cylinder	562 61
M872A3—Brake shoe kit	560 10	CTIS extension valve	557 11
M900-Series Tankers—Axle grease retainer	560 11	CTIS—Hub air seal installation	565 8
M900-Series Tankers—Engine fuel pump	562 61	Door handle position	555 4
M916/M970—Trailer brake check	563 6	Exhaust stack cap	561 61
M967/M969/M970 Tankers—Air line check	561 10	Heater blower motor	559 61
TRAINING		Heater parts left out of manual	554 11
Army correspondence course on Internet	564 61	Lifting shackle NSNs	556 10
BMOC enrollment info	556 61	M929/M930 dump truck care	557 4
Correspondence courses	559 60	M929/M930 dump truck mud flaps	558 8
E-mail address for DAVIS/DITIS	563 61	Spring brake MWO	558 60
Video web site	559 58	Steering gear grease fittings	562 8
TRUCK, 1 1/4-TON, CUCV		Windshield washer, brake alcohol bottles	558 7
Crankcase depression regulator valve	554 8	Wrecker—Welding torch outfit parts	554 51
TRUCK, 1 1/4-TON, HMMWV		TRUCK, FMTV	
Air cleaner weather cap spacing	565 5	5-Tonner—Brake caging	559 4
Antenna rubbing patch	554 9	Auxiliary oil cooler guard	559 2
Brake push rod binding	558 5	Battery wiring diagram	562 3
Brake warning light procedure	555 4	Cab air bag inflation	562 2
Cargo cover in white	564 61	Cab lowering method	559 3
Coolant overflow hose routing	558 3	Circuit breaker identification	561 8
Cooling fan shroud	558 4	Coolant overflow tube	554 6
Cooling system	561 6	Desert cover NSNs	564 61
Cover for intake manifold	558 5	Headlight lamp	558 61
Crankcase depression regulator valve	554 8	Heater controls	554 6
Engine debris removal	554 7	Hydraulic pump valves	555 2
Engines, transmissions, transfers, axles	565 2	Light problem solutions	560 5
Fuel filter drain tube	558 2	Radiator cover for cold	556 2
Fuel tank access panel	559 7	Soft top canvas support	562 3
Glow plug removal tool	559 6	Speedometer setting — See PS 564, Pg 61	559 4
M1097—Jack parts	558 61	Speedometer switch setting correction	564 61
Mirror spacer for secure mount	557 3	Steering wheel chain	556 3
Oil sampling valves	559 5	Winch switches prevent battery drain	558 6
Power distribution box	561 61	TRUCK, HEMTT	
Radiator grille mounting	559 7	Air filter element care	559 8
Radiator hose clamp position	556 5	Battery box mat for corrosion	560 7
Rifle mount kit	563 61	Crane control knob markings	557 9
Soft-top zipper care	561 7	Engine slobber tube kit	560 61
Special equipment shutdown	557 2	Fuel line fitting	556 10
Water crossover tube	562 61	Hose for oil change draining	558 8
Windshield crack protection	564 11	Hydraulic fluid level, filters	562 4
TRUCK, 2 1/2-TON, M44-SERIES		M977/M985 MHE crane use	560 6
Brake hydraulic vent line	555 5	M978 tanker—EMERGENCY check	558 9
Charged air cooler	562 61	M978 tanker—Filter service schedule	563 61
Fuel/water separator element	560 61	M978 tanker—Fire extinguisher	560 61
Technical manuals detailed	562 8	M978 tanker—Fuel transfer hose	565 10
V-belt change	558 61	M978 tanker—Locks to secure rear doors	562 5
TRUCK, 20-TON DUMP, F5070		M984 wrecker—TM -10 Appendix B NSNs	557 10
Cold weather starting	565 6	M984A1 wrecker—Towbar lift cylinder lines	563 10
Hydraulic dump cylinder leakage	564 26	Spotter mirror	556 6
Wiring diagram available	556 61	Steering column nut	562 61
TRUCK, 5-TON, M809-SERIES		Tie rod parts	565 11
Wrecker—Welding torch parts	554 51	Tire matching and use	559 61

Subject	Issue/Pg	Subject	Issue/Pg
TRUCK, M1070 HET		Cargo hatch warning light	557 16
Air cleaner stud NSN	556 7	Coax machine gun boresighting	561 15
Power steering pump	556 10	Cold weather starting	564 16
Steering hose rerouting	563 8	Driver's uparmor hatch handle	559 14
Wide angle mirror move	557 8	Gun elevation drive troubleshooting	555 16
TRUCK, M911 C-HET		Hatch interlock switch guard screw	563 15
Radial tires	561 10	M242 Gun—Ammo chute damage	559 15
TRUCK, M915-SERIES		M242 Gun—Connector check, solenoid	556 14
Air dryer dessicant	557 8	M242 gun—Feeder manual cycle check	563 15
Cotter pin for hood, battery box	556 11	M242—Receiver rail damage	565 17
Fifth wheel lubrication	563 6	M2A2/ODS—Cargo hatch latch screws	565 16
Freightliner brush guard drain	554 11	Periscope stowage	558 17
Light switch	555 3	Prop shaft screw torque	559 12
M915A1—Brake shoe kit for front axle	560 10	Roadwheel matching	563 14
M915A1-Series—Transmission shifting	565 11	STE-M1/FVS connector cleaning	558 16
M915A2/M916A1—Blackout marker light	561 61	STE-M1/FVS test set tesing	554 19
M916/M970—Trailer brake check	563 6	Sight unit window cleaning	560 12
Tachograph key	556 10	TOW launcher loading handle	562 15
TRUCK, PALLETIZED LOADING SYSTEM		TOW launcher loading, MILES	556 40
Aftercooler filter, winch drum, CTIS tube	562 7	Tan-colored tarp	557 16
Air brake chamber	562 61	Track guard bolts	555 17
Air cleaner stud NSN	556 7	Turret fan box attachment	560 13
CTIS circuit breaker	562 61	VEHICLE, RECOVERY, M88A1	
Fuel tank check valve	562 61	Boom winch cable	559 20
Headlight assembly	562 61	Generator vent	558 19
Hydraulic pump fittings	560 61	Heat diversion addition	554 61
M1074—Fuel tank check valve	562 6	Main winch Cable	562 16
M1076 PLS—Tow ring assembly	555 8	Roadwheel, road arm lubing	563 19
M1077 Flatrack—Stowage box repair	555 8	Roadwheel nut troque	565 61
TRUCKS, GENERAL		Steering linkage lube	557 20
Air line alcohol evaporator	564 11	Track fender hinges	559 21
Antifreeze NSNs changed	559 61	Track inspection	561 18
Brake cylinder boot leak checks	563 5	VEHICLE, RECOVERY, M88A2	
CTIS extension valve	557 11	Oil changes, auxiliary winch	560 16
Dump hydraulic cylinder leakage	564 26	Oil samples, filters, winch	556 16
Fuel tanker grounding and bonding	562 10	Winch cable retrieval	558 18
Fuel tanker—Grounding	555 9	VEHICLES, GENERAL	
Hydraulic dump cylinder leakage	564 26	A-20 Global replacement heaters	564 20
Hydraulic seals damaged by paint	556 8	Antifreeze NSNs changed	559 61
JP-8 fuel use	556 9	Antifreeze & battery tester check	564 6
Motor vehicle tow bar checks	559 10	Compressed air can for optics cleaning	555 21
NATO slave receptacle cover	565 5	JP-8 fuel use	556 9
Radiator testing kit adapter kit	565 7	Key ring NSNs	559 61
Rear reflective decals	555 5	Lead-Acid battery care	564 2
Rubber buffing fluid NSNs for tire repairs	560 10	Lead-Acid battery care	564 8
Rubber preservatives allowed	556 4	Lubrication in desert conditions	560 2
Tire chain NSNs	562 9	Petroleum center POCs	559 9
Tire pressure gauge	557 11	Rubber buffing fluid NSNs for tire repairs	560 10
Trailer backing techniques	561 2	Stewart-Warner heater—Burner repair kit	564 19
Turn signal control	555 3	Tire cage for largest tires	555 7
Unit ID marking colors	563 7	Trailer backing techniques	561 2
Wheel lifts	563 11	Unit ID marking colors	563 7
Wheel weights for balancing	555 6	Winter driving techniques	554 2
Window cleaning	561 11	WATER PURIFICATION UNITS	
Winter driving techniques	554 2	Repair kit for fabric tanks	564 58
VEHICLE, FIGHTING, M2/M3 BRADLEY		WATERCRAFT	
Armor tile brush guard mounting holes	561 14	LCU-2000—Oil change interval change	557 61

Bugged About PM: *THE FUTURE*

GREETINGS AGAIN. REMEMBER ME? WE MET HERE LAST MONTH. I'M A MILLENNIUM BUG. NO, NOT THAT ORNERY Y2K CRITTER. I'M THE YPM BUG.

WHY PREVENTIVE MAINTENANCE?

AT THE START OF EVERY MILLENNIUM ONE OF MY FAMILY SHOWS UP TO ANSWER THE QUESTION, "WHY PREVENTIVE MAINTENANCE?"

LAST MONTH YOU MET MY FATHER AND HE TOLD YOU ABOUT THE LAST THOUSAND YEARS OF PM. NOW IT'S MY TURN TO TAKE CENTER STAGE AND TALK TO YOU ABOUT THE FUTURE.


NO, I'M NOT CLAIRVOYANT. BUT BASED ON THE PRESENT, I CAN PEEK AROUND THE CORNER AND GIVE YOU AN EDUCATED GUESS ABOUT THE NEXT 20 YEARS—THE YEARS YOU'LL BE DOING MAINTENANCE!

A GREAT DEAL OF TRAINING FOR FUTURE BATTLES WILL TAKE PLACE INSIDE THE CLASSROOM USING MODELING AND SIMULATION TECHNOLOGIES. THESE TECHNOLOGIES WILL CREATE VERISIMILITUDE—A BIG WORD THAT MEANS EVEN THOUGH IT'S FAKE, IT WILL SEEM REAL.




WOW!
THIS SEEMS
SO REAL!

FOR ALL YOU
STAR TREK FANS, THINK OF
CAPTAIN PICARD AND COMMANDER
DATA FIGHTING SIMULATED BAD
GUYS ON THE HOLODECK.
GET THE PICTURE?

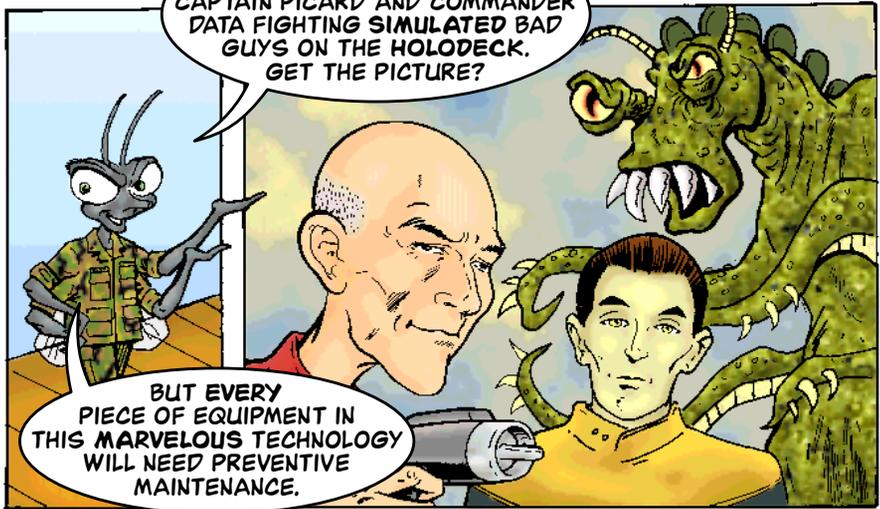

BUT EVERY
PIECE OF EQUIPMENT IN
THIS MARVELOUS TECHNOLOGY
WILL NEED PREVENTIVE
MAINTENANCE.

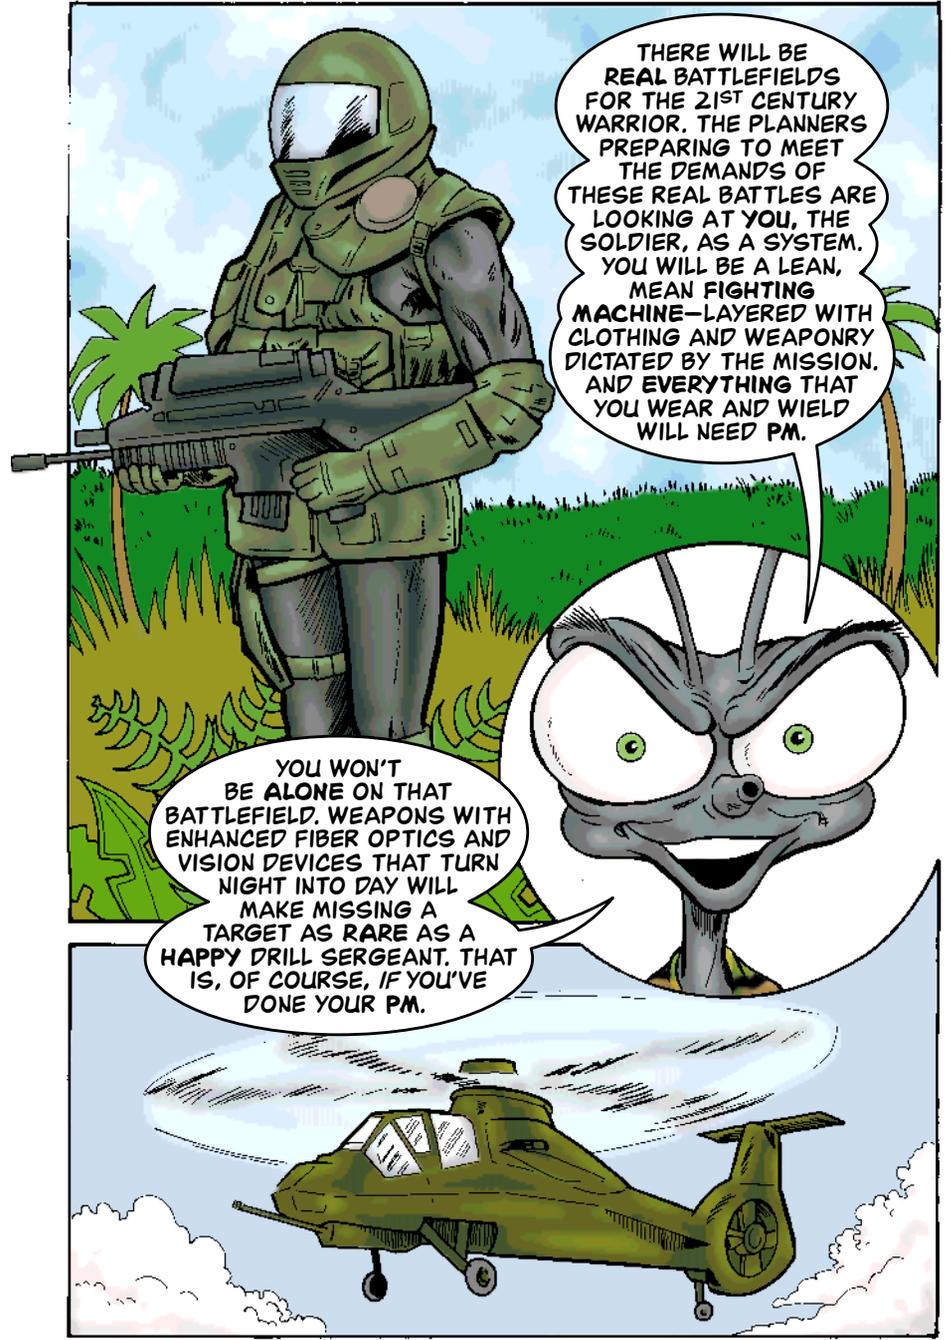

THERE WILL BE
REAL BATTLEFIELDS
FOR THE 21ST CENTURY
WARRIOR. THE PLANNERS
PREPARING TO MEET
THE DEMANDS OF
THESE REAL BATTLES ARE
LOOKING AT YOU, THE
SOLDIER, AS A SYSTEM.
YOU WILL BE A LEAN,
MEAN FIGHTING
MACHINE—LAYERED WITH
CLOTHING AND WEAPONRY
DICTATED BY THE MISSION.
AND EVERYTHING THAT
YOU WEAR AND WIELD
WILL NEED PM.


YOU WON'T
BE ALONE ON THAT
BATTLEFIELD. WEAPONS WITH
ENHANCED FIBER OPTICS AND
VISION DEVICES THAT TURN
NIGHT INTO DAY WILL
MAKE MISSING A
TARGET AS RARE AS A
HAPPY DRILL SERGEANT. THAT
IS, OF COURSE, IF YOU'VE
DONE YOUR PM.

*What the future holds we don't know,
As on the river of time we all flow.
But one thing is certain,
We'll surely be hurtin',
If PM's not the star of the show!*



WE HAVE THE WORLD'S BEST EQUIPMENT ... *Take care of it*

CHANCES ARE YOU'LL BE SHOWING YOUR GRANDCHILDREN MOTH-EATEN UNIFORMS AND FADED PHOTOS AND LYING ABOUT YOUR GOOD OLD ARMY DAYS LONG BEFORE THE FOLLOWING STUFF APPEARS IN THE INVENTORY.

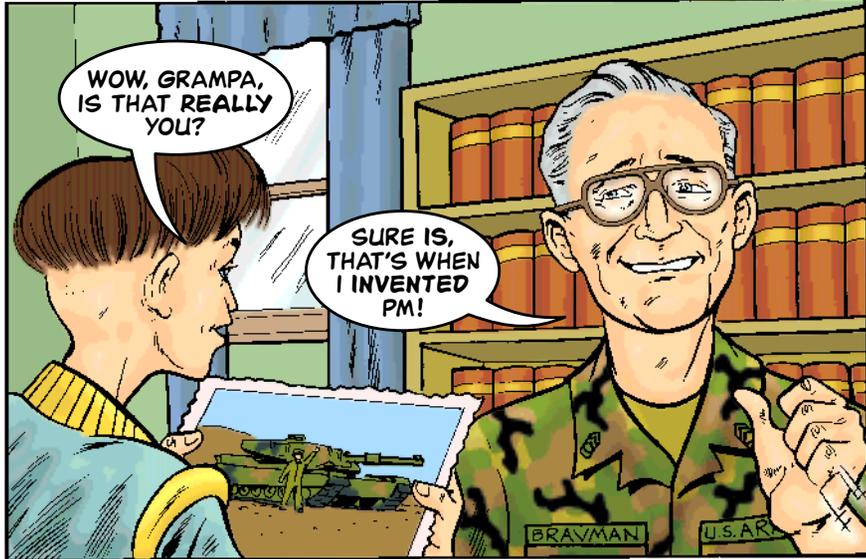

WOW, GRAMPA, IS THAT REALLY YOU?


SURE IS, THAT'S WHEN I INVENTED PM!

BRAVMAN U.S. ARMY




BUT TO GET TO POINT B, WE MUST START AT POINT A—AND THAT'S YOU! IF YOU DON'T DO PM NOW, PERHAPS YOUR DESCENDANTS WON'T HAVE THE CHANCE TO DO PM LATER. AND THERE WILL BE A LOT OF PM TO DO, TOO.

"FOR TRANSFORMERS TO TRANSFORM, SOMEONE BETTER BE READY WITH THE GREASE AND OIL. BECAUSE A HALF-TRANSFORMED TRANSFORMER IS A SITTING DUCK!"

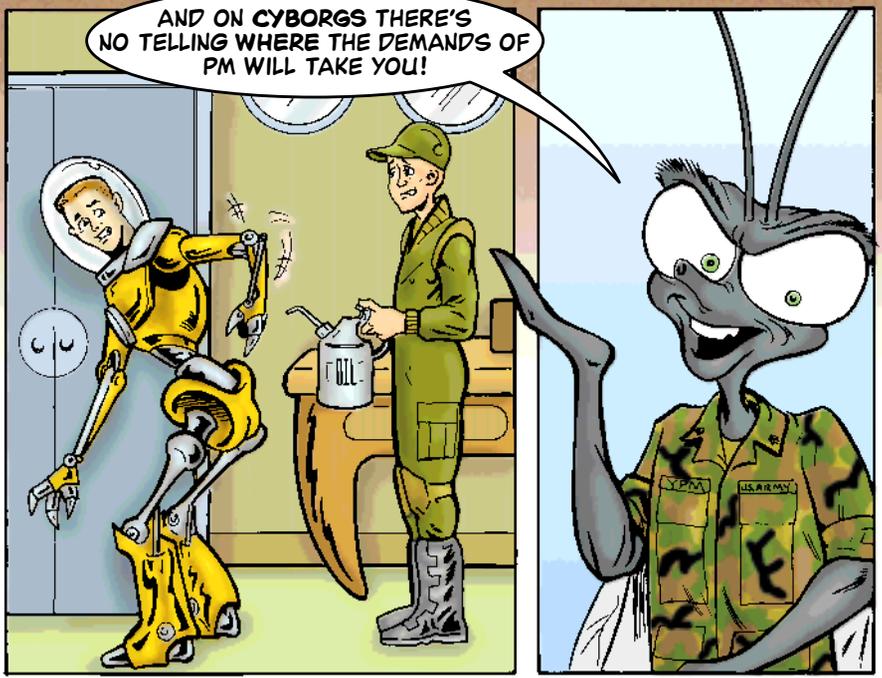

AND ON CYBORGS THERE'S NO TELLING WHERE THE DEMANDS OF PM WILL TAKE YOU!

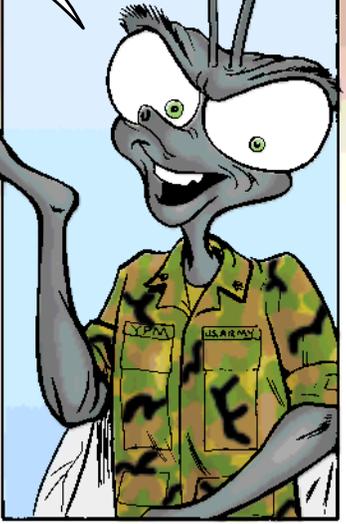

AS YOU CAN TELL,
I'M SERIOUS ABOUT PREVENTIVE
MAINTENANCE. AND YOU SHOULD BE,
TOO! YOU HAVE THE WORLD'S BEST
EQUIPMENT, BUT IF YOU DON'T TAKE
CARE OF IT, YOU'LL END UP WITH
THE WORLD'S BEST JUNK.
SO DO YOUR PM!

AND IF YOU
DON'T, I'LL
SHOW UP AND
"REMIND" YOU.

NSNs to the Rescue

Dear Editor,

In my role as the AMCOM logistics assistance representative at Ft Stewart, I've come up with a few tips that should help Avenger and Stinger units everywhere:

- The umbilical cap for the Stinger's M167 captive flight trainer and M160 field handling trainer is not listed in the Stinger TMs. Order it with NSN 6920-01-248-9245.
- The window glass and windshield NSNs are not found in the Avenger TMs, but in the HMWWV's TM 9-2320-280-24P-1. Order the window glass for the passenger door with NSN 2510-01-188-7381 and for the driver door with NSN 2510-01-189-9748. Order the passenger side windshield with NSN 2510-01-289-8258 and the driver side windshield with NSN 2510-01-289-2233.
- To inventory the S-250 shelter-housed Avenger organizational shop set, use TM 9-4935-432-24P.

Hope these tips help.

Johnny Johnson
Logistics Assistance Office
Ft Stewart, GA

FROM THE DESK OF THE Editor 


You LARs always seem to be on top of things. Thanks.

Generator PDU Ps & Qs

The power distribution units (PDU) for the Patriot's 30-KW generators are there for a purpose. They provide safety features that protect you and the equipment by allowing you to operate the generator remotely.

If you bypass the PDU, those safety features disappear. So never hook power cables directly to the generator, even if there's something wrong with the PDU. It's better not to operate than to bypass the PDU. The correct hookup procedure begins on Page 4-3 in TM 9-6115-647-14&P.

A number of PDUs in the field are missing their schematic plate. No replacements are currently available. Until they are available, use the wiring diagram on Page 4-32 in the -14&P.

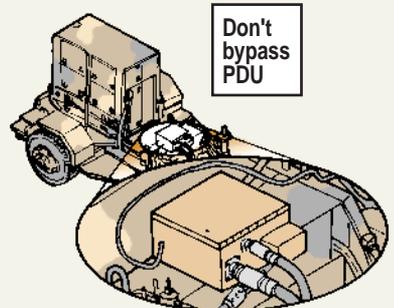


If your M224 mortars sit for months in the arms room unnoticed and uncared for, they eventually stop working. Lack of lubrication causes moving parts to bind and then freeze. Then when it's finally time to fire, the M224s give you the Big Freeze.

To prevent the Big Freeze, pay attention to lubing, mortarmen and armorers. Of course, follow the lubing instructions beginning in Work Package 17 in TM 9-1010-223-10 (Sep 98). But give the bipod extra attention—it needs it.

Lube the bipod's unpainted parts weekly with general purpose lubricant

Put GPL on unpainted surfaces weekly

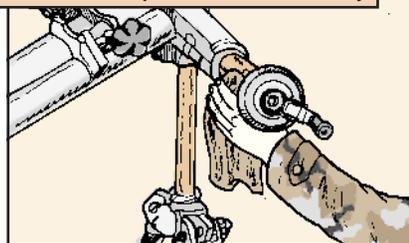


(GPL). Fully extend the left leg and run the traversing, cross leveling and elevation mechanisms through their full range so you can get at all unpainted areas.

If any of these mechanisms bind, the bipod needs to go to support. Only support can clean and lube them.


The Big

Support also needs to look at the handwheels if they can be turned more

Check hand wheels for binding and bipod response

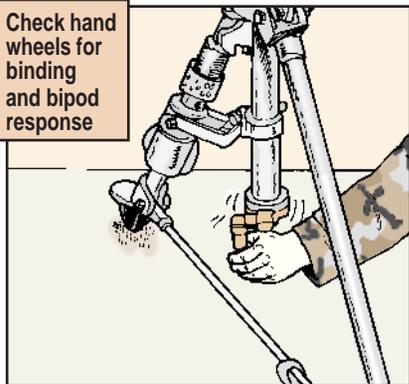

FORGET ABOUT ME AND I WON'T BE READY WHEN YOU NEED ME.

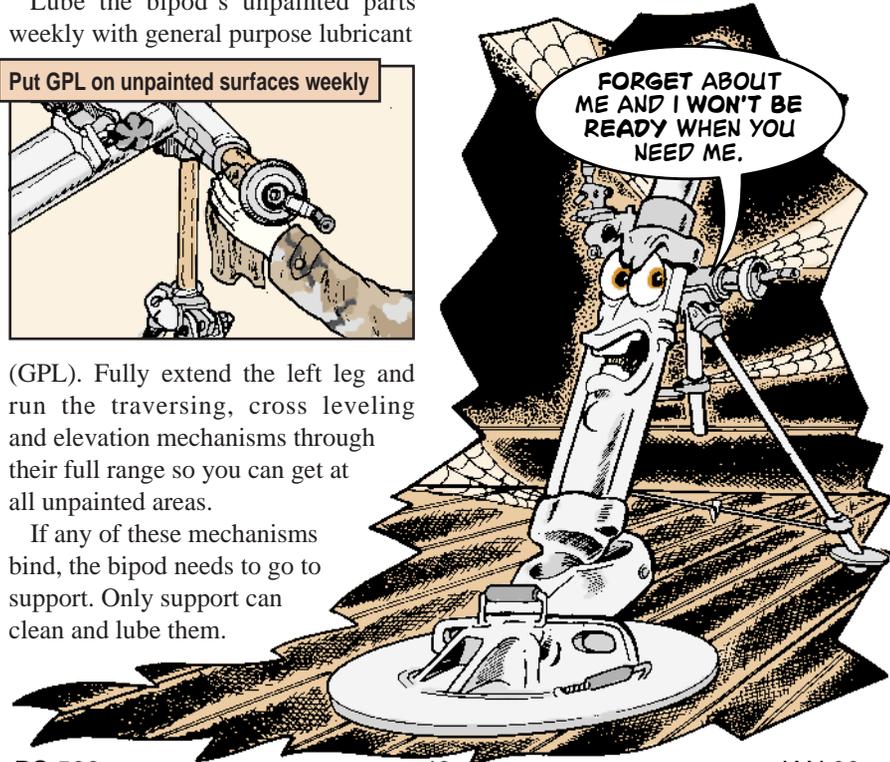


Freeze

than 1/8 turn without the bipod responding. Something's wrong.


Weekly, lube the firing mechanism with LAW through the fitting on the top of the handle. Lube the trigger and firing selector, then work the trigger back and forth until it moves freely. If the trigger still binds, support needs to look at it.

Make sure trigger doesn't bind

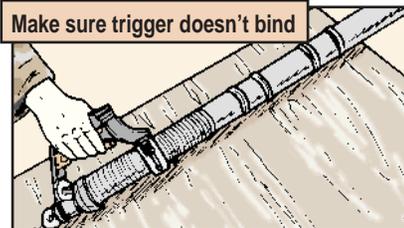

Pull the collar shock absorber assembly back and release it. It should return slowly and smoothly. If it doesn't, support needs to clean and lube it.


Pull collar back and release to check recoil

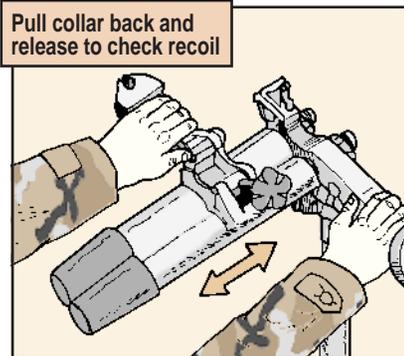

Test the M7 baseplate for 360° rotation and the M8 baseplate latch for smooth operation. If they bind, lube them with GPL.

Mounting Lights and Sights

YOU'VE GOT TO KNOW WHERE TO LOOK FOR MOUNTING INFO.

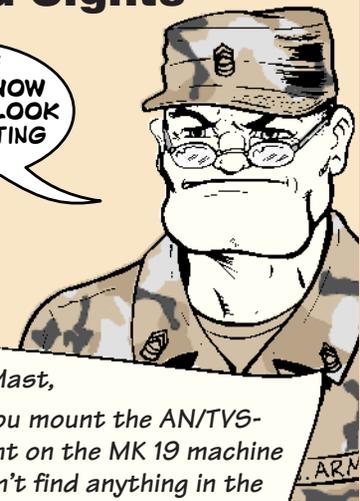

Dear Half-Mast,

How do you mount the AN/TVS-5 night sight on the MK 19 machine gun? We can't find anything in the MK 19 TMs on this.

1LT R.R.

Dear Lieutenant R.R.,

Rarely will you find mounting information for a night sight or aiming light in the TMs for the rifle or machine gun it's mounted on. Mounting info is always found in the TMs for the sight or light.

For example, mounting info for the AN/TVS-5 mount, NSN 5855-01-045-5482, is found on Page 2-8 of the AN/TVS-5's TM 11-5855-214-23&P.

If the night sight or aiming light TM is not listed in Appendix A of the weapon's TM, look for it in DA Pam 25-30, Consolidated Index of Army Publications and Blank Forms.


Half-Mast



GIVE IT THE GAS

probably need to be replaced. Tell your armorer.

Does bolt fall out of carrier?

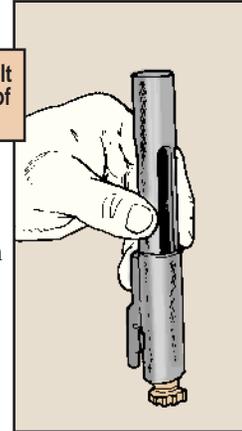


Cleaning carbon out of the gas system is also important. If the gas system's plugged, gas can't go where

it's supposed to. Clean the carrier key thoroughly with an old bore brush, CLP (or RBC), and a pipe cleaner. To get out every bit of carbon, work the bore brush all the way back in the key.


But never use a cotton tip instead of a pipe cleaner. The cotton comes off, mixes with lube and carbon, hardens, and plugs the gas port.

Use pipe cleaner—
not cotton tip—
on carrier key

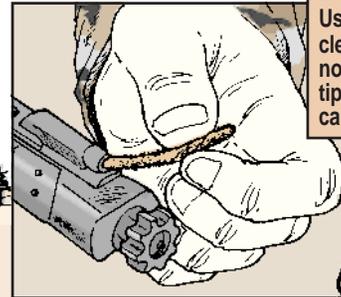


If the carrier key is dented, loose, or worn, it probably needs replacing. Tell your armorer.

Carrier key loose or dented?

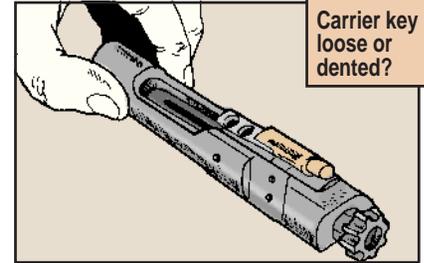

Clean the outside of the receiver end of the gas tube with a bore brush and CLP (or RBC). But do it carefully. If you bend the tube, it won't mate with the carrier key. Then gas can't push the bolt back.

When the handguards are off, keep your hands off the gas tube. It doesn't take much pressure to bend the tube.

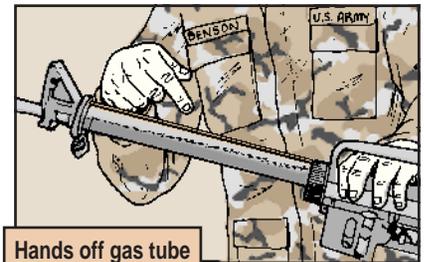


Hands off gas tube

Your M16 rifle needs gas to push its bolt back to the lock position after a round is fired. If it doesn't get enough gas, either rounds won't chamber or the rifle will suffer short recoil and your rifle stops firing.

Bad gapping of the bolt's gas rings is often the cause of a gas shortage. If the ring's gaps are lined up, too much gas escapes. The gaps must be staggered. If those on your bolt aren't, stagger them.

Stagger bolt ring gaps

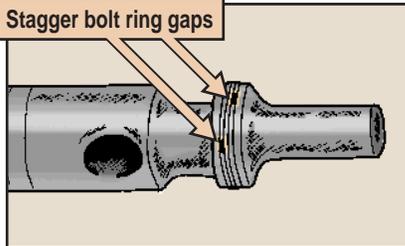

A good test of the condition of the gas rings is to stick the bolt in the bolt carrier. Turn the bolt carrier upside down. If the bolt falls out, the gas rings




Delightful Deconning with PM

Deconning with your M17 may not actually be delightful with this PM, but it will certainly be easier.


Descaling

Page 2-16 in TM 3-4230-228-10 says to check the outlet assembly of the heat exchanger coil for scaling during PMCS. If the scale buildup reaches 1/16 inch or more, your repairman can do the descaling procedure that begins on Page 2-82 of TM 3-4230-228-23&P. Otherwise, the burner will take forever to heat water.

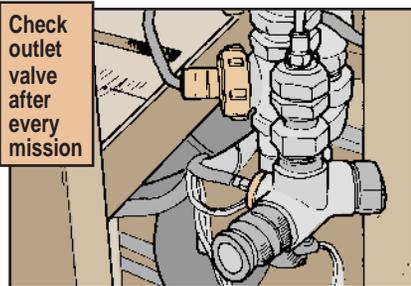

Hoses

Don't let the hose connectors drag on the ground. That breaks the quick-disconnects and the hoses can't be secured to the M17. Hold the hose by both connectors to drag it.

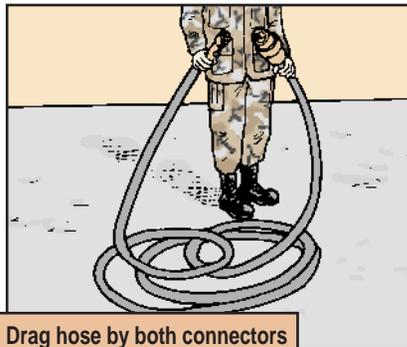

Shutdown

When you're through deconning, drain as much water out of the M17 as you can. Water left in the M17 leads to corrosion, which locks up the water


pump and causes leaks. To get out the water, run the engine up to MAX for 35-40 seconds and then throttle down to idle.





Never let the water pump run more than 1 minute without water. That cooks the pump.

Storage

If your M17 is going to sit in the motor pool for more than a few days, take off the water and fuel pump belts and store them in the M17 toolbox. You can just rotate the belts on and off the belt pulleys. If they're left on, they stretch and dry rot.

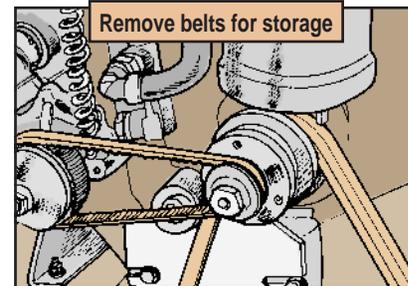

When you put the belts back on, make sure they're tight. If there's more than 1/4 inch of play, tell your repairman. He can adjust them like it says on Page 2-31 in the -23&P or replace both belts if necessary.

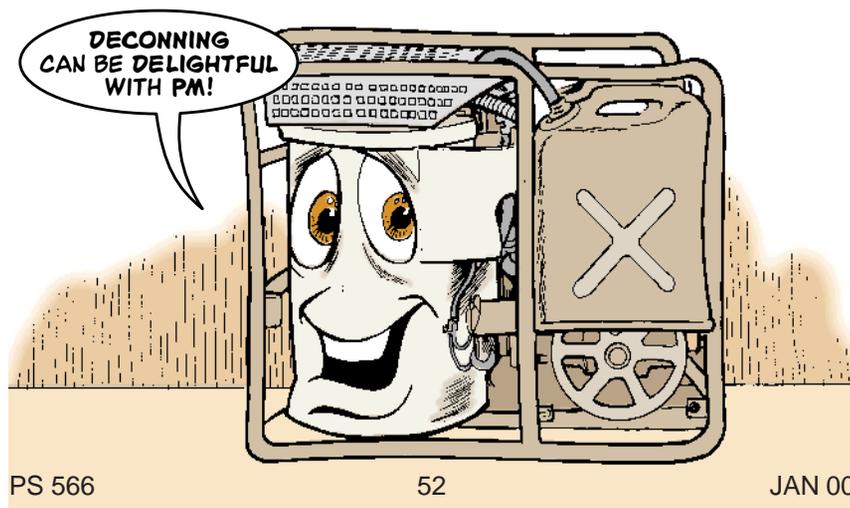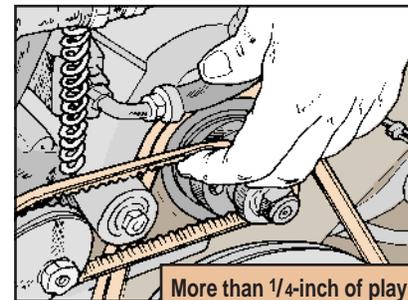

NBC Protective Masks . . .

No Polish Please

Stay away from plastic polish, NBC NCOs.

Several of the M40 and M42 TMs list plastic polish, NSN 7930-00-935-3794, for repairing eyelens and outserts scratches. But the polish can scratch lenses, so you shouldn't use it.

Optical cleaning compound, NSN 6850-00-592-3283, is the only thing that should be used on lenses. It can be found in the M40/M42-series unit maintenance -20&P technical manuals.

If you want to avoid scratched lenses, make sure that outserts are on the masks before they leave the NBC room and that everyone in your unit leaves them on.

Agent vs Agent

DS2 decon agent has to be powerful stuff to kill powerful nerve agents. That's why you must use and store it carefully in your M13 decons, NBC NCOs.



For one thing, DS2 is highly corrosive. You can't store and forget M13s filled with DS2, unless you want a big

mess of leaking DS2. Check the M13s every month for signs of corrosion. If you spot any, use a wire brush or sandpaper to rub it out. Use paint, NSN 8010-01-144-9874, to touch up bare spots.

Remember, never store DS2 in the same room as STB. If their fumes mix, they can start a fire.


Make sure everybody in your unit knows the correct way to open an M13 filled with DS2:

Unscrew the vent plug first before

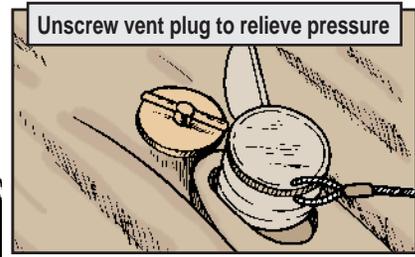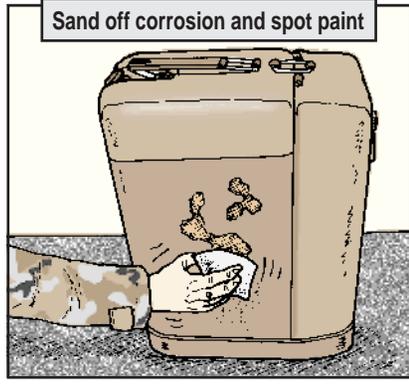



removing the fluid cap assembly and piercing the seal. If they forget, built-up pressure causes DS2 to spray all over the operator.

If the plug is stuck with rust, don't try to break it free with the spray wand. That just busts the plug. Instead, lay

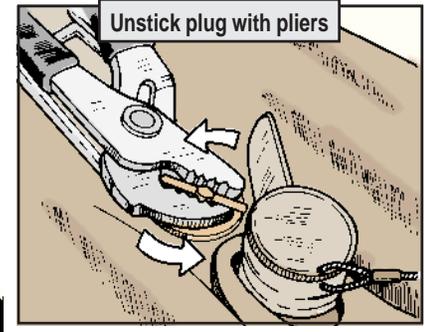

pliers flat along the plug's prongs, then twist counterclockwise until the plug breaks loose. If the prongs get bent, bend them back.

Also make sure every bit of DS2 has been pumped out of the pump and hose before storing them. Stretch out the hose and pump until nothing else comes out. DS2 eats up the hose and corrodes the pump.

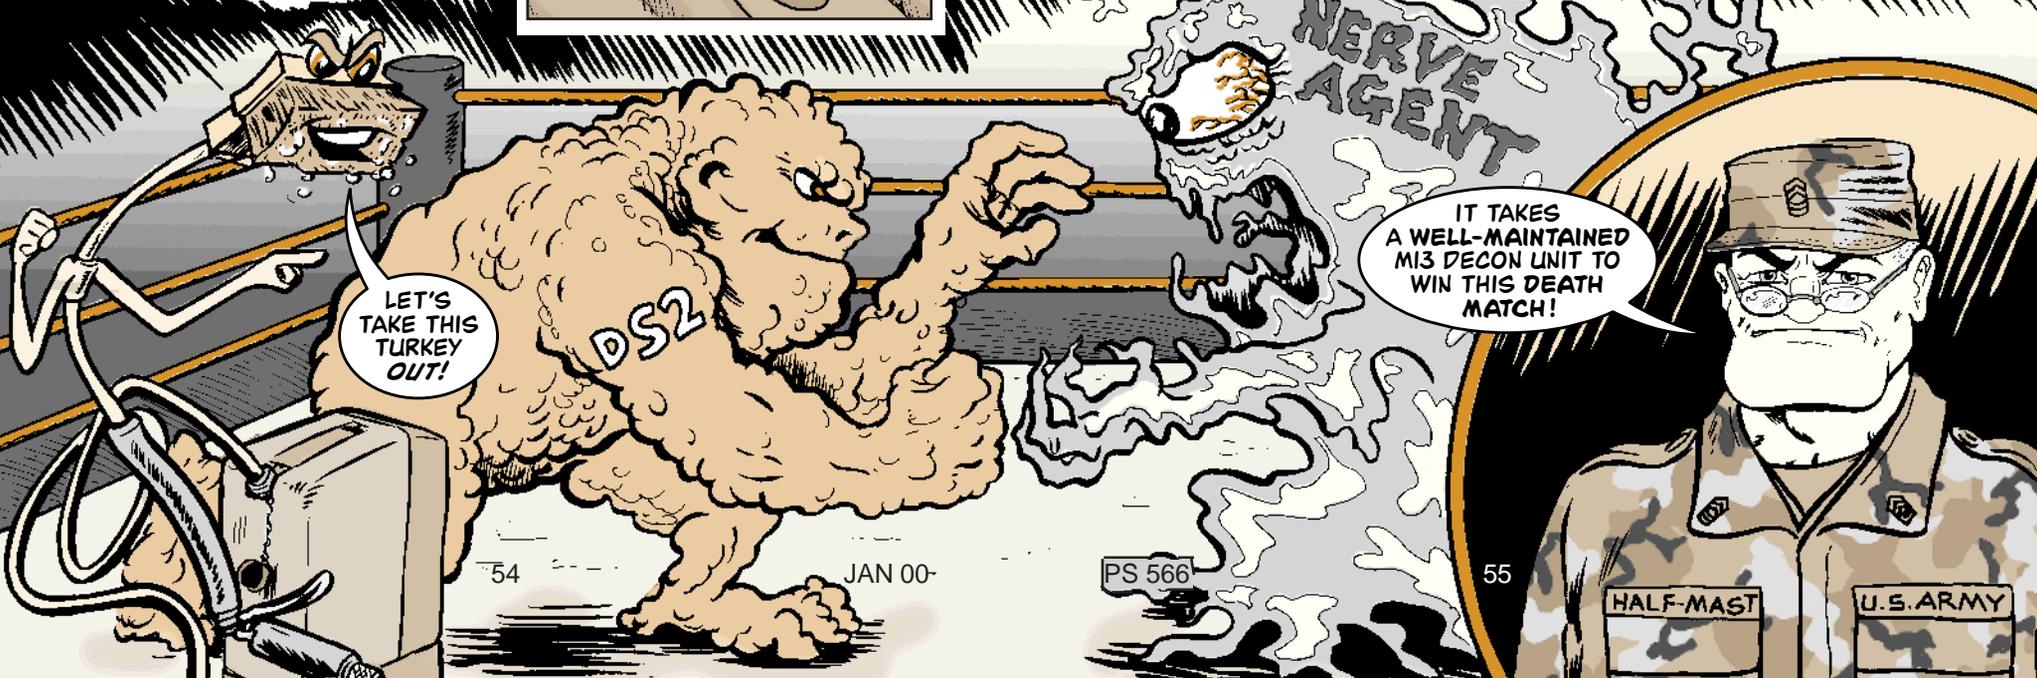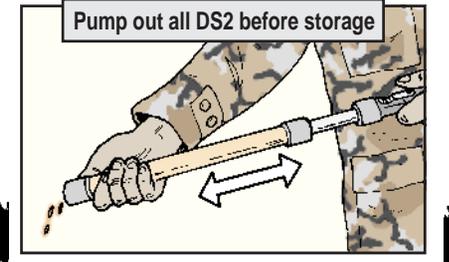

Truck Radio Installation Kits

GETTING THE RIGHT SINGARS INSTALLATION KIT FOR YOUR M939-SERIES VEHICLE AND ITS RADIO CONFIGURATION CAN BE A REAL CHALLENGE. BUT THE CHART BELOW SHOULD HELP CLEAR UP THE CONFUSION.

BUT WHAT ABOUT MY HUMVEE?

GETTING THE RIGHT RADIO INSTALLATION KIT FOR YOUR HUMVEE AND ITS RADIO CONFIGURATION CAN ALSO BE DIFFICULT. CHECK OUT THIS INFO FOR SOME HELP!



M939-Series Truck SINGARS Installation Kits

Radio (Series)	Vehicles	Kit	NSN
AN/VRC-87, AN/VRC-88 AN/VRC-90	M923-M939 (except M934 and M935 expando vans)	MK-2378/VRC (single radio, 1RT)	5895-01-225-0518
AN/VRC-87, AN/VRC-88 AN/VRC-90	M934, M935 expando vans	MK-2207/VRC (single radio, 1 RT)	5895-01-291-3215
AN/VRC-89, AN/VRC-91 AN/VRC-92	M934, M935 expando vans	MK-2331/VRC (dual radio, 2 RTs)	5895-01-292-6542
AN/VRC-89, AN/VRC-91 AN/VRC-92	M934, M935 expando vans	MK-2847/VRC (2 dual radios, 4 RTs)	5895-01-441-1338

HMMWV Radio Installation Kits

Radio	Vehicles	Kit	NSN
AN/VRC-46, AN/VRC-64 AN/VRC-160	M966, M996, M997, M998, M1025, M1026, M1036, M1038	MK-2502/VRC	5820-01-208-1901
AN/VRC-12, AN/VRC-47	M966, M998, M1025, M1026, M1036, M1038, M1097	MK-2503/VRC	5820-01-208-1902
AN/VRC-44, AN/VRC-48	M966, M998, M1025, M1026, M1036, M1038, M1097	MK-2504/VRC	5820-01-208-1903
AN/VRC-49	M966, M998, M1025, M1026, M1036, M1038	MK-2505/VRC	5820-01-208-1904
AN/VRC-87A, AN/VRC-87D AN/VRC-88A, AN/VRC-88D AN/VRC-90A, AN/VRC-90D	M966, M996, M997, M998, M1025, M1026, M1036, M1038, M1097	MK-2325/VRC	5895-01-225-0510
AN/VRC-89A, AN/VRC-89D AN/VRC-91A, AN/VRC-91D AN/VRC-92A, AN/VRC-92D	M966, M996, M997, M998, M1025, M1026, M1036	MK-2326/VRC	5895-01-225-3332
AN/VRC-89*, AN/VRC-91* AN/VRC-92*	M998, M1038, M1097	MK-2327/VRC	5895-01-229-1285
AN/VRC-87**, AN/VRC-88** AN/VRC-89**, AN/VRC-90** AN/VRC-91**, AN/VRC-92**	M998, M1038, M1097	MK-2328/VRC	5895-01-297-8000
AN/VRC-97	M998 (2-door)	MK-2564/VRC	5895-01-368-6231
AN/VRC-97	M998 (4-door)	MK-2564/VRC	5895-01-368-6230
AN/VRC-97	M1025	MK-2564/VRC	5895-01-261-2901
AN/VRC-91	M1025A2, M1114	MK-2801/VRC	5895-01-421-0798
AN/GRC-106, AN/GRC-106A	M998, M1038, M1097	MK-2506/GRC	5820-01-208-1905
AN/GRC-193A	M998, M1038, M1097	MK-2541/GRC	5820-01-227-5842
AN/GRC-213	M998, M1038, M1097	MK-2542/GRC	5820-01-227-0528
AN/GRC-213	M1025, M1026	MK-2585/GRC	5820-01-320-6746

* Any combination of two SINGARS radios.

** Any combination of one each -87, -88, -90 and one each -89, -91, -92.

AN/VRC-97 MSRT INSTALLATION KIT

There's a different installation kit for each vehicle in which the AN/VRC-97 mobile subscriber radio-telephone terminal (MSRT) is installed.

Each kit has the same designation, MK-2564/VRC, but each has a different NSN.

Here's what you need:

Vehicle	NSN
M1008A1	5895-01-261-2894
M1009	5895-01-261-2899
M1025	5895-01-261-2901
M113A1/A2	5895-01-261-2897
M113A3	5895-01-386-5938
M557A1/A2	5895-01-261-2898
M998 (2 door)	5895-01-368-6231
M998 (4 door)	5895-01-368-6230

You can also get a Stand-Alone Field Kit, MK-2565/VRC, with NSN 5820-01-246-6873.

Finally, get a copy of TB 11-2300-480-12. It has the installation instructions you'll need. And get a copy of TM 11-5820-1021-23&P for any needed replacement parts.



AS-3916, AS-1729 Antennas ...


Two Tiedowns and a Collet

The AS-3916 antenna is feeling a little slighted. Its cousin, the AS-1729 antenna, has its own TM, but the AS-3916 doesn't.

That shouldn't bother you, though. You can find repair parts for the AS-3916 in the SINGGARS manual, TM 11-5820-890-20P.



Check out Fig 108A. It has a couple of items you're probably looking for. Item 8 is the wire-rope tiedown assembly, NSN 4010-01-381-1581. Item 15 is the collet—locking nut—that holds the antenna on its base. It's NSN 1560-01-435-8079.

Tiedown and collet

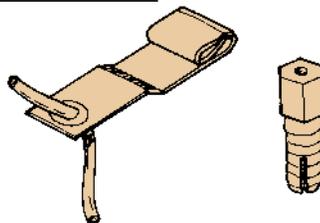


And just so the AS-1729 doesn't feel slighted now, we'll tell you that its fiber-rope tiedown assembly is NSN 4020-00-908-6416. It's Item 6 of Fig 1 in TM 11-5985-262-24P.

Tiedown assembly

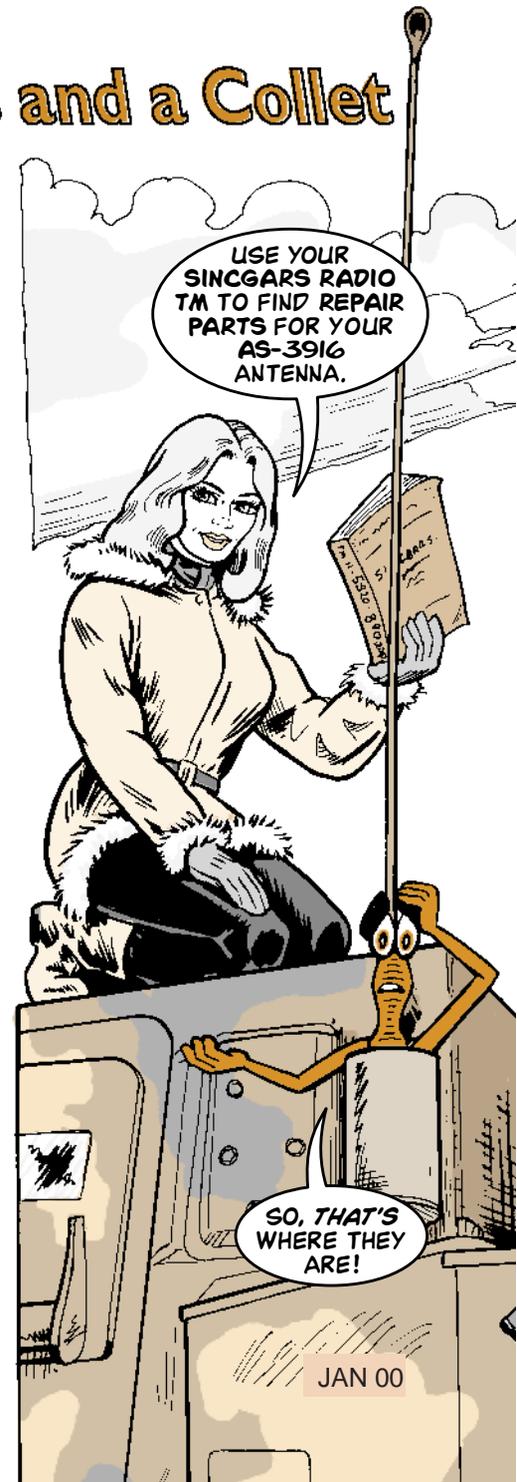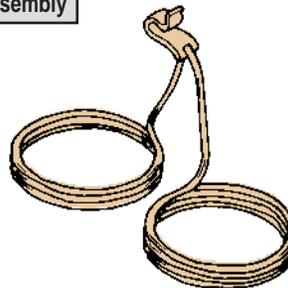

Battery Covers

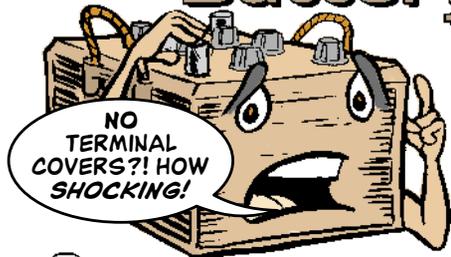

Quiz time. What is the purpose of battery terminal covers?

Don't know?


That's not surprising, because far too many 15-KW tactical quiet generators have uncovered battery terminals.

If you knew, they'd be covered!

The main reason for terminal covers is to prevent metal objects from touching the battery posts.

When metal touches either or both posts plus some other metal, at the least sparks will fly. At the worst, **you** could fly—backwards, that is, after a nasty shock.

Think the odds of that happening are small? Maybe so, but the generator's design greatly increases them. There's very little clearance between the metal door to the battery compartment and the negative terminal of the first battery.

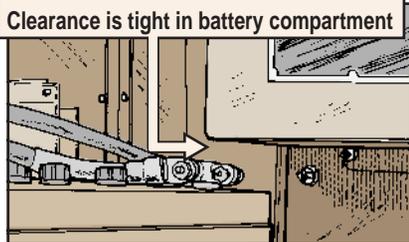


So put battery terminal covers, NSN 5999-01-382-8223, on your generator batteries right now.



Do it safely. Remember, the battery is live even when the generator is shut down.

Disconnect the negative lead first. That's the one that runs to the ground.

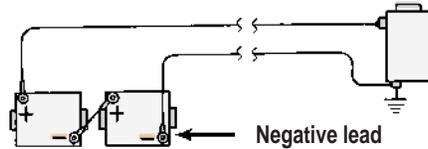

Negative lead is removed first and connected last

Then disconnect the interconnecting cable between the two batteries.

Now remove the positive lead.


While you're there, check the battery case for corrosion and damage. Check the cables and battery caps for breaks.

Wear gloves to do the inspection. Battery acid can burn your skin.

Clean and repair as needed following the good words in TM 9-6115-643-24.

Now put the terminal covers on and reconnect the battery—positive lead, interconnecting cable, and then negative lead.

KEEP EXHAUST COVERS

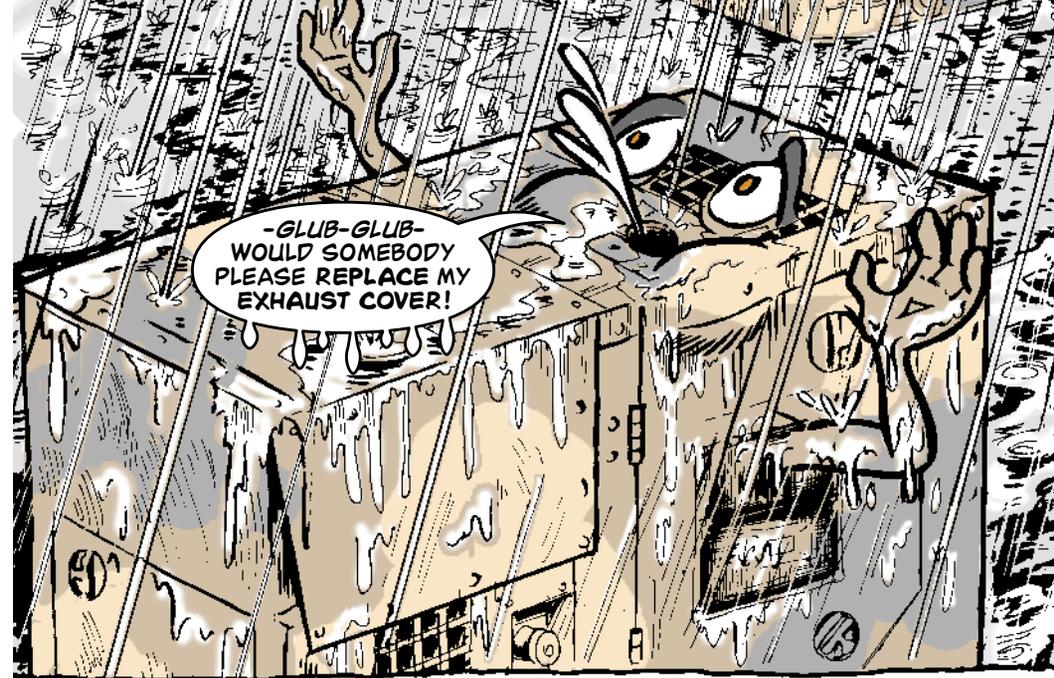

Tactical quiet generators (TQG) without exhaust covers are a sad sight without a cover, the exhaust system is open to whatever Mother Nature brings—rain or snow. Both mean corrosion in the system.


The covers go missing because their edges catch on camouflage netting and get pulled off, or they blow off going down the road. There is nothing to secure the cover to its hinge.

Here's how to make sure the cover stays on:

Remove the cover and its mounting bracket (hinge). Drill a 1/8-in hole in the center of each finger on the mount.

ing bracket, 1/4 inch from the end. Insert the fingers of the mounting bracket through the slots on the cover. Insert a cotter pin through each hole and spread it apart.

Put the mounting bracket back on the generator.

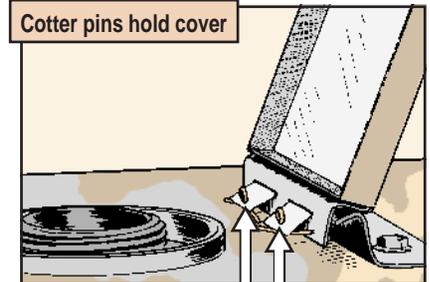

REPEL THOSE H₂O INVADERS



I'M SOAKED!
I THOUGHT THIS
C-COLD WEATHER
GEAR WAS WATER
R-REPELLENT!

YOU NEED
TO RESTORE
YOUR REPELLENCY.
ONLY DUCKS HAVE
BUILT-IN WATER
PROOFING!

ONCE YOU HAVE
THE REPELLENT, FOLLOW
THESE EASY STEPS (OR THE
MANUFACTURER'S LABEL) TO
RESTORE WATER
REPELLENCY.

1. Following the ECWCS care label instructions, run your clothing through the entire wash cycle and then run them through the rinse cycle again to make sure all soap residue is gone.
2. Next, set the water temperature to WARM and let the washing machine fill until all clothing is completely covered with water.
3. Add the recommended amount of repellent. If the directions are not clear, use 2 ounces for each jacket or pants and 3 ounces for jacket and pants.
4. Continue the wash cycle until the water drains. **Do not run the rinse cycle.** Rinsing removes the repellent.
5. Take the clothing from the washer and let it tumble dry at the highest heat recommended on the care label.
6. A light ironing helps improve repellency.

THIS TREATMENT
SHOULD LAST THROUGH
THREE OR FOUR NORMAL
WASHINGS.

If your post laundry does the work, no sweat. If it's up to you, and you can't get the repellent you need locally, see your supply sergeant. Units can order a case (24 eight-oz bottles) of repellent using NSN 8030-01-408-9446, through GSA or go directly to the manufacturer with an IMPAC card. Those suppliers and their product names include:


Evergreen Specialties, Inc. (Storm Shed),
(800) 330-8760 or fax (800) 834-1809;

M&M Technologies, Inc. (Protex 2000),
(800) 658-5958 or fax (302) 658-3734;

Caled Signal Chemical (X-Pel)
(800) 652-2533 or fax (973) 696-4290.

Normal washing removes the water repellency from your extended cold weather clothing system (ECWCS). When you're standing out in the cold is no time to find out that your clothing won't keep you dry. If you think your ECWCS has lost its water repellency, put that protection back in ASAP.

Dreamy New Technology

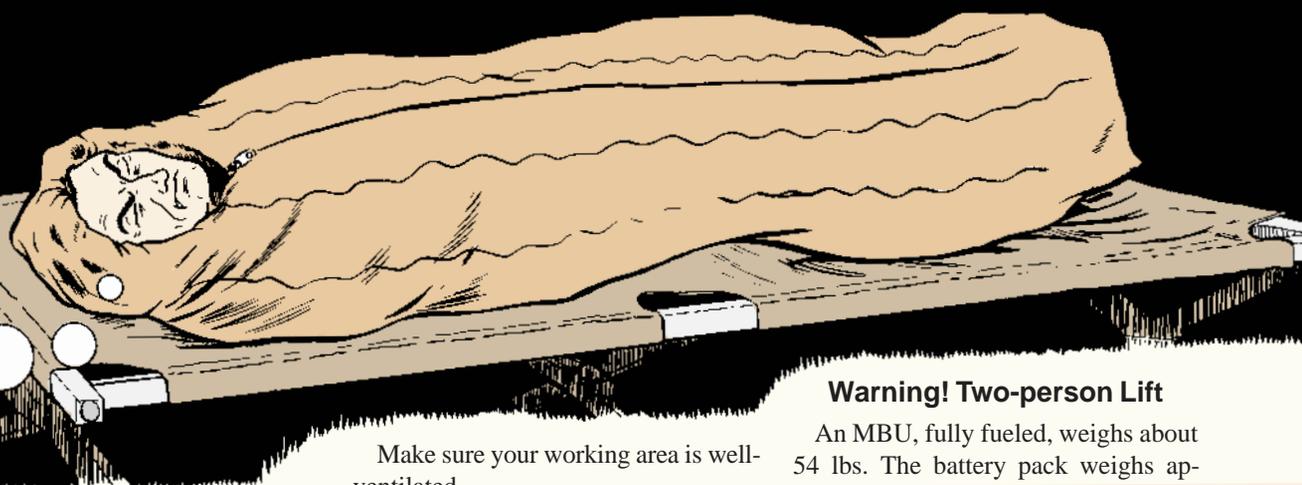

It's 0300. *Grooaaan!* Time to rise and shine if you're gonna get those M2 burners fired up in time to get breakfast on the line.

A few more *zzzz*'s would be wonderful, but it will take hours to get those burners fired up before hungry troops show up for breakfast.

The Light Dawns

Hold it—you don't have to get up yet! The old M2 burners in your unit have been replaced by modern burner units (MBU). They're sitting there, in place, fueled up and ready to light with the touch of a button. You can roll over and catch some more *zzzz*'s.

No, you're not dreaming. Though there are still more than 40,000 M2 burners in the field, the MBU is replacing them at the rate of several thousand a year.

The MBU is different in many ways from your old M2. Here are some tips from the headshed and TM 10-7310-281-13&P to keep in mind while you get used to your new burner.

Warning! Electric Shock

Repairmen, the MBU power converter uses high voltage. Always shut off the external power before you start any maintenance.

When you hook up the cables again, keep them out of the foot traffic—and make sure they are not lying in water.


Warning! Carbon Monoxide

Operators, the MBU produces carbon monoxide when it's operating, just like the old burners. You can't taste it, smell it, or see it, but it can cause drowsiness, headache, dizziness, and loss of muscle control.

Make sure your working area is well-ventilated.

Warning! No Gasoline!


Never use gasoline in the MBU—**Never!** Use **only** JP-8 or an approved substitute diesel fuel. Using gasoline creates the danger of fire and explosion.

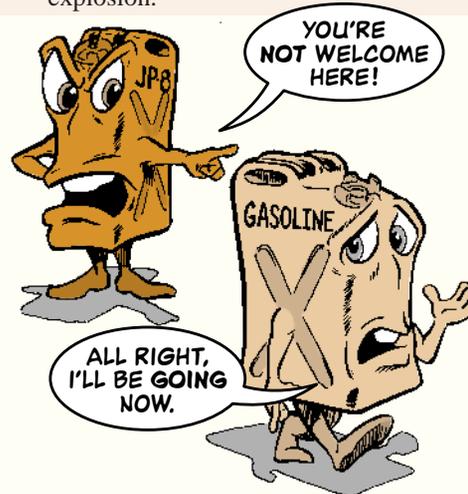

Warning! Two-person Lift

An MBU, fully fueled, weighs about 54 lbs. The battery pack weighs approximately 80 lbs. Save your back! Use two people to carry either one.

Use buddy system to carry MBU

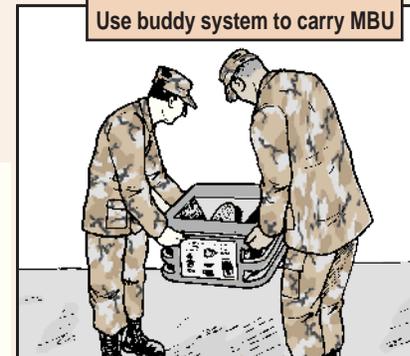

Warning! Noise

If more than six MBUs are operating at the same time in a field-feeding system, and you will be exposed to their noise for more than seven hours per day, wear hearing protection. They make enough racket to damage your ears.

Final Words from the Wise


Get an extra fuel filter, NSN 7240-01-462-6765, and air filter, NSN 7310-01-462-4913. The TM tells you to replace the fuel filter and air filter after 300 hours of operation. You only get one extra set of filters with the new MBU, so have replacements ready. Then you don't have to wait for them when the time comes to change them the second time.

Keep extra filters on hand



Keeping your MBU clean prevents corrosion and keeps sensors and vents from malfunctioning. The burner well must be kept clean. Wipe it off daily with a damp rag.

When the burner unit needs cleaning, wipe it off with rags and soapy water. Don't submerge it in water, or use a pressure washer to clean it. The

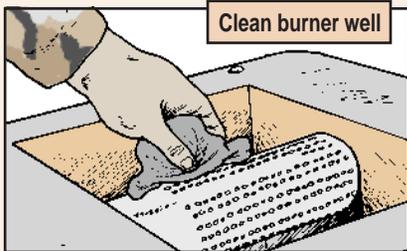

MBU has been designed to be water-resistant, but it is **not waterproof**. Towel it dry.


Pay special attention to the air vents on the regulator and float valve assemblies. They have to be clean to keep air flowing and your MBU's flame burning brightly. Keep them cleaned off with a clean paint brush.

Use a dry brush to clean all connectors, including those on the power cables.

Wipe the battery pack and power converter housing with a damp rag to remove any dust or stains.

Sweet Dreams

So, next time you wake up at 0-dark-30 for kitchen duty, you can roll over and snooze a little longer, thanks to the MBU.

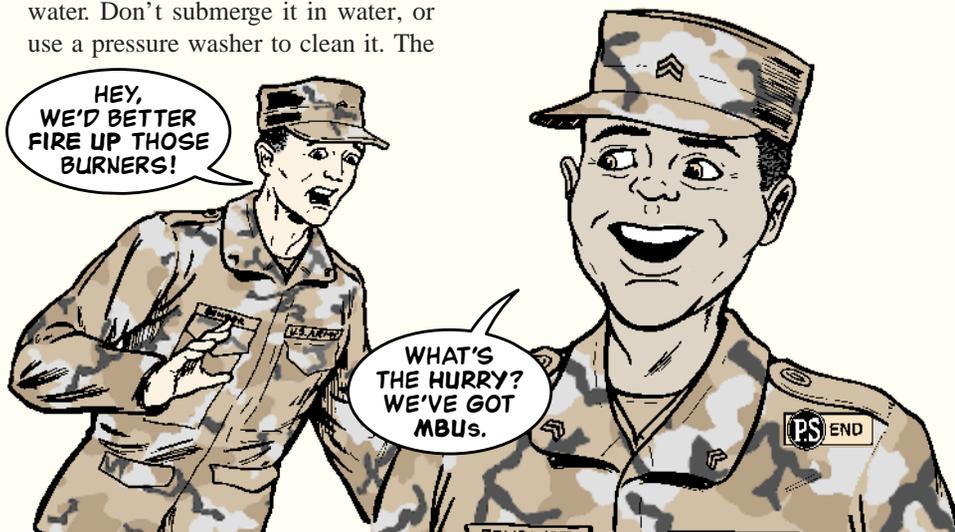

Taping Your Tent Together



Problem: You've got tents and tarps with small holes, leaks or tears. The damage isn't major yet, but it will be if you don't make repairs—soon!

Solution: Get a roll of tent repair tape, NSN 8315-01-423-6231, that's 3 inches wide and 50 feet long.

Here's how to use it for permanent small repairs on your canvas or vinyl tent or tarp:

- ◆ Spread out the tent or tarp on a flat surface.
- ◆ Clean the areas to be patched. Brush off loose soil or dirt, then clean the area with a solution of mild detergent


and water, rinsing with clean water.

- ◆ Allow the fabric to dry completely.
- ◆ Cut a circle from the tape slightly larger than the area you want to cover. The circle's rounded edge makes it less likely to peel off.
- ◆ Flatten the tape completely against the outside of the fabric.
- ◆ Allow the tape to set as long as you can. Overnight is best, but at least 20–30 minutes.

Holes bigger than 2 inches in diameter should be repaired by DS with machine-sewn patches.

Give It a Rest

HERE'S THE REST OF THE STORY ON REPAIR PARTS FOR YOUR ALUMINUM COTS...

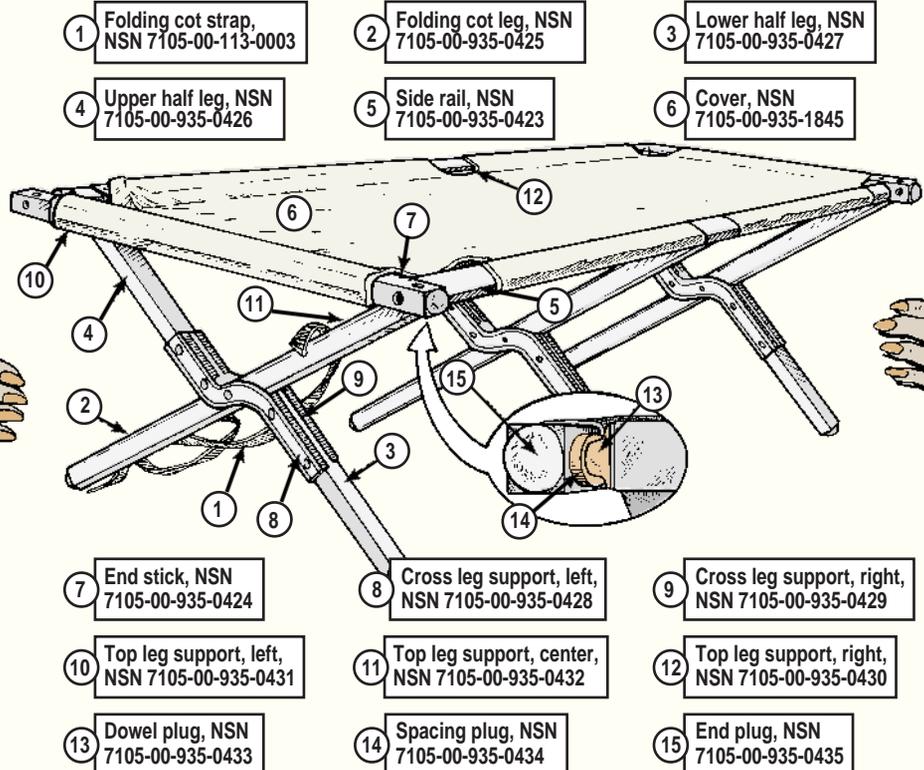

Bradley Newsletter

Need the most recent safety and maintenance info on your M2/M3-series Bradley? Then *Bradley Bits* is for you. This newsletter is published three times a year by the Bradley project manager's office. Check it out on the Internet at:

www.pmbradley.org/Log/Bits/BITS.HTM
No web access? Get a hard-copy subscription by calling DSN 786-8696/5859 or (810) 574-8696/5859. Or send an e-mail to:

kingstrk@tacom.army.mil

Bradley Ramp Pump Line

Fig 200 of TM 9-2350-284-24P-1 left out the hydraulic "S" line that goes to the M2A2/M3A2 Bradley's ramp pump. Order the metal "S" line with NSN 4710-01-439-4424. Make a note until the TM is updated.

Use Project Codes

Getting repair parts quickly is vital in keeping equipment readiness rates high. So use all the supply tools at your disposal, such as priority designators (PD), required delivery dates (RDD) and mission-oriented project codes. PDs and RDDs are decided at unit level, but project codes come down through your supply chain of command. Without project codes, your requisitions lose priority. Two of the latest project codes are ACE for the armored combat earthmover and DT6 for the HEMTT.

Water Can Cancelled

If your water can requisitions are being cancelled, check the NSN. NSN 7240-00-242-6153 is still listed on the AMDF as "Use Until Deleted" but it's no longer available. Get the green plastic water can with NSN 7240-01-365-5317. For the lusterless sand color, use NSN 7240-00-089-3827.

Bradley Wiring Harness

Need a new wiring harness for the hull navigation system in your M2A2/M3A2 or ODS Bradley? Get the 1W414 harness with NSN 6150-01-465-9532. The 1W415 harness comes with NSN 6150-01-461-1282. Make a note until the harnesses are added to TM 9-2350-284-24P-1.

SUSV Coolant Sight Glass

NSN 6680-99-361-7623 gets a new radiator coolant sight glass for your SUSV. The NSN is missing from Item 21 in Fig 35 of TM 9-2350-285-24P. Mechanics, when you install the sight glass, finger tighten the bolts and then add a half turn with a wrench. Any more than that can crack the glass.

DISTRIBUTION: To be distributed in accordance with the initial distribution number (IDN) 340312, requirements for TB 43-PS-Series.

Would You Stake Your Life *right now* on the Condition of Your Equipment?