LUBE THE BUCKET WEEKLY

The pivot pins and lift arms on your wheel loader's bucket need lots of lube to do their job.

Without lube, the bucket will begin squeaking while it's being raised or lowered. You'll know the problem's getting really bad when the bucket starts moving erratically during construction operations.
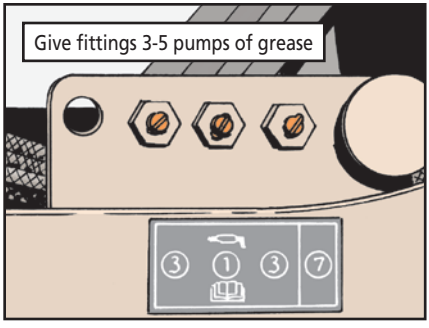
The bucket's bank of grease fittings is located on the driver's side of the vehicle at ground level. Every week, give all of the fittings three to five pumps of GAA.