


# Pipe Slice Tightens Mirror


SGT Lyle Beard of the Oregon National Guard got tired of loose side mirrors on his HMMWVs.

So, he got a piece of 1-in PVC electrical conduit and cut a couple of 1/8-in spacers from it. After removing the mirror and mounting legs, he put the spacers under the mirror mounting leg at the top and bottom.

Homemade PVC washer

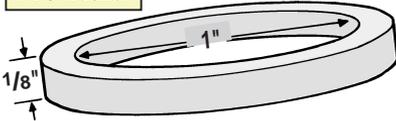

Install like so:

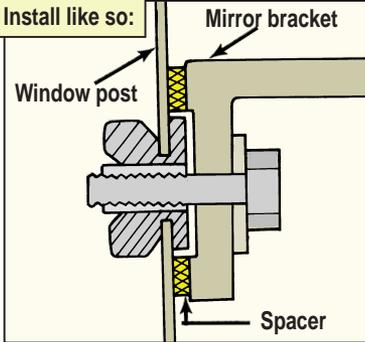

The spacers provide a bigger locking surface for the mounts, so the mirrors are held tighter.

Once Sergeant Beard retightened the screws mounting the mirror to the window post, he no longer had loose mirrors.

The PVC conduit can be painted to match your HMMWV's camouflage pattern.

PS 557

