


Make Some Better Pins

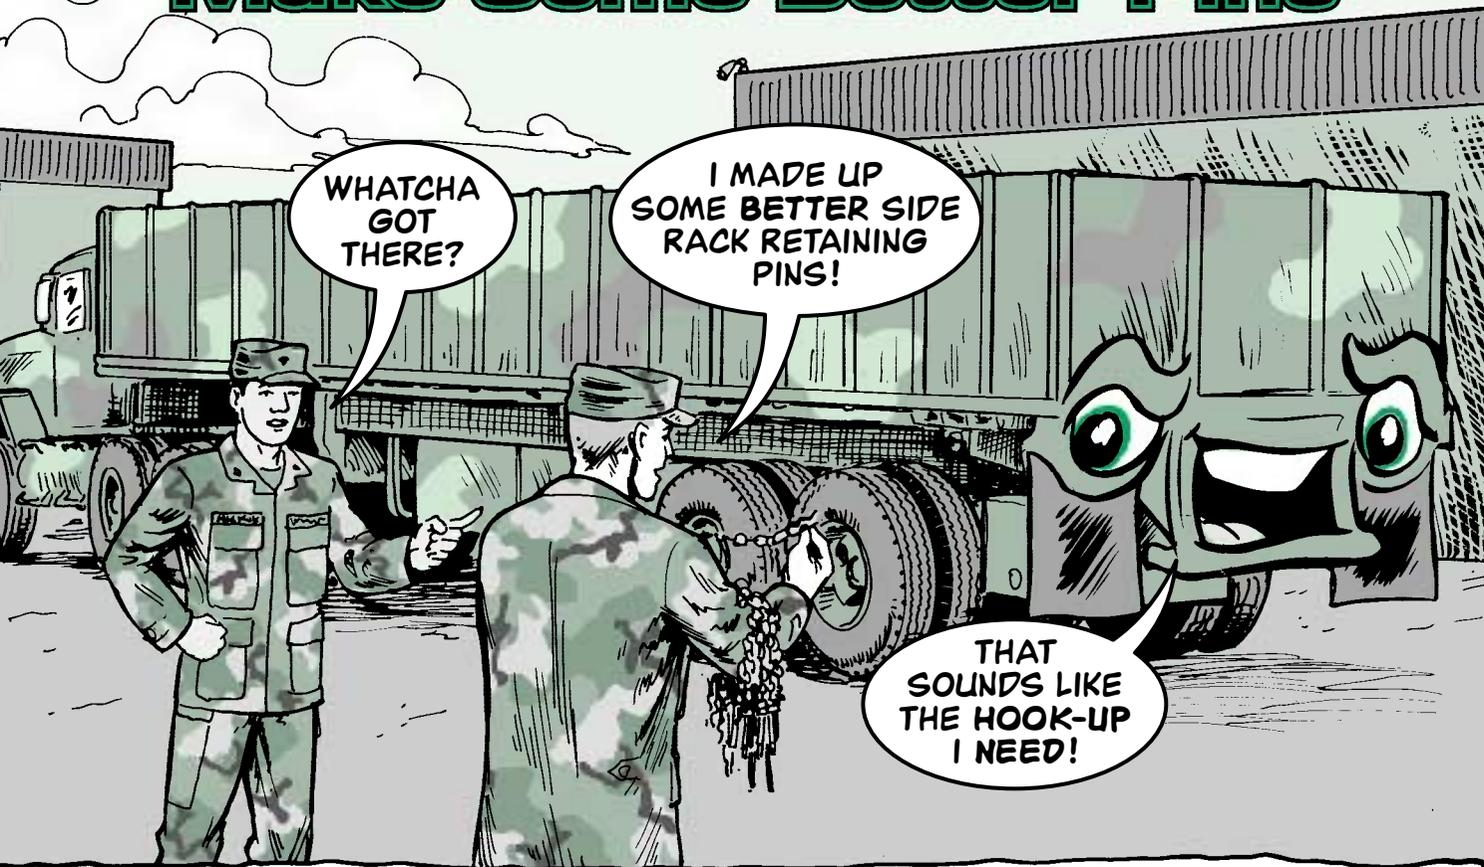

To keep side rack retaining pins on the job, and your semitrailer off deadline, make some better pins.

You need a bolt, 9 links of chain and 2 or 3 inches of safety wire for each pin. You also must drill a $\frac{3}{64}$ -in hole in the head of the bolt for the safety wire. Drill another hole in the threaded end for the lock pin.

Then attach the pins so they will not easily disappear. Either safety wire or spot weld the ninth chain link to the trailer.

The right and left rear corner stakes can't use these pins. They won't fit. Continue to use the old pins and the standard corner chains.

Here's the hardware you'll need:

