



A Little Drop'll Do It

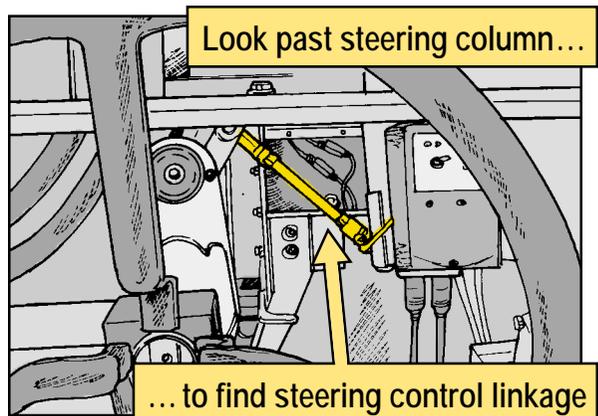

Drivers, follow the lubing instructions in your ammo carrier's -10 TM step-by-step or you're bound to forget something.

The transmission shifting control linkage and the steering control linkage are perfect examples. Both are hidden and easy to forget. The transmission shifting control linkage is behind the shifter and the steering control linkage is behind the steering wheel and column.

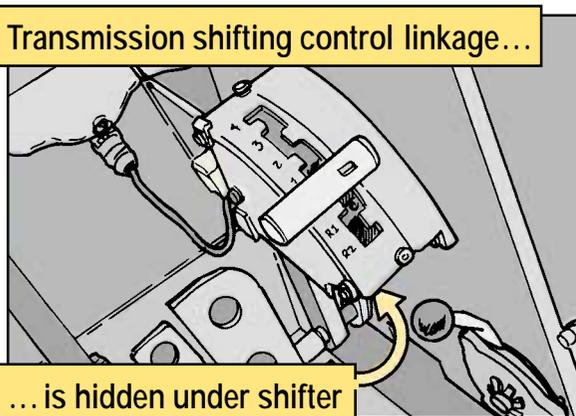

If you miss 'em too many times, the linkages will bind. That means you can't shift gears or steer.

Semiannually, put a few drops of CLP, NSN 9150-01-079-6124, on the rods and bearings of each of the linkages. Then wipe off the excess and exercise the linkages so you'll be ready to go for another 6 months.