


Turn In Gun Buffer

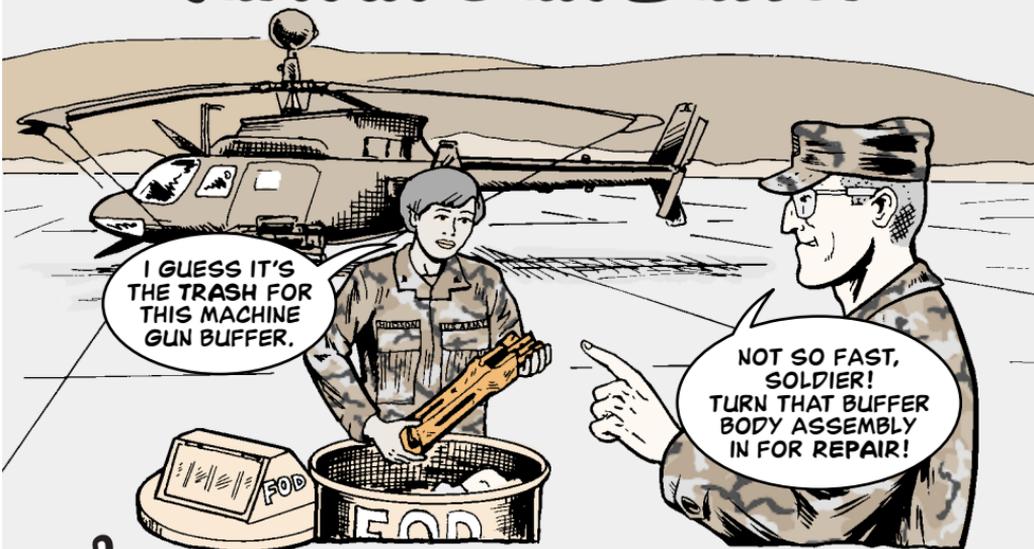

If you're throwing away bad XM296 .50-cal machine gun oil buffer body assemblies, NSN 1005-00-550-3941—**stop!** The supply system is out of those OH-58D machine gun buffers and is having problems buying new ones. So turn in those bad assemblies instead of tossing them.

A change to TM 9-1090-214-23&P will modify the buffer body's SMR code from PAODZ to PAODD which means you turn in the body for repair. The recoverability code in FED LOG-AMDF already requires turn-in.

For turn-in instructions, contact TACOM-Rock Island, at DSN 793-1935 or (309) 782-1935, or send an e-mail to:

maug@ria.army.mil

Aircraft Pubs ...

Where to Find Cold Weather Info

Aviators, your aircraft -10 TMs often refer you to FM 1-202, *Environmental Flight*, for additional info on cold weather operations.

Forget that! FM 1-201, *Fundamentals of Flight*, has replaced the old FM 1-202. The new pub has updated cold weather info and includes the info from FM 1-203, *Fundamentals of Flight*; TC 1-201, *Tactical Flight Procedures*; and TC 1-204, *Night Flight Techniques and Procedures*.