

Put Away Your Paint Brush!




Weather fades the Red Cross markings on your M113-series ambulances. Driving through brush scrapes them up. Time to paint? Maybe not.

Instead of painting, you can order a set of Red Cross decals for your vehicles. NSN 7690-01-103-6312 gets four Red Cross decals large enough for your medical carrier. Three are 36 inches square and one is 32 inches square.

Each vehicle needs five decals—one on each side, the front, top and rear.



When you drivers exit your M88A1 recovery vehicle, it's easy to snag the back of your coveralls on the engine fire suppression system safety pin. If the pin is pulled out—even slightly—it activates a sensor that keeps the engine from starting the next time.

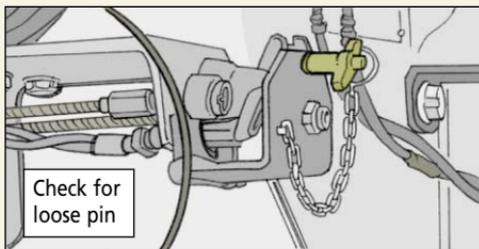

So if you feel a little tug on the back of your coveralls at the end of the next mission, reach back and make sure the safety pin is pushed in all the way.

If the engine won't start next time, you may not have noticed the snag. So always make the safety pin your first check.