


HMMWV...

INSULATION INSTALLATION

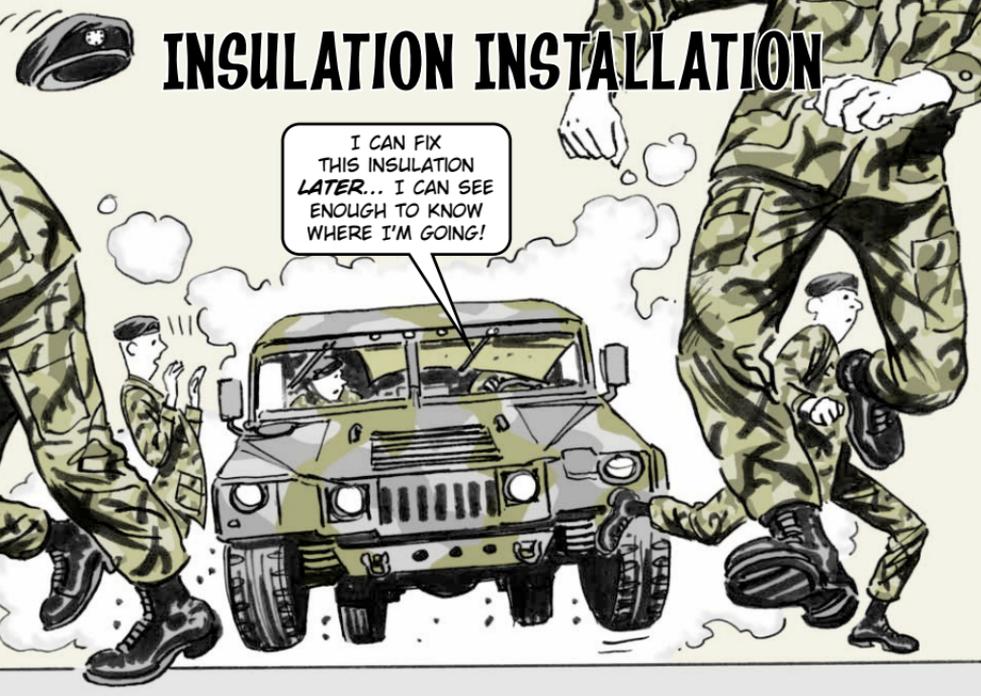

The self-sticking backing on the insulation liner in armored HMMWVs isn't always up to the job. It often doesn't stick around long, letting the liner droop.

If your hardtop HMMWV has a droopy liner, glue it back in place with adhesive primer, NSN 8040-00-826-3535.

Mix up the adhesive according to instructions and apply it to the roof with a brush. Then hold the liner against the roof for about 3 minutes while the primer dries.

Next time you have to install entire liner pieces, spread some primer on the roof before you install the liner. It'll stay put longer.

