


**OVER OR  
UNDER?**


**IT  
MATTERS!**

**M**echanics, when reinstalling the powerpack on an MLRS, you also have to reattach the steering cable. The question is, do you route the cable over or under the brake rod?

If the cable is routed over the brake rod, you've created a serious problem. When the cab is lowered, the steering cable gets pinched between the brake rod and the underside of the cab. That can result in a loss of steering.

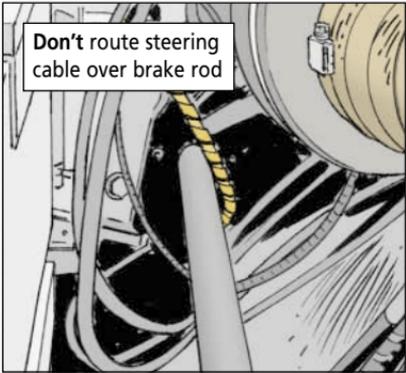

**Don't route steering  
cable over brake rod**

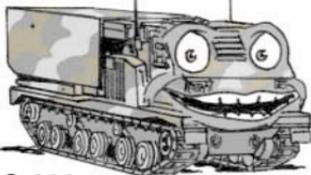

PS 609



SO DO THE MLRS—  
AND ITS CREW—A FAVOR.  
MAKE SURE YOU ROUTE  
THE STEERING CABLE  
**UNDER** THE BRAKE ROD  
WHEN REINSTALLING THE  
POWERPACK.

AUG 03