



LUBE FOR SMOOTH SAMPLING


FOX CREWMEN, HERE ARE A FEW LUBING TIPS TO MAKE SAMPLING SMOOTHER AND SAFER...

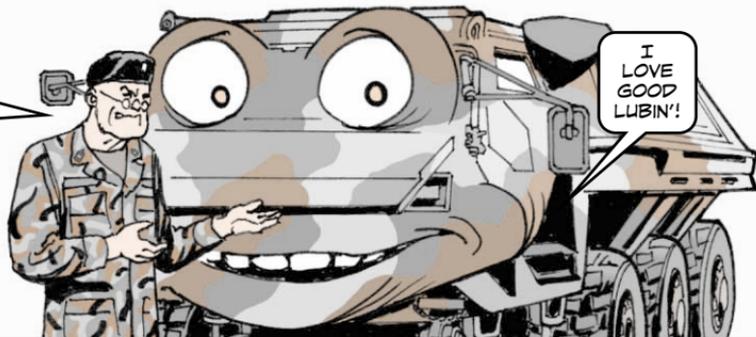

If the door for the sampling tray box sticks, you will have trouble taking samples. Monthly, give the bottom of the tray and the box door's hinges a light coat of WTR, NSN 9150-00-145-0268, so the tray keeps moving smoothly. Be careful not to get WTR on the tools, though. That will contaminate them. See Card 16 in LO 9-6665-377-12 for more info.

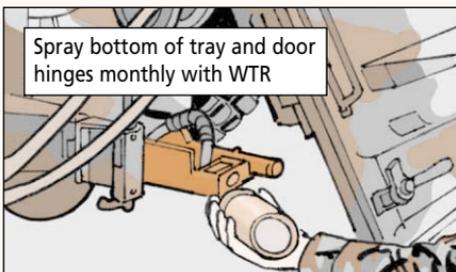

When you grease the ballistic shields with WTR, make sure no one is near the controls for the shields. The shields come up with great force and you could suddenly find yourself fingerless. See LO Card 26.

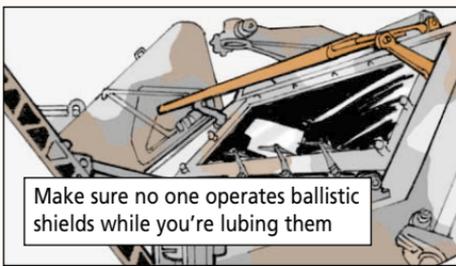

When you open the swim vanes for operation or lubing, stand at least 10 feet back. Otherwise, you risk being conked on the head. See Card 35.



If the arm of the swim vanes sticks when you try to close the vanes, tap on the arm joint with a mallet. That usually unsticks it. Tap, though, don't bang. Banging on the arm will damage it.