


THE DOWNFALL OF QUICK-START MCGRAW

A COLD MORNING
IN THE DESERT...

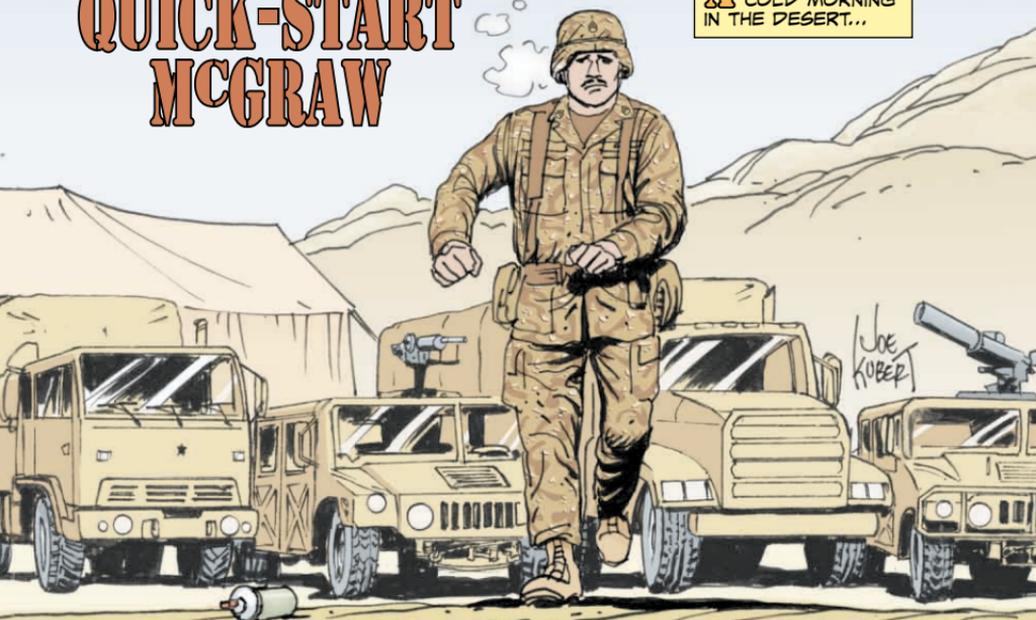


PS 613



27



DEC 03

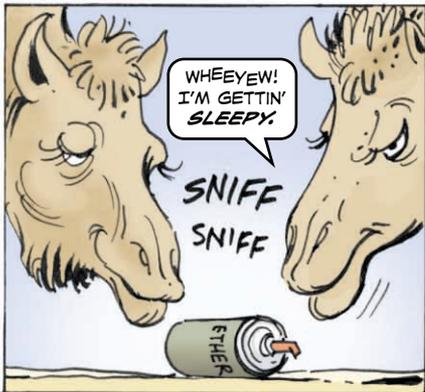




HAVE NO FEAR...
**QUICK-START
MCGRAW
IS HERE!**




JUST A QUICK
SQUIRT
OF THIS STUFF
WILL HAVE THIS
EXCAVATOR UP
AND RUNNING!

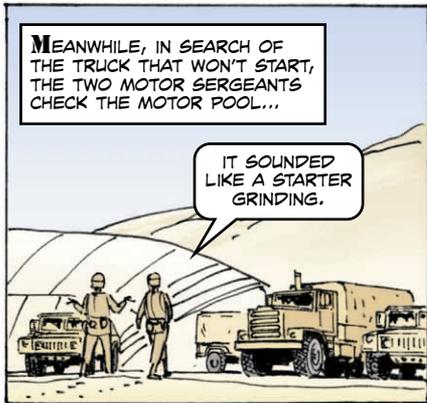

MEANWHILE, IN SEARCH
OF THE TRUCK THAT WON'T START,
THE TWO MOTOR SERGEANTS
CHECK THE MOTOR POOL...

IT SOUNDED
LIKE A STARTER
GRINDING.

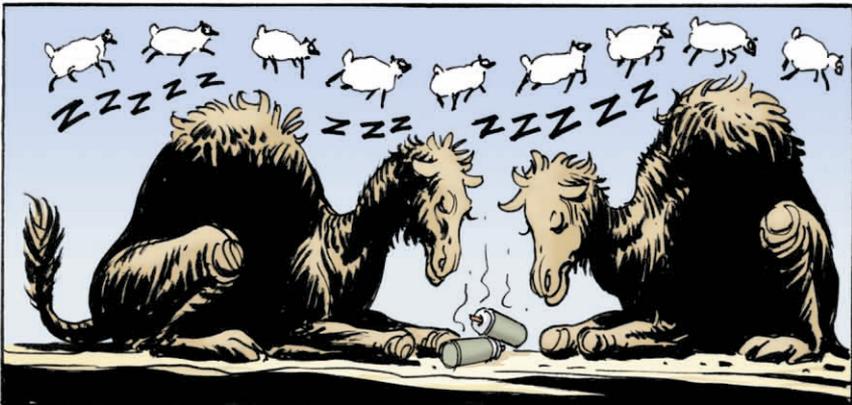

THERE GOES
MCGRAW
AGAIN!

WHAT'S
HE DOING
NOW?

HAVE NO FEAR...
**QUICK-START
MCGRAW
IS HERE!**




WON'T START?
NO PROBLEM!

I'LL JUST
OPEN THE
AIR INTAKE.




THERE'S THE
PROBLEM!

ETHER!!

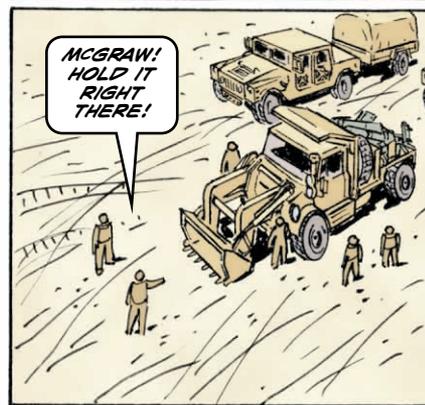

MCGRAW!
HOLD IT
RIGHT
THERE!

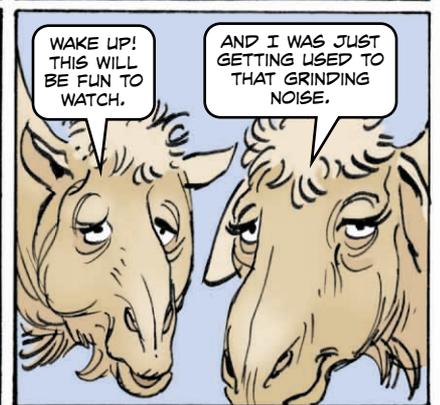

WAKE UP!
THIS WILL
BE FUN TO
WATCH.

AND I WAS JUST
GETTING USED TO
THAT GRINDING
NOISE.



DON'T USE THAT ETHER!

WHAT'S UP, SERGEANT?




NOW I UNDERSTAND THOSE REPAIR BILLS. IT ALL ADDS UP.

ADDS UP TO WHAT?



THAT! RIGHT THERE!

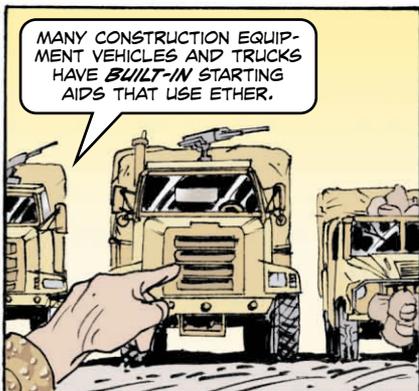

MANY CONSTRUCTION EQUIPMENT VEHICLES AND TRUCKS HAVE BUILT-IN STARTING AIDS THAT USE ETHER.




OH, NO! WE'RE GONNA LOSE OUR ETHER!

HOW WILL WE EVER GET 'OVER THE HUMP'?




BUT, WHAT IF MY EQUIPMENT DOESN'T HAVE A BUILT-IN STARTING AID?

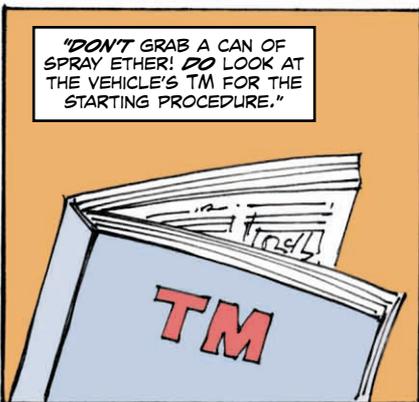

"DON'T GRAB A CAN OF SPRAY ETHER! DO LOOK AT THE VEHICLE'S TM FOR THE STARTING PROCEDURE."




YOU'LL FIND THAT THIS EXCAVATOR HAS A BUILT-IN STARTING AID.

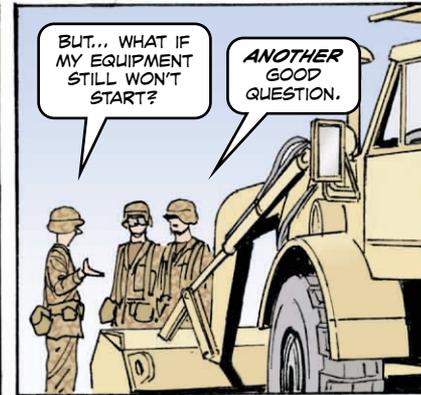


BUT... WHAT IF MY EQUIPMENT STILL WON'T START?

ANOTHER GOOD QUESTION.

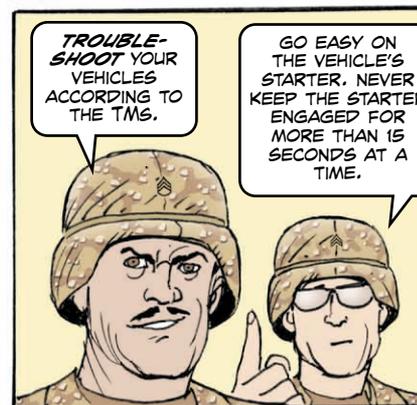

TROUBLE-SHOOT YOUR VEHICLES ACCORDING TO THE TMS.

GO EASY ON THE VEHICLE'S STARTER. NEVER KEEP THE STARTER ENGAGED FOR MORE THAN 15 SECONDS AT A TIME.

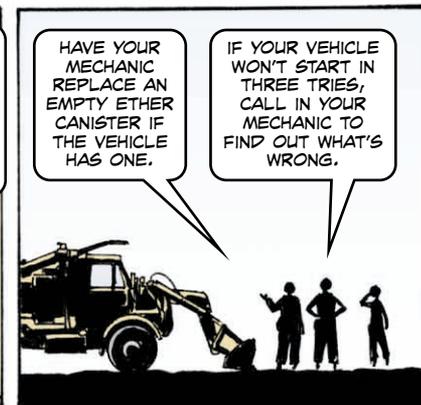

HAVE YOUR MECHANIC REPLACE AN EMPTY ETHER CANISTER IF THE VEHICLE HAS ONE.

IF YOUR VEHICLE WON'T START IN THREE TRIES, CALL IN YOUR MECHANIC TO FIND OUT WHAT'S WRONG.

