


Don't Screw Up Lens Carrier

NBC NCOs try to install the carrier without first loosening the set screws so they don't stick out. Then when the carrier is slid into place, the screws cut a divot in the black plastic mount and eventually the mount breaks.

To install the lens carrier, first loosen the set screws until they're flush with the carrier mount block. Align the mount block with the groove of the mount frame and slide the carrier into place.

After adjusting the carrier up or down to the proper position, fold the lens carrier to one side and tighten the set screw just until it makes contact with the mount frame. Don't tighten the screw any more or the lens carrier could pop out during use. Fold the lens carrier to the other side and tighten the other set screw. You're done.

M40/M42-SERIES MASK
PRESCRIPTION
LENS CARRIER
MOUNTS ARE
BEING SCREWED
UP BECAUSE NBC
NCOs FORGET
THE SETSCREWS.

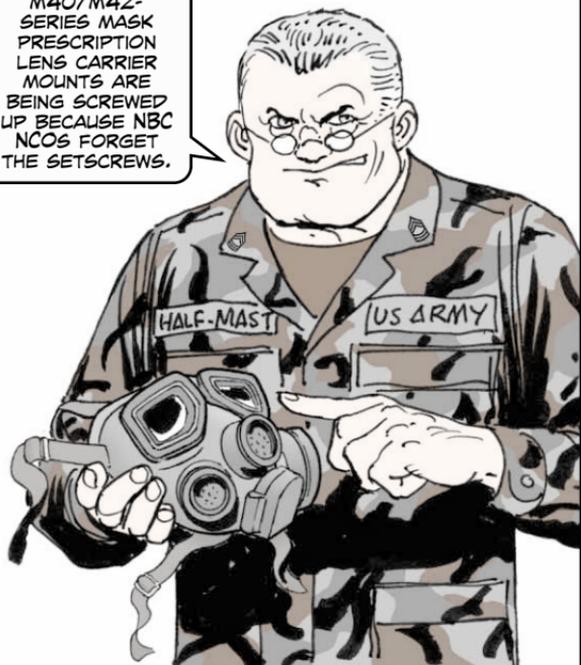

Loosen set screws until they're flush with mount block or...



...screws will cut a divot in plastic mount and mount will break

