


# THOUGHTS ON COTS

WHO ORDERED THE COUNTING SHEEP?




Want to get a good night's sleep? Before you try counting sheep, try performing a little PM on your aluminum cot, NSN 7105-00-935-0422. Here are some trouble spots:


- **Rivets** sometime break or get lost. Unfortunately you won't find replacement rivets for your cot. But you can use these items instead:
  - Machine screw, NSN 5305-00-050- 9236
  - Washer, NSN 5310-00-933-8120
  - Nut, NSN 5310-00-934-9760

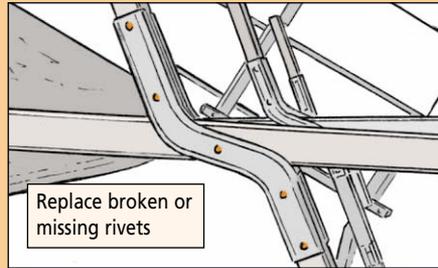

- If the **rivet holding the tiedown strap** gets damaged or lost, replace it with
  - Self-tapping screw, NSN 5305-00-432-4251
  - Washer NSN 5310-00-809-3078

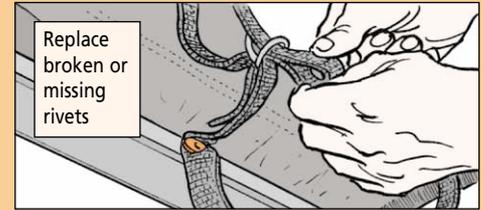

- **Cot covers** can stretch, sink and sag with use. To tighten the cover, insert spacing plugs, NSN 7105-00-935-0434, between the end stick and frame. New covers may be tight and not need plugs, so store unused plugs in an end stick until needed.

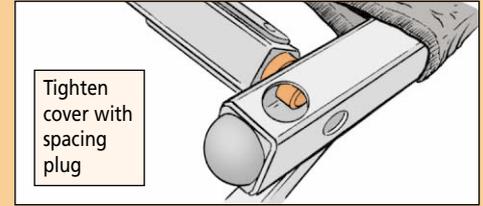

- Sometimes the **buckle on the tiedown strap** gets bent. Then when you slip the strap through the buckle, the tab gets caught and tears off. Straighten the buckle with a screwdriver so the tab will slide through easily.



- **Things bugging you?** Use NSN 7210-00-267-5641 to get an insect bar frame made of wood for your cot. Get the insect netting with NSN 7210-00-266-9736.

HERE ARE THE REPLACEMENT PARTS FOR YOUR ALUMINUM COT...



Item	Description	NSN 7105-00-
1	Folding cot strap	113-0003
2	Leg, folding cot	935-0425
3	Lower half-leg	935-0427
4	Upper half-leg	935-0426
5	Side rail	935-0423
6	Cover	935-1845
7	End stick	935-0424
8	Cross leg support (left)	935-0428
9	Cross leg support (right)	935-0429
10	Top leg support (left)	935-0431
11	Top leg support (center)	935-0432
12	Top leg support (right)	935-0430
13	Dowel plug	935-0433
14	Spacing plug	935-0434
15	End plug	935-0435

