

Don't Forget the Fire Wire

BEFORE YOU PULL THE ENGINE DECK PLATES TO REMOVE THE M992A2'S POWERPACK, ASK YOURSELF ONE QUESTION, MECHANICS...

... "DID YOU REMEMBER TO DISCONNECT THE FIRE WIRES FIRST?"



"THE FIRE, OR THERMAL, WIRES ARE CONNECTED TO THE BOTTOM OF THOSE PLATES AND WILL *SNAP OR RIP LOOSE* IF YOU FORGET TO DISCONNECT THEM."



LOOK FOR A REMINDER DECAL UNDER THE AIR INTAKE GRILLE.

IF THE DECAL IS *MISSING*, REPLACE IT WITH NSN 7690-01-329-4634.

"A *NEW* FIRE WIRE WILL COST YOU MORE THAN \$1,300, SO IT'S AN *EXPENSIVE* THING TO FORGET."



FOLLOW THE DECAL INSTRUCTIONS TO AVOID DAMAGING THE FIRE WIRES.

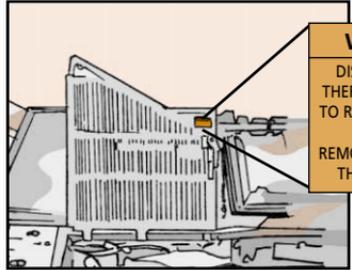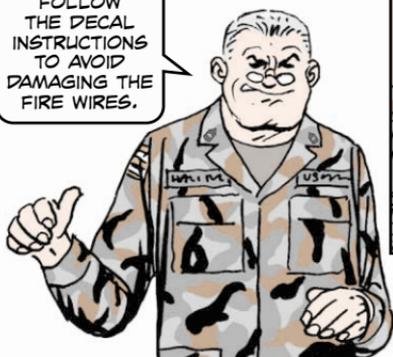

WARNING
DISCONNECT AFES THERMAL WIRE PRIOR TO REMOVING GRILLES AND REMOVING/INSTALLING THE POWER PACK