

I'M *NOT SURE* WE EVER HAD THAT MWO ON THE COCKING LEVER DONE FOR YOU.

WONDER *HOW* I CAN TELL?




LOOK FOR THE DOVETAIL BRACKET.

IT'S HERE ON MY *RIGHT SIDE.*


Check for MWO NOW

All MK19 machine guns should have had MWO 9-1010-230-50-1 applied to them by now. The MWO changed the MK19's cocking lever from a one-piece to two-piece design that will improve the gun's safety and reliability and eliminate out-of-battery firing.

But some MK19s were missed—and that's why TACOM needs your help, armorers. Check your MK19s now to see if they've gotten the MWO. If they've been modified, they have a dovetail bracket mounted on the right side of the receiver and an "-M" stamped on the left side immediately following the weapon's part number.

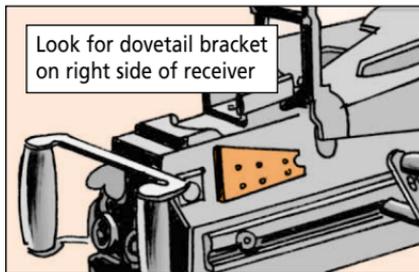

Also check the arms room for a feed slide adjustment tool that arrived in a square white box with a label that reads "NSN 1005-01-467-9435," the tool's NSN. The tool should have come with the MWO. You'll need the tool after the weapon has been modified. Instructions for using the tool come with it. Also see WP 0073 00-1 in TM 9-1010-230-23&P.

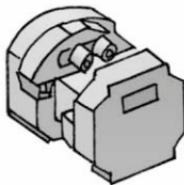

Check arms room for feed slide adjustment tool

If your MK19s haven't been modified or you're missing the tool, TACOM wants to know about it. Contact Jeannette Morpewh at DSN 793-0609/(309) 782-0609 or email:

morpewhj@ria.army.mil

or Kathi Johnson at DSN 793-0684/(309) 782-0684 or email:

johnsonk4@ria.army.mil

or Pat Hall at DSN 793-1903/(309) 782-1903 or email:

hallp@ria.army.mil