



Containerized Shower...

A WARM SHOWER IS JUST DUCKY

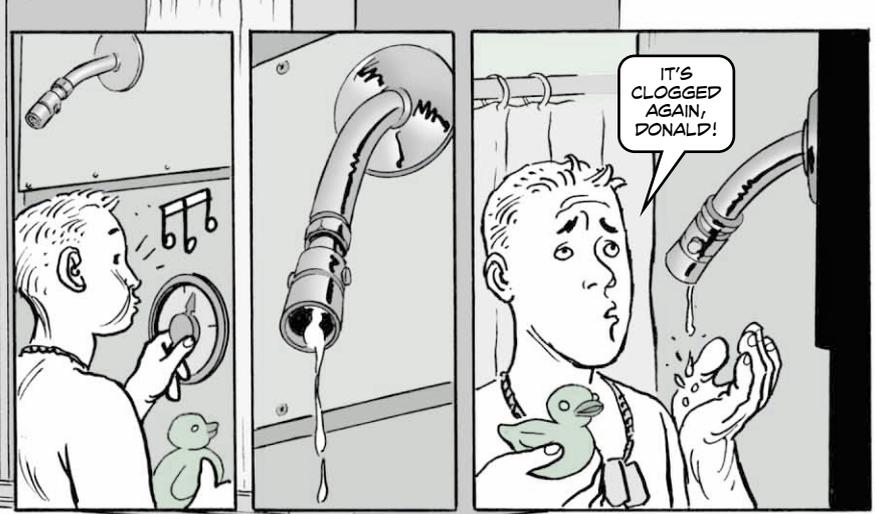

CONTAINERIZED SHOWERS GET PLENTY OF USE.

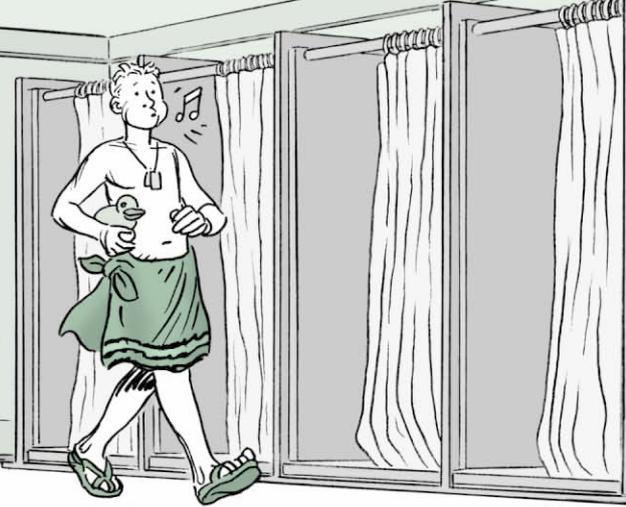


BEFORE LONG, LIME AND CRUD BUILD UP IN THE SHOWER HEADS. THEN THE FLOW OF WATER IS REDUCED TO A TRICKLE.

DO SOMETHING SIMPLE IN THE NAME OF GOOD HYGIENE: CLEAN OUT THE SHOWER HEAD ONCE IN A WHILE TO KEEP THE WATER FLOWING.




YOU'LL FEEL CLEANER, AND YOUR TENT MATES WILL THANK YOU. HERE'S HOW...

- Unscrew the nozzle (the lower part of the shower head) with your fingers.

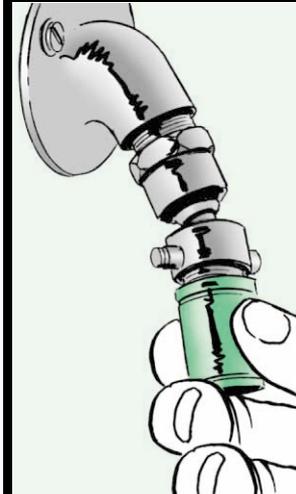

- Look into the nozzle to see if the screen inside is clogged.
- If it's clogged, blow into the screen to clear it of debris.

- If that doesn't clear it, pop out the o-ring and screen. Rinse the screen until it's clean.
- Then put the screen and o-ring back into the nozzle.
- When you screw the nozzle back on, screw it on only hand tight. If you screw the nozzle on too tight, you'll flatten and deform the o-ring. That restricts water flow.

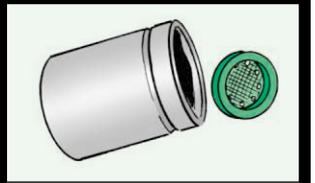

If you ever have to replace the entire shower head, order one with NSN 4510-01-316-7423. You'll need an 8-in adjustable wrench for the job. Wrap anti-seize tape, NSN 8030-00-889-3534, once around the threads on the flange before you screw on the shower head. That'll make the shower head a little easier to remove next time around.

